Part No. 511408

TRIUMPH VITESSE

SALOON and CONVERTIBLE

Commission Numbers Vitesse Saloon, HB1DL and future. Vitesse Convertible, HB1CV and future.



SPARE PARTS CATALOGUE


SECOND EDITION

STANDARD-TRIUMPH SALES LIMITED

A MEMBER OF THE LEYLAND MOTOR CORPORATION

SPARES DIVISION · FLETCHAMSTEAD HIGHWAY
COVENTRY ENGLAND

SECTION	Page	Gr	oup
ALPHABETICAL >	XXX		1
NUMERICAL X	(XXV		2
ENGINE	-	18	3
CLUTCH		19	4
GEARBOX	20-	23	5
GEAR SHIFT MECHANISM		24	6
ENGINE MOUNT	ING	25	7
CHASSIS FRAME		26	8
FRONT SUSPENSION	27-	29	9
ANTI-ROLL BAR	-	30	10
REAR AXLE	31-	32	11
REAR SUSPENSIO	N	33	12
PROPELLOR SHALE ROAD WHEEL	FT .S	34	13
STEERING	35-	36	14
ACCELERATION CONTROLS	37-	39	15
CLUTCH AND BRAKE PEDALS		40	16
MASTER CYLINDE		41	17
HYDRAULIC PIPE	s	42	18
HANDBRAKE		43	19
BRAKES	44-	45	20
RADIATOR	46-	47	21
EXHAUST SYSTE	м	48	22
PETROL SYSTEM		49	23
SERVICE KIT	-	50	24
ELECTRICAL EQUIPMENT	51-	69	25
BODY & FITTING	S 70-1	15	26
MISCELLANEOUS BODY FITTINGS		16	27
ACCESSORIES	117-1	19	28
OVERDRIVE	120-1	24	29
			1

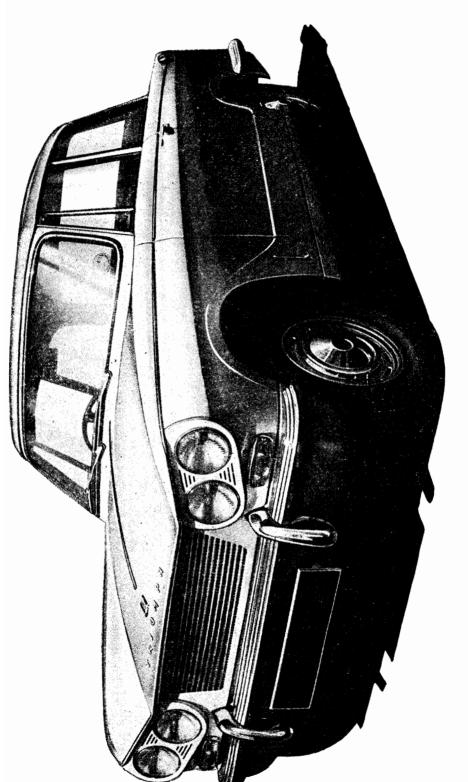

TRIUMPH "VITESSE"



FOREWORD

This catalogue has been compiled to assist all purchasers requiring Spare Parts for the Triumph Vitesse Saloon and Convertible.

You are requested to note carefully the method and procedure for ordering parts which is contained in the introductory notes.

The Sale of Spare Parts is always made in accordance with the Company's current conditions of sale.

STANDARD-TRIUMPH SALES LTD.

SPARES DIVISION:

SERVICE DIVISION:

FLETCHAMSTEAD HIGHWAY, COVENTRY BIRMINGHAM ROAD, ALLESLEY, COVENTRY

Telegrams: STANPART, COVENTRY

Telegrams: STANSER, COVENTRY

Telephone: 75511 (17 lines)

Telephone: 22115 (5 lines)

INSTRUCTIONS FOR ORDERING REPLACEMENT PARTS

To obviate any delays through mis-interpretation of orders it is important that you make careful note of the following instructions:—

DESCRIPTION

The part required should be referred to in the catalogue and the part number quoted with the technical description. If any doubt exists as to the name and number of the part, a sketch or the old part should be sent to assist in correct interpretation. When trim material is ordered, a specimen of the material required should be sent whenever possible.

INTERPRETATION OF CATALOGUE

Details forming part of an assembly are indicated by insetting the alignment of the description, as shown in the following example.

EXHAUST MANIFOLD ASSEMBLY

Stud, inlet manifold attachment,
Stud, exhaust pipe attachment,
Pin, spring anchor,
Peg, spring stop,
Spring (bi-metal), flap valve spindle,
Stop, spring,
Pin, split, retaining spring and stop,
Weight, balance,
Pin, mills, balance weight attachment.

Thus, the four items immediately following the assembly form part of the assembly, whilst the remaining five are individual items and are subject to separate order.

PATTERNS

When parts are sent as patterns it is important that they should be carefully and individually labelled indicating the address of the sender together with advice by separate post giving any reference or order number to which they refer. All patterns must be sent Carriage Paid to the Spares Division, Fletchamstead Highway, Coventry, and unless special instructions are given on the order they will not be returned.

RIGHT AND LEFT HAND PARTS

Where Right Hand and Left Hand Parts are required it is essential that this is clearly stated on the order.

QUANTITIES

Do not designate the quantities by sets but state specifically the number of parts that are required.

ORDERS

Orders for replacement parts should be submitted to the nearest Standard-Triumph Distributor or Dealer.

SPECIAL NOTE FOR DISTRIBUTORS

It is helpful to ensure that:-

- (a) The address is clearly stated and the order submitted on the approved Order Form.
- (b) Parts required are in numerical sequence.
- (c) Where possible, the order should be typed or written in ink.

NOTICE OF MODIFICATION

When modifications relevant to these models are introduced Bulletins will be issued to Standard-Triumph Distributors and Dealers to ensure that the catalogue may be amended in accordance with the latest information.

CHASSIS NUMBERS

Where there is doubt about the correct description for a spare part, always quote the chassis number with prefix or suffix letters (if any) of the vehicle concerned. This will save delay and ensure speedier despatch. The Chassis number may be found stamped on a brass plate, on the scuttle under the bonnet.

CAR REPAIRS Note to Customers


A Service School is established where the representatives from our Distributors and Dealers are trained in the upkeep and maintenance of Standard-Triumph Cars. Customers should therefore avail themselves of the service which our agents are able to give in all matters relative to service and maintenance.

-CAUTION -

WHEN REPLACEMENTS ARE MADE IT IS OF THE UTMOST IMPORTANCE THAT PARTS OF GENUINE STANDARD MOTOR CO. LTD. MANUFACTURE SHOULD BE USED. THIS ENSURES THAT THE SERVICE GIVEN BY THE ORIGINAL PART WILL BE MAINTAINED BY THE REPLACEMENT. REMEMBER THE GENUINE PART CARRIES WITH IT A GUARANTEE.


THE EXPERIENCE GAINED BY THE MANUFACTURERS ENSURES THAT THE HIGHEST QUALITY MATERIAL IS JUSED AND THE STRICTEST ACCURACY MAINTAINED IN MANUFACTURE.

UNIT SERIAL NUMBERS

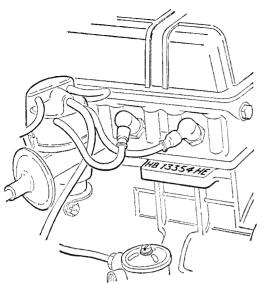


ENGINE SERIAL NUMBER

Commencing at HB.1.HE. for high compression engines, and HB.1.LE. for low compression engines, this number is stamped on a flange on the left-hand side of the cylinder block.

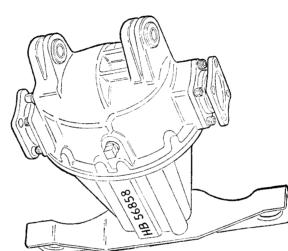

GEARBOX SERIAL NUMBER

Commencing at HB.1.GB., this number is stamped on the right-hand top face of the gearbox casing.

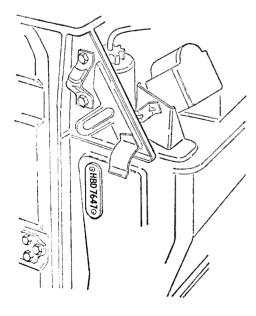


BODY SERIAL NUMBER

Commencing at HBD.1 for Saloon bodies, HBC.1 for Convertible bodies, this number is stamped on a plate attached to the R.H. side of the Scuttle.

REAR AXLE SERIAL NUMBER

Commencing at HB.1.RA., this number is stamped on the bottom flange of the axle casing.

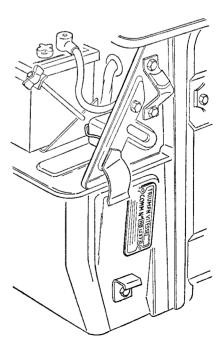


COMMISSION NUMBER

This number is stamped on a plate attached to the L.H. side of the Scuttle. Commission Number details are listed on the following page.

RIGHT HAND SIDE OR OFF SIDE

RIGHT HAND STEERING

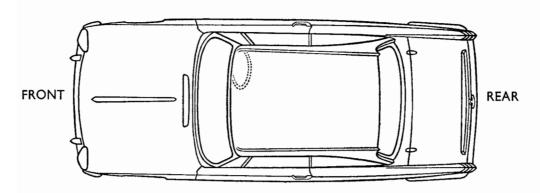


LEFT HAND SIDE OR NEAR SIDE

COMMISSION NUMBERS AND SUFFIX

Vitesse Saloon	Right Hand Steering	•••	НВ	DL
Vitesse Saloon	Left Hand Steering		НВ	LDL
Vitesse Saloon with Overdrive	Right Hand Steering		НВ	DLO
Vitesse Saloon with Overdrive	Left Hand Steering		НВ	LDLO
Vitesse Convertible	Right Hand Steering		НВ	CV
Vitesse Convertible	Left Hand Steering		НВ	LCV
Vitesse Convertible with Overdrive	Right Hand Steering		НВ	CVO
Vitesse Convertible with Overdrive	Left Hand Steering		НВ	LCVO

RIGHT HAND SIDE OR NEAR SIDE

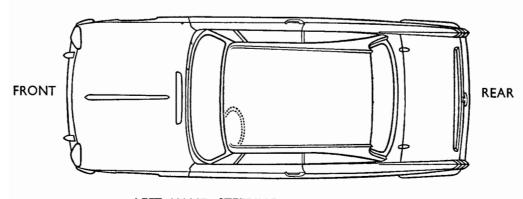

LEFT HAND STEERING

LEFT HAND SIDE OR OFF SIDE



AVANT—PROPOS

Ce catalogue a été etabli pour faciliter la tâche des acheteurs ayant besoin de Pièces Détachées pour le Saloon et le Cabriolet décapotable Triumph Vitesse.

Nous vous prions de prendre bonne note de l'introduction qui renferme la méthode et la marche à suivre pour la commande des pièces.

La vente des pièces de rechange est effectuée conformément aux conditions de vente en cours de la Société.

STANDARD-TRIUMPH SALES LTD.

DIVISION DE PIECES DE RECHANGE:

FLETCHAMSTEAD HIGHWAY, COVENTRY

Adresse télégraphique :

STANPART, COVENTRY

Téléphone: 75511 (17 lignes)

DIVISION POUR LE SERVICE:

BIRMINGHAM ROAD, ALLESLEY, COVENTRY

Adresse télégraphique : STANSER, COVENTRY

Téléphone: 22115 (5 lignes)

INSTRUCTIONS POUR LA COMMANDE DES PIECES DE RECHANGE

Afin d'éviter tout retard dû à la mauvaise interprétation des commandes, il est important de noter soigneusement les instructions suivantes :

DESCRIPTION

La pièce demandée devra porter la mention du catalogue et le numéro de pièce sera cité avec la description technique. En cas de doute concernant la désignation et le numéro de pièce, on enverra un dessin ou l'ancienne pièce pour faciliter l'identification. Lorsqu'on commande du tissu pour garnitures, on enverra, si possible, un échantillon du tissu demandé.

INTERPRETATION DU CATALOGUE

Les pièces faisant partie d'un ensemble sont indiquées en les plaçant par ordre de description, comme indiqué dans l'exemple ci-dessous.

ENSEMBLE TUBULURE D'ECHAPPEMENT

Goujon, monture de la tubulure d'admission,
Goujon, monture du tuyau d'échappement,
Goupille, ressort d'ancrage,
Cheville, ressort d'arrêt.
Ressort (bi-métal), tige de soupape à clapet,
Arrêt, ressort,
Goupille, fendue, maintenant le ressort et l'arrêt,
Poids, équilibrage,
Goupille, mills, monture de contre-poids.

Ainsi, les quatre articles venant immédiatement après l'ensemble font partie de ce dernier, alors que les cinq autres sont individuels et sujets à une commande séparée.

MODELES

Lorsqu'on envoie des pièces comme modèles, il est important de les étiqueter soigneusement et séparément en indiquant l'adresse de l'expéditeur, et d'envoyer sous pli séparé les références ou le numéro de pièce qui s'y rapportent. Tous les modèles doivent être envoyés port payé à la Division des Pièces de Rechange, Fletchamstead Highway, Coventry, et ils ne seront pas retournés, sauf si la commande porte des instructions spéciales.

PIECES COTE DROIT ET PIECES COTE GAUCHE

Lorsqu'on demande des pièces côté droit ou des pièces côté gauche, il est indispensable de la spécifier clairement sur la commande.

QUANTITES

Ne pas désigner les quantités par jeu mais mentionner avec précision le nombre de pièces désirées.

COMMANDES

Les commandes de pièces de rechange seront soumises au Concessionnaire ou Agent Standard-Triumph le plus proche.

NOTE SPECIALE POUR LES AGENTS

il est utile de s'assurer que:

- (a) l'adresse soit indiquée lisiblement et que la commande soit libellée sur la formule de commande agréée.
- (b) les pièces demandées soient dans l'ordre numérique.
- (c) la commande soit, si possible, dactylographiée ou écrite à l'encre.

AVIS DE MODIFICATION

Lorsque ces modèles font l'objet de modifications, des Bulletins seront envoyés aux Concessionnaires et Agents Standard-Triumph afin que le catalogue puisse être modifié conformément aux dernières informations.

NUMERO DE CHASSIS

En cas de doute concernant la description correcte d'une pièce de rechange, toujours citer le numéro de châssis de la voiture en question avec, le cas échéant, le préfixe ou suffixe. Ceci évitera tout retard et assurera une expédition plus rapide. On trouvera le numéro de châssis marqué sur une plaque en laiton située sur le tablier, sous le capot.

REPARATIONS DES VOITURES (Note aux clients)


Une Ecole pour le Service a été ouverte aux représentants de nos Concessionnaires et Agents qui y reçoivent une formation spéciale pour les réparations et l'entretien des voitures Standard-Triumph. Par conséquent, les clients devraient profiter des facilités que nos Agents sont en mesure de leur fournir pour les questions se rapportant au service et à l'entretien.

-ATTENTION-

POUR TOUS REMPLACEMENTS DES PIÈCES, IL EST DE LA PLUS HAUTE IMPORTANCE DE N'EMPLOYER QUE DES PIÈCES STANDARD MOTOR CO. LTD. D'ORIGINE. CECI GARANTIRA QUE LA PIÈCE DE RECHANGE DONNERA LE MÊME SERVICE QUE LA PIÈCE ORIGINALE. NE PAS OUBLIER QUE LES PIÈCES STANDARD AUTHENTIQUES COMPORTENT UNE GARANTIE.


L'EXPÉRIENCE ACQUISE PAR LES FABRICANTS GARANTIT L'EMPLOI DE MATÉRIAUX DE LA PLUS HAUTE QUALITÉ, ET UNE FABRICATION DE LA PLUS HAUTE PRÉCISION.

NUMÉROS DE SÉRIE

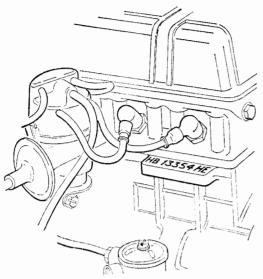


NUMÉRO DE SÉRIE DU MOTEUR

Commençant à HB.1.HE. pour les moteurs avec taux de compression élevé, et à HB.1.LE. pour les moteurs avec taux de compression bas, ce numéro est poinçonné sur une bride sur le côté gauche du bloc moteur.

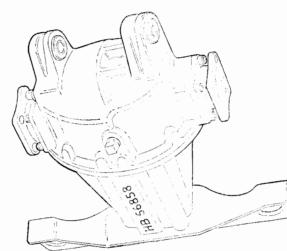

NUMÉRO DE SÉRIE DE BOITE DE VITESSES

Commençant à HB.1.HB., ce numéro est poinçonné sur la face supérieure du côté droit du carter de la boîte de vitesses.

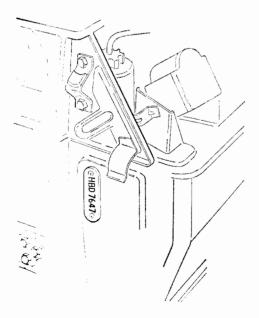


NUMÉRO DE SÉRIE DE CARROSSERIE

Commençant à HBD.1 pour les carrosseries de Saloon, HBC.1 pour les carrosseries de cabriolet décapotable, ce numéro est poinçonné sur une plaque fixée sur le côté droit du tablier.

NUMÉRO DE SÉRIE DU PONT ARRIÈRE Commençant à HB.1.RA, ce

commençant a HB.1.KA, ce numéro est poinçonné sur la bride inférieure du carter du pont arrière.

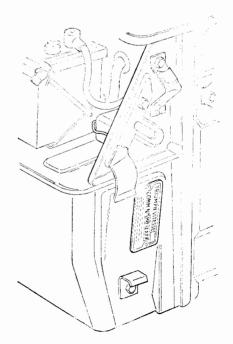


NUMÉRO D'IDENTIFICATION

Ce numéro est poinçonné sur une plaque fixée au côté gauche du tablier. Les détails du Numéro d'Identification sont listés à la page suivante.

COTE DROIT

CONDUITE A DROITE

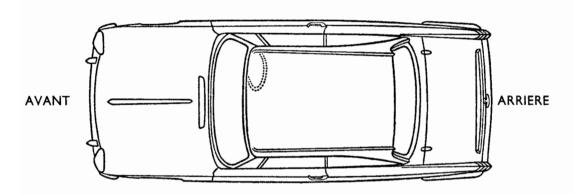


COTE GAUCHE

NUMEROS DE COMMANDE ET SUFFIXES

Saloon Vitesse	•••	•••	Conduite à droite	•••	НВ	DL
Saloon Vitesse			Conduite à gauche		НВ	LDL
Saloon Vitesse avec	Overd	rive	Conduite à droite	•••	НВ	DLO
Saloon Vitesse avec	Overd	rive	Conduite à gauche	•••	НВ	LDLO
Cabriolet Vitesse	•••	•••	Conduite à droite	•••	НВ	CV
Cabriolet Vitesse	•••	•••	Conduite à gauche		НВ	LCV
Cabriolet Vitesse av	ec Ove	rdrive	Conduite à droite		НВ	CVO
Cabriolet Vitesse av	ec Ove	rdrive	Conduite à gauche		НВ	LCVO

COTE DROIT

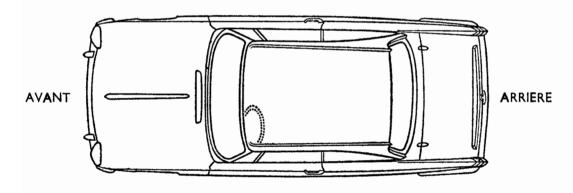

CONDUITE A GAUCHE

COTE GAUCHE



INTRODUCCION

Este catálogo ha sido preparado para ayudar a todos los compradores que necesiten Piezas de Repuesto para el Sedán y el Convertible Triumph Vitesse.

Sírvanse poner especial atención en el método y procedimiento de pedido de piezas que se describen en las notas de introducción.

La venta de Piezas de Repuesto se efectúa siempre de acuerdo con las condiciones de venta vigentes en la Compañia.

STANDARD-TRIUMPH SALES LTD.

DIVISION DE PIEZAS DE REPUESTO:

FLETCHAMSTEAD HIGHWAY, COVENTRY

Telegramas: STANPART, COVENTRY

Teléfono: 75511 (17 líneas)

DIVISION DE SERVICIO:

BIRMINGHAM ROAD, ALLESLEY, COVENTRY

Telegramas : STANSER, COVENTRY

Teléfono: 22115 (5 líneas)

INSTRUCCIONES PARA LOS PEDIDOS DE PIEZAS DE REPUESTO

A fin de evitar demoras debidas a la interpretación errónea de los pedidos es importante tomar nota de las instrucciones que se proporcionan a continuación:

DESCRIPCION

La pieza requerida se obtendrá mediante referencia al catálogo y se citará el número de pieza con la descripción tecnica. Si existiesen dudas sobre el número y nombre de la pieza, deberá enviarse un dibujo de la pieza antigua para facilitar la interpretación exacta. Cuando se solicite material de tapizado, deberá enviarse, siempre que sea posible, una muestra del material deseado.

INTERPRETACION DEL CATALOGO

Los detalles formando parte de un conjunto quedan indicados por la adición del alineamiento de la descripción, según se especifica en el siguiente ejemplo.

CONJUNTO DEL MULTIPLE DE ESCAPE

Espárrago, unión de múltiple de admisión,
Espárrago, unión de tubería de escape,
Pasador, fijación a resorte,
Clavija, tope a resorte,
Resorte (bi-metal), eje de válvula de aleta,
Tope, resorte,
Pasador, partido, resorte de retención y de tope,
Peso, Equilibrio,
Pasador, Mills, dispositivo de contrapeso.

Así pues, las cuatro piezas inmediatamente a continuación del conjunto forman parte del conjunto, mientras que las cinco restantes son piezas sueltas y están sujetas a pedido por separado.

MUESTRAS

Cuando se remitan piezas como muestra, es importante que lleve cada una su etiqueta correspondiente, en la que se indique la dirección del remitente, inviándose por correo aparte la notificación, con cualquier referencia o número de pedido a que las piezas se refieran. Todas las piezas deben remitirse con porte pagado a la División de Piezas de Repuesto, Fletchamstead Highway, Coventry, y a menos que se especifique lo contrario en el pedido, las piezas no se devolerán al remitente.

PIEZAS DE MANO DERECHA Y DE MANO IZQUIERDA

Cuando se requieran Piezas de Mano Derecha y de Mano Izquierda es esencial que esto sea claramente mencionado en el pedido.

CANTIDADES

Las cantidades de piezas que se requieran no deben designarse por juegos, sino especificando claramente el número de cada pieza que se desea.

PEDIDOS

Los pedidos de piezas de repuesto deberán enviarse al Distribuidor o Concesionario Standard-Triumph más próximo.

NOTA ESPECIAL PARA LOS DISTRIBUIDORES

Es conveniente asegurarse de que:

- (a) La dirección está claramente escrita y el pedido se presenta en el formulario aprobado.
- (b) Las piezas requeridas se especifican en orden numérico.
- (c) Siempre que se pueda, el pedido deberá ir escrito a máquina o en tinta.

AVISO DE MODIFICACIONES

Cuando se realizan modificaciones en estos modelos se distribuyen boletines a los Distribuidores y Concesionarios Standard-Triumph para garantizar la corrección de los catálogos de acuerdo con la información más reciente.

NUMEROS DE CHASIS

En caso de dudas sobre la descripción exacta de una pieza de repuesto, menciónese siempre el número del chasis con las letras de prefijo o sufijo (de haberlas) del vehículo en cuestión. Esto evitará demoras y asegurará una consignación más rápida. El número del chasis se hallará estampado en una chapa de latón situada contra el salpicadero, debajo del capó.

REPARACION DE VEHICULOS. Aviso a los clientes


Se ha establecido una Escuela de Servicio donde los representantes de nuestros Distribuidores y Concesionarios reciben especial instrucción sobre la reparación y conservación de vehículos Standard-Triumph. Por consiguiente, se recomienda a los clientes que aprovechen la información que nuestros representantes pueden proporcionarles en todos los asuntos relacionados con el servicio y conservación del vehículo.

- ATENCION ·

AL EFECTUAR LOS RECAMBIOS, ES DE SUMA IMPORTAN-CIA UTILIZAR LAS PIEZAS LEGITIMAS FABRICADAS POR LA STANDARD MOTOR COMPANY LIMITED. ESTO GARANTIZARA QUE EL SERVICIO DE LA PIEZA DE RECAMBIO SEA IDENTICO AL SERVICIO DE LA PIEZA ORIGINAL. RECUERDESE QUE LAS PIEZAS LEGITIMAS ESTAN GARANTIZADAS.


LA EXPERIENCIA DE LOS FABRICANTES GARANTIZA QUE EL MATERIAL UTILIZADO ES DE LA MEJOR CALIDAD Y LA MAXIMA PRECISION EN LA FABRICACION.

NUMEROS DE SERIE DE LAS UNIDADES

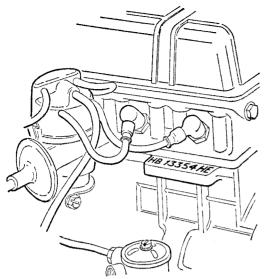


NUMERO DE SERIE DE MOTOR

Comenzando en HB.1.HE. para los motores de alta compresión y HB.1.LE. para los motores de baja compresión, este número va estampado en una brida ubicada en el costado Izquierdo del bloque de cilindros.

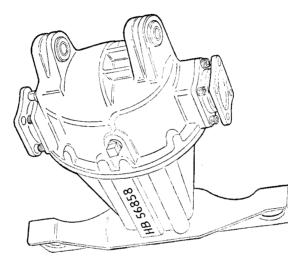

NUMERO DE SERIE DE CAJA DE CAMBIOS

Comenzando en HB.1.GB. este número va estampado en la superficie superior de la derecha de la carcasa de la caja de cambios.

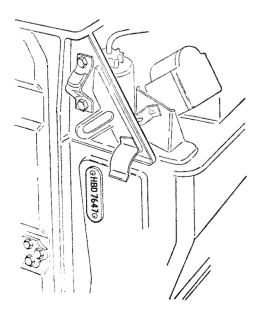


NUMERO DE SERIE DE CARROCERIA

Comenzando en HBD.1 para las carrocerías de los Salón, y HBC.1 para las carrocerías de los Convertibles, este número va estampado en una placa fijada al costado derecho del Escotillón.

NUMERO DE SERIE DE PUENTE TRASERO

Comenzando en HB.1.RA. este número va estampado en la brida inferior de la carcasa del puente trasero.

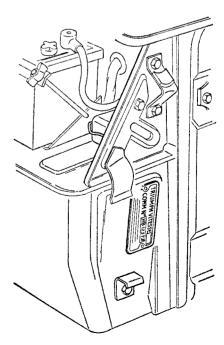


NUMERO DE REGISTRO

Este número va estampado en una placa fijada al costado izquierdo del Escotillón. Los detalles del Número de Registro se indican en la página siguiente.

LADO DERECHO

VOLANTE A LA DERECHA

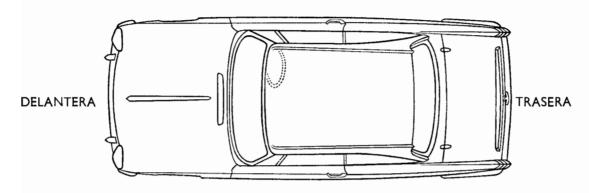


LADO IZQUIERDO

NUMEROS DE REFERENCIA Y SUFIJOS

Sedán Vitesse	Volante a la derecha	 НВ	DL
Sedán Vitesse	Volante a la izquierda	 HB	LDL
Sedán Vitesse con Overdrive	Volante a la derecha	 HB	DLO
Sedán Vitesse con Overdrive	Volante a la izquierda	 НВ	LDLO
Convertible Vitesse	Volante a la derecha	 НВ	CV
Convertible Vitesse	Volante a la izquierda	 HB	LCV
Convertible Vitesse con Overdrive	Volante a la derecha	 НВ	CVO
Convertible Vitesse con Overdrive	Volante a la izquierda	 HB	LCVO

LADO DERECHO

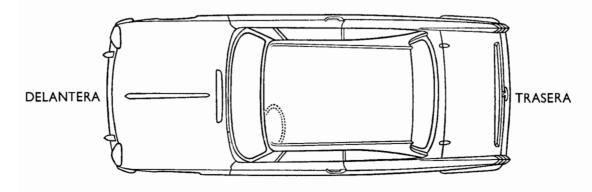

VOLANTE A LA IZQUIERDA

LADO IZQUIERDA



PREÂMBULO

Este catálogo foi compilado para auxiliar todos os compradores de peças sobresselentes para o salão e o descapotável Triumph Vitesse.

Recomenda-se que seja dada particular atenção para o método e processo a ser adotado na requisição de peças, segundo se indica nas notas de introdução.

A venda de peças sobresselentes é sempre feita atendendo às condições de venda da Companhia, em vigor.

STANDARD-TRIUMPH SALES LTD.

DIVISÃO DE PEÇAS SOBRESSELENTES:

FLETCHAMSTEAD HIGHWAY, COVENTRY
Telegramas: STANPART, COVENTRY

Telefone: 75511 (17 linhas)

DIVISÃO DE SERVIÇO:

BIRMINGHAM ROAD, ALLESLEY, COVENTRY

Telegramas: STANSER, COVENTRY

Telefone: 22115 (5 linhas)

INSTRUÇÕES PARA A REQUISIÇÃO DE PEÇAS SOBRESSELENTES

A fim de evitar demoras devido à interpretação errónea dos pedidos de requisição, é importante que as instruções a seguir sejam cuidadosamente observadas:—

DESCRIÇÃO

A peça exigida deve ser referida no catálogo e o seu número mencionado, junto com uma descrição técnica. Se houver quaisquer dúvidas quanto ao nome e ao número de peça, um desenho ou a peça velha devem ser submetidos para auxiliar na identificação exata. Quando se requisita material para as armações, deve-se enviar, se possível, uma amostra do material exigido.

INTERPRETAÇÃO DO CATÁLOGO

As peças que formam parte de um conjunto são indicadas por uma marginagem diferente do texto como se demonstra no exemplo seguinte.

CONJUNTO DO COLECTOR DE ESCAPE

Perno, fixação do colector de admissão.
Perno, fixação do tubo de escape,
Cavilha, escora da mola,
Cavilha, esbarro da mola,
Mola, (bimetálica), veio da válvula de borbuleta
Esbarro, mola,
Trôço, retenção da mola e esbarro,
Contrapêso, equilibrado,
Cavilha, fixação do contrapeso.

Consequentemente, as quatro partes imediatamente a seguir ao conjunto são parte integrante do mesmo enquanto que as restantes cinco são partes individuais e requerem encomenda separada.

MODÊLOS

Quando se submetem peças como modêlos é importante que elas sejam separada e cuidadosamente marcadas com o endereço do remetente, e, além do mais, que se envie, à parte, a descrição e o número de ordem a elas referentes. Todos os modêlos de peças devem ser enviados à Divisão de Peças Sobresselentes, Fletchamstead Highway, Coventry, com remessa paga, e, a menos que sejam acompanhadas de instruções especiais, as peças não serão devolvidas.

PEÇAS PARA OS LADOS DIREITO E ESQUERDO

É essencial fazer referência na encomenda quando desejem peças especificamente para os lados direito ou esquerdo.

QUANTIDADES

Convém não indicar quantidades por jôgo de peças, indicando ao invés, especificamente, o número de peças que se exige.

PEDIDOS

Os pedidos para a substituição de peças devem ser submetidos ao Distribuidor ou Agente Standard-Triumph mais próximo.

INFORMAÇÃO ESPECIAL PARA OS DISTRIBUIDORES

É conveniente certificar-se de que:

- (a) O endereço seja anotado claramente e o pedido submetido no Formulário de Requisição apropriado.
- (b) As peças exigidas estejam em ordem numérica.
- (c) A requisição seja completada, sempre que possível, à máquina de escrever ou à tinta.

AVISOS DE MODIFICAÇÕES

Quando se introduzirem modificações pertencentes a êsses modêlos, Boletinas serão enviados aos Distribuidores e Agentes Standard-Triumph, para assegurar que o catálogo seja alterado de acôrdo com as últimas informações.

NÚMEROS DE CHASSIS

Em caso de dúvida acerca da descrição exacta de uma peça sobressalente, refira-se sempre ao número de chassis com as letras de prefixo ou sufixo (quando houver), do carro em questão. Essa medida evitará qualquer demora e garantirá uma remessa mais pronta. O número de chassis encontra-se gravado numa placa de latão, no painel, debaixo de capota do motor.

REPARAÇÃO DE AUTOMÓVEIS. Informação para os clientes


Uma Escola para Serviço foi instituida para treinamento em reparação e manutenção dos automóveis Standard-Triumph dos representantes de nossos Distribuidores e Agentes. Recomenda-se, portanto, que os clientes façam uso dos préstimos que os nossos agentes estão em condições de lhes proporcionar no que toca a todos os assuntos relativos a serviço e manutenção.

-ATENÇÃO

QUANDO SE SUBSTITUEM PEÇAS, É DE SUMA IMPOR-TANCIA QUE NÃO SE EMPREGUEM SENÃO PEÇAS MANU-FATURADAS PELA STANDARD MOTOR CO. LTD. SENDO, ASSIM GARANTIR-SE-Á QUE A PEÇA DE SUBSTITUIÇÃO DARÁ SERVIÇO IGUAL À ORIGINAL. NÃO SE DEVE ESQUECER QUE A PEÇA ORIGINAL TEM GARANTIA.


A EXPERIÊNCIA ADQUIRIDA PELOS FABRICANTES ASSE-GURA O USO EXCLUSIVO DE MATERIAL DA MAIS ALTA QUALIDADE E A MAIOR PRECISÃO NA MANUFATURA.

NÚMERO DE SÉRIE DAS UNIDADES

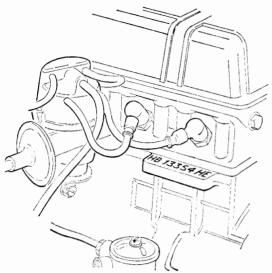


NÚMERO DE SÉRIE DO MOTOR

Este número começa em HB.1.HE. para motores de alta compressão e em HB.1.LE. para motores de baixa compressão e está estampado na face esquerda do bloco do cilindro.

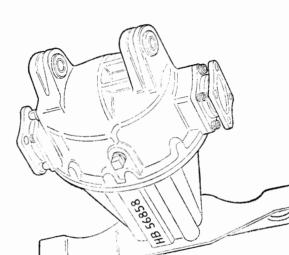

NÚMERO DE SÉRIE DA CAIXA DE VELOCIDADES Este número começa em HB.1.GB.

e está estampado à direita na face superior do invólucro da caixa

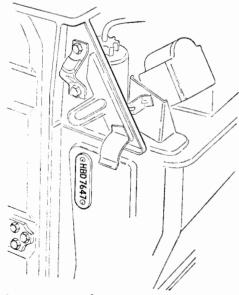


NÚMERO DE SÉRIE DA CARROÇARIA

Este número começa em HBD.1 nas carroçarias dos salões, e HBC.1 nas carroçarias dos descapotáveis e está stampado numa placa fixa ao lado direito do poço.



Este número começa em HB.1.RA. e está estampado na face inferior do invólucro do eixo.

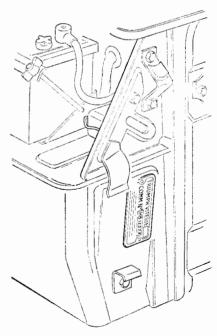


NÚMERO DE SAIDA DA FÁBRICA

Este número está estampado numa placa fixa ao lado direito do poço. Na página seguinte encontram-se pormenores sobre os números de saida da fábrica.

LADO DIREITO

DIREÇÃO À DIREITA

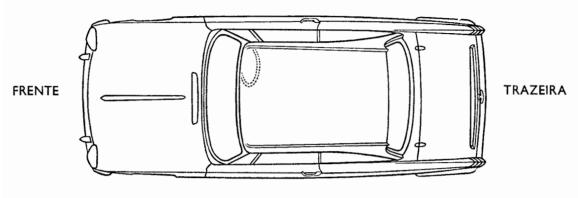


LADO ESQUERDO

NUMEROS DE ORDEM E SUFIXOS

Salão interior Vitesse	Direção à direita	НВ	DL
Salão interior Vitesse	Direção à esquerda	НВ	LDL
Salão interior Vitesse com Overdrive	Direção à direita	НВ	LDO
Salão interior Vitesse com Overdrive	Direção à esquerda	HB	LDLO
Descapotável Vitesse	Direção à direita	HB	CV
Descapotável Vitesse	Direção à esquerda	НВ	LCV
Descapotável Vitesse com Overdrive	Direção à direita	НВ	CVO
Descapotável Vitesse com Overdrive	Direção à esquerda	НВ	LCVO

LADO DIREITO

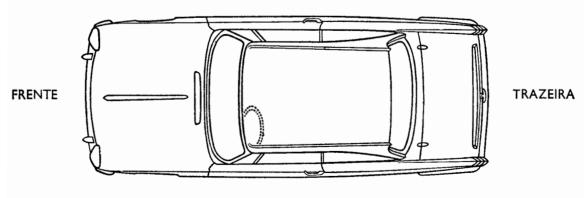

DIREÇÃO À ESQUERDA

LADO ESQUERDO



VORWORT

Dieser Katalog ist zusammengesetzt worden, um allen Kunden zu helfen, die Ersatzteile für die Triumph Vitesse Limousine und Cabriolet benötigen.

Bitte schenken Sie der in den einleitenden Bemerkungen enthaltenen Methode und dem Verfahren für die Bestellung von Ersatzteilen Ihre sorgfältige Aufmerksamkeit.

Der Verkauf von Ersatzteilen erfolgt stets laut den jeweilig gültigen Verkaufsbedingungen der Gesellschaft.

STANDARD-TRIUMPH SALES LTD.

ERSATZTEIL-ABTEILUNG:

FLETCHAMSTEAD HIGHWAY, COVENTRY Telegramm-Adresse: STANPART, COVENTRY

Telefon-Nummer: 75511 (17 Anschlüsse)

KUNDENDIENST-ABTEILUNG:

BIRMINGHAM ROAD, ALLESLEY, COVENTRY Telegramm-Adresse: STANSER, COVENTRY Telefon-Nummer: 22115 (5 Anschlüsse)

ANWEISUNGEN ZUR BESTELLUNG VON ERSATZTEILEN

Um Verzögerungen infolge Misverständnisse bei Bestellungen zu vermeiden, ist es wichtig, dass Sie sich die folgenden Anweisungen merken:

BESCHREIBUNG

Der gewünschte Teil ist im Katalog aufzusuchen und die Teilnummer mit der technischen Beschreibung anzuführen. Falls in Bezug auf den Namen oder die Nummer irgend ein Zweifel besteht, ist eine Skizze bezw. der alte Teil zum besseren Verständnis des Auftrages einzusenden. Bei Bestellung von Plosterbezügen u. dgl. ist, wenn irgend möglich, ein Muster des gewünschten Stoffes einzuschicken.

ERKLÄRUNG DES KATALOGES

Einzelteile eines Aggregates sind durch Einrücken der Beschreibung angedeutet, wie aus nachstehendem Beispiel hervorgeht.

AUSLASSKRÜMMER-AGGREGAT

Stiftschraube, für Anschluss des Einlasskrümmers, Stiftschraube, für Anschluss des Auspuffrohres. Stift, Federanker-Anschlag, Feder-Feder (Bimetall) für Spindel der Ventilklappe, Anschlag, Feder-Splint, zum Halten von Feder und Anschlag, Gewicht, Ausgleichs-Kerbstift, zum Anschluss des Ausgleichsgewichtes.

Die ersten vier, dem Aggregat unmittelbar folgenden Positionen sind daher Teile des Aggregates selbst, während die restlichen fünf einzelne Positionen sind und gesondert bestellt werden müssen.

BEMUSTERUNG

Wenn Teile als Muster eingesandt werden, ist es wichtig, dass jeder Teil einzeln und sorgfältig mit einem Etikett versehen ist, das die Adresse des Absenders trägt. Gleichzeitig muss eine Mitteilung mit besonderem Schreiben auf die Nummer des Postens bezw. des Auftrages Bezug nehmen. Alle Muster müssen portofrei an die Abteilung für Ersatzteile, Fletchamstead Highway, Coventry, gesandt werden; falls keine besonderen Instruktionen in der Bestellung angeführt sind, werden sie nicht zurückgesandt.

ERSATZTEILE FÜR DIE RECHTE BZW. LINKE SEITE DES WAGENS

Bei Ersatzteilen, welche für eine bestimmte Seite des Fahrzeuges angefordert werden, ist es wichtig, stets auf die jeweils in Frage kommende Seite hinzuweisen.

MENGEN

Mengen sind nicht in Sätzen zu bezeichnen, sondern durch die genaue Einzelaufführung der benötigten Teile.

AUFTRÄGE

Aufträge für Ersatzteile sind an die nächste Standard-Triumph Vertriebsstelle bzw. an den Händler zu richten.

ZUR BESONDEREN BEACHTUNG FÜR VERTRIEBSSTELLEN

Es ist zweckmässig, sich zu vergewissern dass:-

- (a) Die Adresse deutlich angegeben ist und der Auftrag auf dem richtigen Bestell-Formular eingesandt worden ist.
- (b) Die benötigten Teile in numerischer Reihenfolge angeführt sind.
- (c) Der Auftrag, wenn möglich, mit der Schreibmaschine bzw. mit Tinte geschrieben ist.

BEKANNTMACHUNG VON ÄNDERUNGEN

Vorgenommene Änderungen in Bezug auf diese Modelle werden in Nachträgen für Standard-Triumph Vertriebsstellen und Händler veröffentlicht werden, um eine Berichtigung des Kataloges entsprechend der allerneuesten Angaben zu ermöglichen.

FAHRGESTELLNUMMERN

Wo in Bezug auf die richtige Benennung eines Ersatzteiles irgend ein Zweifel besteht, ist stets die Fahrgestellnummer des Wagens, mit etwaig vorausgehenden bzw. hinzugefügten Buchstaben anzuführen. Dies vermeidet Verzögerungen und ermöglicht eine schnellere Abfertigung. Die Fahrgestellnummer ist auf einer Messingplatte an der Stirnwand unter der Haube, eingestanzt.

WAGENREPARATUREN. Zur Beachtung des Kunden


In einer Technischen Kundendienstschule werden Vertreter unserer Vertriebsstellen und Händler in der Unterhaltung und Bedienung von Standard-Triumph Wagen ausgebildet. Aus diesem Grunde sollte der Kunde von diesem Dienste, den unsere Vertreter in allen Angelegenheiten verbunden mit Unterhaltung und Bedienung bieten können, vollen Gebrauch machen.

-WARNUNG ---

ES IST ÄUSSERST WICHTIG DASS, BEIM EINBAU NEUER EINZELTEILE NUR ECHTE, VON DER STANDARD MOTOR CO. LTD. HERGESTELLTE ORIGINALTEILE VERWENDET WERDEN. DIES GARANTIERT, DASS DIE VON DEM ORIGINALTEIL GEGEBENE LEISTUNG EBENFALLS DURCH DEN ERSATZTEIL BEIBEHALTEN WIRD. VERGESSEN SIE NICHT, DASS DER ECHTE TEIL GARANTIERT IST.


DIE DURCH DIE FABRIKANTEN GESAMMELTEN ERFAHRUNGEN SICHERN DIE VERWENDUNG NUR ERSTKLASSIGEN MATERIALS UND ABSOLUTE GENAUIGKEIT IN DER HERSTELLUNG.

FABRIK-NUMMERN

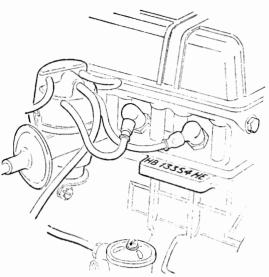

MOTOR-NUMMER


Beginnend mit HB.1.HE. bei Motoren mit hohem Verdichtungsverhältnis und mit HB.1.LE. bei Motoren mit niedrigem Verdichtungsverhältnis, ist diese Nummer in den Flansch auf der linken Seite des Zylinderblockes eingeschlagen.

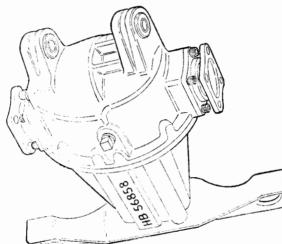

HINTERACHSE-NUMMER Beginnend mit HB.1.RA, ist diese Nummer in den unteren Flansch der Hinterachse eingeschlagen.


GETRIEBE-NUMMER

Beginnend mit HB.1.GB. ist diese Nummer in die obere Fläche auf der linken Seite des Getriebegehäuses eingeschlagen.

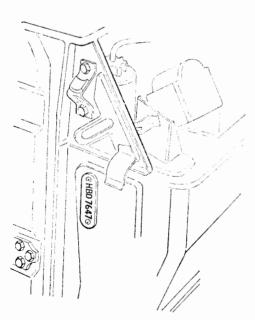

KAROSSERIE-NUMMER

Beginnend mit HBD.1 bei Limousinen, und mit HBC.1 beim Cabriolet, ist diese Nummer auf dem Schild an der Stirnwand rechts unter der Haube ersichtlich.

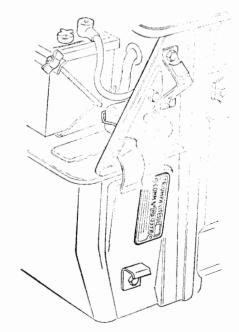


KOMMISSIONS-NUMMER

Diese Nummer ist auf dem Schild an der Stirnwand links unter der Haube ersichtlich. Die Bezeichnung ist auf der folgenden Seite erläutert.

RECHTE SEITE

RECHTSSTEUERUNG

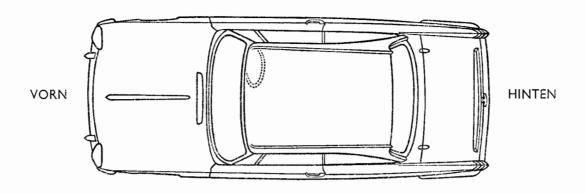


LINKE SEITE

KOMMISSIONS-NUMMERN UND NACHSTEHENDE BUCHSTABEN

Vitesse Limousine	•••	•••	 Rechtssteuerung	 HB	DL
Vitesse Limousine			 Linkssteuerung	 HB	LDL
Vitesse Limousine mit	Overd	rive	 Rechtssteuerung	 HB	DLO
Vitesse Limousine mit	Overd	rive	 Linkssteuerung	 HВ	LDLO
Vitesse Cabriolet			 Rechtssteuerung	 НВ	CV
Vitesse Cabriolet			 Linkssteuerung	 HВ	LCV
Vitesse Cabriolet mit (Overdr	ive	 Rechtssteuerung	 НВ	CVO
Vitesse Cabriolet mit (Overdr	ive	 Linkssteuerung	 НВ	LCVO

RECHTE SEITE

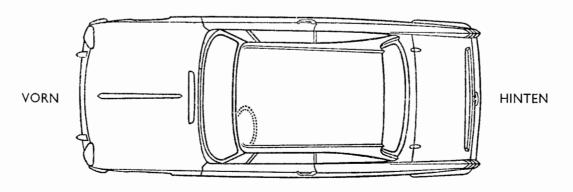

LINKSSTEUERUNG

LINKE SEITE

ALPHABETICAL INDEX

Description	Page	Plate	Description	P	Page	Plate	Description Page	Plate
ENGINE	1-18		ENGINE—continued				FRONT	
Air Cleaner	17	J	Water Pump		9	D	SUSPENSION 27-29	
Breather Assembly .	3	Α	Water Thermostat		9	D	Bottom Trunnion 28	S
Camshaft	. 6	С					Bottom Trunnion Oil Seal 28	S
Camshaft Chain Wheel .	6	С					Caliper Mounting Plate 28	S
Carburettor	13, 16	Н					Front Damper 29	S
	. 15	Н	CLUTCH		19		Front Damper and Spring	3
	15		Cover		19	L	Attachment Details 29	S
	. 7	С	Driven Plate Assembly			Ĺ	Front Road Spring 29	S
Connecting Rod Bearing .		č	Slave Cylinder		19	Ĺ	Hub 27	S
	. 7	č	Throw-out Bearing		19	Ĺ	Hub Bearing 27	S
	. 6	Č		•••		_	Lower Wishbone 28	S
		Č					Lower Wishbone Fulcrum	3
		C						S
		C	GEARBOX	20	0-23			S
Crankshaft Thrust Washer		C	Attachment Details				-	S
			Casing		20	М	Stub Axle 27 Stub Axle Oil Seal 27	S
,	. 1	A	Constant Pinion Bearing		22	N		S
Cylinder Head	_	В	Constant Pinion Shaft		22	N	Upper Wishbone Assembly 27	-
Cylinder Liner					23		Upper Wishbone Ball Joint 27	S
Decarbonising Set			Countershaft Countershaft Bearing			N	Vertical Link 27	S
Dipstick		Α	_		23	N		
Distributor Driving Gear		С	Countershaft Gears		23	N	ANTI-ROLL BAR 30	-
	. 8	С	Extension		20	М	ANTI-ROLL BAR 30	Т
Dynamo Bracket	. 18	K	Extension Oil Seal		20	М		
Dynamo Link	. 18	K	Front End Cover and Clu				REAR AXLE 31-32	
Dynamo Pulley	. 18	K	Housing		20	М	Axle Casing 31	U
Engine Gasket Set	. 1		Mainshaft		22	Ν	Axle Shaft Assembly 32	Ü
Exhaust Manifold	. 10	Ε	Mainshaft Bearing		22	Ν	Crown Wheel and Pinion 31	Ü
Fan	. 6	С	Mainshaft Flange		22	Ν	Differential Bearing 31	Ü
Fan Belt	. 6	С	Mainshaft Gears	• • •	22	Ν	Differential Casing 31	Ü
Fan Pulley and Damper Assy		С	Operating Sleeve		22	Ν	Differential Gears 31	Ü
	. 6	С	Reverse Gear		23	Ν		U
Flywheel Gear Ring		C	Reverse Spindle	• • •	23	Ν		U
Front Engine Plate	_	Ā	Selector Fork		21	М	Hub, Rear Inner, Assembly 32 Oil Filler Plug 31	U
Gasket Sets			Selector Shaft		21	М	J	U
Inlet Manifold		Е	Selector Shaft Plunger		21	М		U
	. 5	В	Speedometer Driven Gea	ir	20	М	•	_
<u>'</u>	. 11	F	Speedometer Driven Gea	ır				U
	. 3	Ä	Bearing		20	M	Shaft Outer Assembly 32	U
0:1.0		Ā	Synchronising Sleeve		22	Ν		
- · · · · ·	. –		Top Cover		21	М	REAR SUSPENSION 33	
•		Α					Radius Arm Assembly 33	٧
Petrol Pipe		•					Rear Damper 33	v
Petrol Pump	_	G					Road Spring 33	v
Piston		С	GEAR SHIFT				Road Spring 33	•
Piston Ring		C	MECHANISM	:	24			
Push Rod		В	Gear Lever		24	Р	PROPELLOR SHAFT 34	V
Push Rod Tappet		В	Operating Shaft		24	P		
Rocker Cover		В	a parasing chaire	•••		'		
Rocker Shaft		В					ROAD WHEELS 34	V
Rocker Shaft Pedestal	. 5	В					Nave Plate 34	V
Rocker Spring	. 5	В	ENGINE MOUNTIN	NG I	Ω.		Wire Wheel Kit 34	V
Sparking Plug	. 18		CHASSIS FRAME	25				
Timing Chain	. 7	С	Chassis Frame Complete		26	R	STEERING 35-36	
Timing Chain Tensioner	. 7	С			25 25			14/
Timing Cover	_	С	Front Extension, Frame		25 26	Q	Ball Joint 36	W
Timing Cover Oil Seal	_	č	Front Extension, Frame Front Suspension and Eng		20	R	Column, Upper and Lower 35	W
Valve	-	В			24		Flexible Joint 35	W
Valve Collar	_	В	Mounting Bracket		26	R	Mounting Block, Rack and	
V 1 5 1			Outrigger Assembly		26	R	Pinion 36	W
		B B	Rear Damper Mounting B Rear Engine Mounting			R	Rack and Pinion Assembly 35-36 Steering Wheel 35	W
Valve Spring				'	25	Q	Steering Wheel 35	W

ALPHABETICAL INDEX

Description Page	Plate	Description Page P	late	Description Page Plate
ACCELERATION		EXHAUST SYSTEM 48	E	LECTRICAL EQUIPMENT
CONTROLS 37-39		Attachment Details 48	A D	-continued
Abutment Bracket 37	X	Exhaust Silencer and Rear		Windscreen Wiper Cross-
Accelerator Mounting Brkt. 37-38	8 X	Pipe Assembly 48	٩D	head and Rack 57 Al-l
Cable Details 37	X	Front Pipe Assembly 48	AD	Windscreen Wiper Motor 57 AH
Cross-Shaft 38	Х			Windscreen Wiper Switch 68 AL
Pedal 37-38				Windscreen Wiper Wheel-
Relay Lever 39	X	PETROL SYSTEM 49		box 57 AH
Return Spring 37-38	X		AD	
OLLITOIL AND			AD	
CLUTCH AND	v	5	AD .	ODY O FITTINGS - FA 445
Brake Pedal 40	Y Y			ODY & FITTINGS70-115
	Ϋ́	Tank Attachment Derails 49	AD	'A' Post Panels 75 AP
Cidecii i cani	Ϋ́			Battery Fixing Brackets 75 AP
7 0001 7 10011111 6 0 1 1 1 1 1 1	Ϋ́	MISCELLANEOUS		Backlight Glass 96 AX
Pedal Pad 40 Pedal Return Spring 40	Ϋ́			Backlight Weatherstrip 96 AX Body Mouldings 102 AZ
redat Return Spring 40	'			Body Mouldings 102 AZ Body Mounting Details 72
MASTER CYLINDER				Body Side Panels 72
DETAILS 41		Service Kits 50 Tools 50		Bonnet Assembly 70 AM
Master Cylinder, Brake and		10013 50		Bonnet Badge 81 AR
Clutch Assembly 41	Υ			Bonnet Catch Assembly 81 AR
Master Cylinder, Brake and	•	ELECTRICAL		Bonnet Catch Plate 81 AR
Clutch Support Bracket 41	Υ	EQUIPMENT 51-69		Bonnet Hinge Tube 80 AR
Master Cylinder Repair Kit 41	Y	Battery 65		Bonnet Letters 80 AR
Traster Cymraer Ropan Tree		Body Harness 65		Bonnet Link 81 AR
HYDRAULIC PIPES 42			AL	Bonnet Moulding 81 AR
Brake Pipes 42	Z		AL.	Bonnet Sealing Rubber 82 AR
Brake Pipe Connection 42	Z	Courtesy Light Switch 64		Bonnet Spring 81 AR
Clutch Pipes 42	Z	, -	AE	Bonnet Stay 81 AR
Pipe Clip 42	Z.	Dynamo 54	A۴	Bonnet Stay Rod 81 AR
		Engine Leads 66		Cantrail 78 AQ
HANDBRAKE		Flasher Switch 56	AG	Cappings103-107
DETAILS 43			AG	Carpets 104 BA
Compensating Sector 43	AA	11 3	AK	Cubby Box Lid 88 AT
Handbrake Assembly 43	AA		AL	Dash and Windscreen Assy. 70-71 AM
Handbrake Cable 43	AA		AK	Dash Millboard105-106 BA
Relay Lever 43	AA	Headlamp 58-61		Dash Shelf Panel 75 AP
Relay Lever Bearing 43	AA		AL	Dash Side Panel 75 AP
Rod, Pawl Release 43	AA		AG	Door Assembly 83 AS
Seal 43	AA		AG	Door Check Link 87 AS
BRAKES 44-45			AE AL	Door Glass 84 AS Door Glass Channel 84 AS
Front Brake Caliper Assy 44	AB	Interior Lamp 64	/1L	Door Hinges 83 AS
Front Wheel Caliper Repair	7,5	Main Harness 66		Door Inner Waist Sealing
Kit 44	AB	Rear Number Place Lamp		Strip 83 AS
Front Brake Lining Pad 44	AB	·	AJ	Door Lock 85 AS
Rear Brake Back Plate 44	AB	•	AJ	Door Lock Striker 85 AS
Rear Brake Drum 45	AB		AJ	Door Outside Handle 86 AS
Rear Brake Shoe Assembly 45	ΑB	•	A G	Door Outer Waist Sealing
Rear Brake Wheel Cylinder 45	AB	The state of the s	AL	Strip 83 AS
Rear Wheel Cylinder Repair		•	AL	Door Remote Control
Kit 45	ΑB	Starter Motor 54	AF	Handle 86 AS
		Starter Motor Armature 54	AF	Door Remote Control
RADIATOR 46-47	7		AF	Mechanism 86 AS
Block 46-47			AF	Door Sealing 87 AS
Filler Cap 46-47			AK	Door Trim Pad 87 AS
Header Tank 46	AC		AJ	Door Ventilator 83 AS
Hose 46-47		•	AK	Door Ventilator Glass 84 AS
Elbow 46-47			AH	Door Ventilator Locking
Overflow Bottle 47	ACS	Windscreen Wiper Blade 57	AH	Handle 84 AS

ALPHABETICAL INDEX

Description	Page	Plate	Description	Page	Plate	Description	Page Pla
BODY AND FITTING	S —continue	d	BODY AND FITTINGS	—continue	ed	MISCELLANEOUS	
Door Weather Curtain	87	AS	Heater Water Pipes	93	AV		116
Door Window Regulato	r 85	AS	Heater Water Valve	93	ΑV		116
Door Window Regulato	r		Interior Driving Mirror	90	AU	Grommets	116
Channel	84	AS	Luggage Floor Assembly		AN		116
Door Window Regulato	r		Quarterlight Glass	96	AX	J	
Handle	84	AS		102	AZ	ACCESSORIES	117-119
Facia Ash Tray	89	ΑT	Rear End Complete Assy.	. 71	AM	Badge Bar	117
Facia Panel	88-89	ΑT		73	AN	Bonnet Lock Kit	118
Facia Panel Attachment			Rear Overider Assembly	102	ΑZ	Continental Touring Kit	118
Details	89	ΑT	Rear Overider Moulding	102	AZ.	Defroster	117
Floor Panel Details	73-74	AN	Rear Quarter Trim	107	BA	Engine Gasket Set	118
Folding Head Assembly	98-101	ΑY	Rear Seat Cushion	111-11	2 BA		117
Folding Head Attachm	ents 99 -1 00	ΑY	Rear Seat Cushion Cover	112-11	3 BA	Fire Extinguisher	117
Folding Head Catch	100	ΑY	Rear Seat Pan	73	AN	Fog Lamp	117
Folding Head Hood	101		Rear Seat Squab	113/4/5			118
Folding Head Hood Cov	er 10 2		Rear Seat Squab Cover	, ,		•	117
Folding Head Sticks	98-100	ΑY	Rear Spring Access Cover		AN	Reverse Lamp Kit	118
Folding Head Weathers	trip 100	ΑY	Roof Panel Assembly	71-78	AQ	Roof Rack	117
Fresh Air Intake Kit	94		Roof Mouldings and Fitti		AZ	Safety Belt Kit	118
Front Bumper	102	ΑZ	Rubber Mats	104	BA	Seat Covers	117
Frent Floor Assembly	73	ΑN	Sill Assembly	71-77	AM		119
Front Overider	102	AZ	Spare Wheel Cover	74	AN		117
Front Overider Attach		ΑZ	Steering Column Cowl	91	AU	Tail Pipe Finisher	117
Front Overider Mountin	-	ΑZ	Steering Column Support				117
Front Seat Cushion Cov			Sun Visor	90	AU	Tool Kit	119
Front Seat Frame	108-11		Trim Pads	106-10			117
Front Seat Slide		BA		96	AX		118
Front Seat Squab Cover			Trunk Lid Trunk Lid Handle	97	XA	Wing Mirror	117
Front Valance Assembly		AM	Trunk Lid Handle	96	AX	Wing Mirror Bezel	117
Front Wing		AR	Trunk Lid Letters	96	AX	Wood Rimmed Steeri	-
Frontal Grille	82	AR		97	AX	Wheel	117
Gearbox Cover	74	AN	Trunk Lid Lock	97	AX		
Headlamp Cover Panel		AR	Trunk Lid Stay Valance Panel, Engine Bay		AA	OVERDRIVE	120-124
Headlining	104		Wheelarch Inner Panel		AN	Overdrive Gearbox Ma	
Headlining Listing Rods			Wheelarch Outer Panel		AN	shaft	120
Heater Air Box Panel	76	AP				Overdrive Propellor Shaft	t 121
Heater Control	93	AV	Windscreen Glass	90	AU	Overdrive Speedometer	45.
	93	AV	Windscreen Header Pane		AQ		121
Heater Demister Nozzle		AV	3	90	AU		120
Heater Duct	93	A٧	Windscreen Washer	95	AW	Overdrive Unit	122-124
Heater Unit	93	ΑV	Windscreen Weatherstri	ip 90	ΑU	Overdrive Wiring Harn	ess 120

NUMERICAL INDEX

KEY TO MODELS MENTIONED IN NUMERICAL LIST

S.C. Small Car followed by the H.P. T.R.

Triumph Sports car followed by the

Series Number.

٧. Vanguard followed by the Series Number.

VIG. Vanguard Vignale Saloon. ACV. Atlas Commercial Vehicle.

PNT. Pennant.

STB. Sportsman.

EN. Ensign. HER. Herald.

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
27378	Core Plug	4	ACV., PNT., STB., EN., HER., TR. 2, 3, 4,	56305	Screw	20	STB., TR. 2, 4, EN., VIG., V.1,2,3, HER.
			V.1, 2, 3, SC. 8, 10, SC.10-1.	56712	Core Plug	1	STB., PNT., ACV., SC.10-1, HER.
30123	Wire (Lead)		ACV., EN., STB., PNT., HER., TR. 2, 4, SC. 10-1, 10-8.	57103	Gasket 46, 4	7, 118	ACV., PNT., STB., EN., HER., TR. 2, 3, V. 1, 2, 3.
32307	Felt Washer	2	ACV., STB., EN., PNT., HER., TR.2,3,4, V.1, 2,3.	57109	Ball Pin (Adjustable)	5	PNT., STB., EN., ACV., TR.2, SC.10-1, 8,10.
33214	Anchor Pin	7	ACV., PNT., HER., SC.10-1.	57110	Nut	5	PNT., STB., EN., ACV., TR.4, SC.8,10, 10-1,
35960	Chain Wheel	6	ACV., PNT., HER., SC.10,10-1.	57361	Spring Washer	12	TR.2. PNT., STB., TR.2,4,
36234	Filler Piece	2	ACV., PNT., HER., SC.10,10-1.				ACV., V. 1, 3, HER., SC.8-1.
36411	Plate	6	SC.10,10-1,PNT., ACV.	57409	Screw	13	
			HER.	57413	Spring	13	
37948	Shim	22	ACV., STB., EN., PNT.,	57413/1	Spring	13	
			HER., SC.8,10, 10-1,	57415	Ball, locating Starter Lev	er 15	
38303	Clip, Suction Pipe to	16	V.1,2,3, VIG. PNT., STB., ACV., EN.,	57416	Spring	15	SC.10,10-1, EN., V.3,6, BRIG.
	Petrol Pipe		TR.2, SC.8,10, 10-1,	57417	Screw	14	
			HER., V.1,2,3.	57419	Nut, Lever to Spindle		
38788	Retainer	19	V.3, 15 CWT. VAN,	57430	Bolt, Carrier Main Jet	14	
			BRIG., 2 TON.	57431	Washer, on Carrier Bol		
41326	Strut	19		57458	Cover Band Assembly		ACV., PNT., HER.,
42425	Tensioner	7	SC.10, 10-1, PNT., ACV., HER.				SC.10-1, 10.
42537	Pin	19		57492 57556	Spring, Brush Screw	57 14	
44473	Core Plug	1	STB., TR.2, EN., PNT., ACV., V. 1, 2, 3,	57991	Dog, Driving Distributor	51	PNT., STB., EN., HER., V.1,2,3, TR.2, ACV.,
			SC.8,10, HER.	58261	Gaiter	22	SC.10,10-1, PNT., HER.
46172	Plug, Core	1		58465	Fuse, 35 amp.	65	TR.2,3,4, HER.
46549	Plug	1	PNT., ACV., HER.,	58499	Screw, Clamping	51	
			SC.10,10-1.	58501	Nut, Moulded	51	
48101	Packing, Kautex	46, 47		59015	Pedestal	18	STB., V.1,2,3, TR.2,3,4,
52409	Screw		V.6.				ENDL., BRIG.,
52 4 13	Mills Pin	120, 122	SC.8,10.				BARB.
52479	Link	12	TR.2, 3, STB., V. 1, 3,	59115	Bolt, Dynamo to	18	
52483	Pin	12	EN., TR.4. STB., EN., PNT., ACV.,	37113	Pedestal	10	ACV., PNT., EN., TR. 2, 3, 4, V. 1, 2, 3, STB., SC.10-1.
			TR.2,4, SC.8,10, V.1,	50404	Ci.	42 40	316., 30.10-1.
			2,3, HER.	59191	Clip	42, 49	
52484	Clip, securing Pin	12	PNT., STB., ACV., EN., V. 1, 2, 3, SC. 8, 10,	59380	Clip, Brake Pipe to Bulkhead, R.H.S. only	42	
52486	Washer, Rocker Pin	12	10-1. V. 1, 2, 3, EN., STB.,	59426	.50" A/F, .56" A/F	50, 119	
			TR.2, 3.	59427	Tool, Combination	50	
52494	Rocker Arm Spring	12	TR. 2, 3, 4, STB., EN.,	59445	Buffer Washer	68, 69	
			V. 1, 3.	59467		62, 63	
52 4 98	Spring	12	TR. 2, 3, 4, STB., EN.,	59474	Nut	121	
			V.1,2,3.	59492	Warning Light Bulb 67,	68, 118	

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
59660	Screw	12	PNT., STB., ACV., TR.2, 4, V.1, 2, 3,	100996	Bolt	34	SC. 10, 10-1, PNT., ACV., HER.
59669	Disc, Throttle	13	HER., SC.10-1.	101089	Spanner, Sparking Plug	50, 119	NOV., TIER.
59678	Bolt	15		101092	Washer, Abutment	9	PNT., STB., EN., ACV.,
59682	Screw	14			, , , , , , , , , , , , , , , , , , , ,	,	TR. 2, 4, HER.,
59717/90	Jet, Starter Petrol	14					SC. 8-10, V. 1, 2, 3
59718/160	Jet, Air Correction	14		101343	Adaptor	94	STB., PNT., EN., HER.
59719/105	Jet, Main	1 4 , 16			·		TR.2,3,4, V.1,2,3.
59719/110	Jet, Main	14		101416	Тар	46, 47	SC.10, 10-1, PNT.
59720/35	Jet	14, 16	HER.				ACV., HER.
59813	Screw	65		101436	Clip	10	SC.10-1, 10, PNT.
59844	Defroster	117					ACV., HER.
60070	Bush, Bearing Cap	31	PNT., EN., HER., SC.10, 10-1.	101962	Stud	9, 10	SC. 10, 10-1, PNT., ACV., HER.
60176 60274	Nut, Tubing Return Spring, 37,	19, 49 38, 39		102076	Plate	6	SC. 10, 10-1, PNT., ACV., HER.
40045	Accelerator			102564	Valve Spring	5	EN., HER., TR.4.
60313	Bearing Seal	9	STB., EN., PNT.,	102729	Sleeve, Tubing	49	
			V.1, 2, 3, SC.8, 10,	102987	Bush, Rubber Clampe	r Eye 33	
(0.405			TR.2,4, ACV., HER.	103220	Collar	36	HER.
60405	Nut, Slotted	124		103222	Petrol Drain Plug	49	HER.
60527	Rubber Cleat		SC.10,10-1, EN., PNT., HER.	104420	Bush	23	SC.10-1, PNT., ACV., HER.
61478	Water Tap	2	STB., EN., PNT., ACV.,	104433	Ball Bearing		SC.10-10-1,PNT.,ACV.
			V.1, 2, 3, SC.10-1, HER., TR.2,4.	104438	Washer	22	SC.10-10-1,PNT.,ACV. HER.
61917		65, 69 95, 116	TR.2, 4.	104445	Spring	22	SC.10,10-1,PNT., ACV. HER.
70391	Sundry Parts Set	54	STB., ACV., PNT., TR.2, 4, V.1, 2, 3, HER., SC.10.	104449	Core Plug	21	TR.2,3,4, ACV., PNT., EN., SC.10, 10-1, HER., VIG., V.3.
100148 100419	Speedo Cable Clip 4 Stud	16, 121 4	EN., TR.2, 3, 4.	104466	Washer	22	SC.10,10-1,PNT.,ACV.
100433	Stud	2		404540	6 1.4		HER.
100455	Nut	48	PNT., ACV., HER., SC.10, 10-1.	104549	Shim		SC.10,10-1,PNT.,ACV. HER.
100498	Nut	10	PNT., ACV., HER.,	104554	Bolt	31	SC.10,10-1, PNT., HER.
			SC.10, 10-1.	104556	Bearing	31	SC.10,10-1, PNT., HER.
100500	Set, Screw	6	SC.10,10-1, ACV., HER.	104557	Bearing	31	SC.10,10-1, PNT., HER.
100501	Screw	2	SC.10, 10-1, PNT.,	104561	Shim	32	SC.10,10-1, PNT., HER.
			ACV., HER.	104562	Shim	32	SC.10,10-1, PNT., HER.
100562	Shim, Adjusting Bearing	, 31	PNT., EN., STB., ACV.,	104563	Shim		SC.10,10-1, PNT., HER.
	.003″		HER., V.1,2,3, TR.2,	104570 104571	Washer Gear	31 31	SC.10,10-1, PNT., HER. SC.10,10-1, PNT., HER.
1005/3	Clair All in B	24	3,4, SC.10-1.	104572	Washer	31	SC.10,10-1, PNT., HER.
100563	Shim, Adjusting Bearing	, 31	PNT., SC.10-1, STB.,	104573	Pin	31	SC.10,10-1, PNT., HER.
	.005″		ACV., EN., V. 3,	104581	Key	32	SC.10,10-1, PNT., HER.
100544	China Adimatina Danata	24	TR. 2, 3, 4.	104582	Catcher		SC.10,10-1, PNT., HER.
100564	Shim, Adjusting Bearing, .010"	, 31	PNT., SC.10-1, STB.,	104585	Bearing	32	SC.10,10-1, PNT., HER.
	.010		V.3, TR.2, 3, 4, EN.,	104737	Pawl	43	SC.10,10-1, PNT., HER.
100764	Daniel -	•	ACV., HER.	104738	Pin	43	SC.10,10-1, PNT., HER.
	Bearing	9	SC.10, PNT., ACV., HER.	104740	Spring	43	SC.10,10-1, PNT., HER. TR.4.
100847	Gasket	9, 118	SC. 10, 10-1, PNT.,	104742	Ratchet	43	SC.10,10-1, PNT., HER.
			ACV., HER.	104742	Pin	43	SC.10,10-1, PNT., HER.
00851	Circlip	9	SC. 10, 10-1, PNT.,	104743	Fork-end	43	SC.10,10-1, PNT., HER.
			ACV., HER.	104747	Pin	43	SC.10,10-1, PNT., HER.
00858	Seal	9	HER., PNT., STB., EN.,	104730	Housing	32	SC.10,10-1, PNT., HER.
		•	SC.8, 10-1, V.1, 2, 3,	104773	Main Bearing	6	SC.10,10-1, PN1., PER.
			ACV., TR.2, 4.			J	HER.

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
104820	Washer	6	SC.10,10-1, PNT., ACV.	106090	Washer	41	SC. 10, 10-1, TR. 3, 4,
104822	Oil Return Cover	2	HER. SC.10,10-1,PNT.,ACV.	106092	Circlip	41	PNT., ACV., HER. SC. 10, 10-1, TR. 3, 4,
104823	Valve Tappet	5	HER. SC.10,10-1,PNT.,ACV. HER.	106094	Reservoir Lid	41	PNT., ACV., HER. SC. 10, 10-1, PNT., TR.4, ACV.
104838	Collar	5	SC.10,10-1, PNT., ACV. HER.	106095	Gasket	41	SC. 10, 10-1, PNT., HER., TR.4.
104839 104840	Spindle Impellor		SC.10,10-1, ACV., HER. SC.10,10-1, PNT., ACV.	106155	Plunger	41	SC. 10, 10-1, PNT., HER.
104841	Piece		HER. SC.10,10-1,PNT., ACV.	106156	Spring	41	SC. 10, 10-1, TR. 3, PNT., HER.
104859	Screw		HER. SC.10,10-1,PNT.,ACV.	106157	Valve Stem	41	SC. 10, 10-1, TR. 3, 4, PNT., ACV., HER.
104863	Sealing Block		HER. SC.10,10-1,PNT., ACV.	106158	Valve Seal	41	SC. 10, 10-1, TR. 3, 4, PNT., ACV., HER.
104863	Joint Washer		HER. SC.10,10-1, PNT., ACV.	106254	Reverse Operating Leve Assembly	r 23	SC. 10, 10-1, PNT., ACV., HER.
	Plain Washer	72	HER.	106262	Washer	22	SC. 10, 10-1, PNT., HER.
105002 105114	Plate		SC.10,10-1,PNT., ACV. HER.	106268	Selector Fork	21	SC. 10-1, PNT., ACV., HER.
105116	Bolt	6	SC.10,10-1,PNT.,ACV. HER.	106269	Joint Washer	21	SC. 10, 10-1, PNT., ACV., HER.
105118	Collar, Spring, Lower	5	SC.10-1, PNT., ACV., HER., SP.4.	106270	Washer	23	SC. 10, 10-1, PNT., ACV., HER.
105123	Stud	4	SC.10,10-1.PNT., ACV. HER.	106271	Washer	23	SC. 10, 10-1, PNT., ACV., HER.
105124 105131	Stud Timing Chain	4 6	SC.10,10-1,PNTACV.	106365	Thrower	22	SC. 10, 10-1, PNT., ACV., HER.
105143	Bush		HER. SC.10,10-1,PNT.,ACV.	106388	Plunger Spring	22	TR. 3, SC. 10, 10-1, PNT., ACV.
105290	Clamp Plate		HER. V. 2, 3, SC.8, 10, 10-1,	106437	Joint Washer	20, 120	SC. 10, 10-1, PNT., ACV., HER.
	,		STB., TR.2,3,4, EN., PNT., HER., ACV.	106443	Fulcrum	23	SC. 10, 10-1, PNT., ACV., HER., TR.4.
105291 105292	Flexible Strip Strip	48 48	PNT., EN., SC.8, 10,	106475	Pin	22	SC.10,10-1, PNT., SC.8, ACV., HER.
			SC.10, STB., V.2, 3, ACV., HER.	106476	Screw	23	SC. 10, 10-1, PNT., ACV., HER.
105321	Joint Washer		SC.10,10-1,PNT., ACV. HER.	106477	Screw	23	SC. 10, 10-1, PNT., ACV., HER.
105322	Rocker Spring		SC.10,10-1,PNT.,ACV. HER.	106478	Pin	21	SC.10,10-1,PNT.,ACV.
105 4 38	Nut		SC.10,10-1, PNT., TR.4, HER.	106481	Plunger	21	HER. SC.10,10-1, PNT., ACV.
105578	Bracket, Front Pipe an Silencer Mounting			106489	Spring	21	HER. SC.10,10-1,PNT., ACV.
105605	Bush	40	SC.10, 10-1, STB., SC.8-1, V.3, EN.,	106663	Split Cone	5	HER., TR.4. ACV., HER., TR.2,3,4.
105676	Cover, Bleed Screw	45	PNT., ACV., HER. TR.4.	106664	Washer	32	SC.10,10-1, PNT., HER.
105689	Spring		SC. 10, 10-1, PNT.,	106957 107072	Stud Gasket	21 42 65	PNT., HER., TR.2,3. PNT., HER.
105690	Spring		HER. SC.10,10-1,PNT., ACV.	107099	Plug		SC. 10, 10-1, PNT., ACV., HER.
103070	Spi ing	-1.5	HER.	107193	Seal	32	SC.10,10-1, PNT., HER.
106036	Clip	43	SC.10,10-1, PNT., HER. ACV.	107246	Plug		SC. 10, 10-1, PNT., ACV., HER.
106088	Spring Retainer	41	SC. 10, 10-1, TR. 3, 4, PNT., ACV., HER.	107285	Windscreen Wiper Switch	68	SC.10,10-1,PNT.,ACV. HER., TR.2,3.

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
107401	Dowel	7	SC. 10, 10-1, PNT.,	111424	Bush	22	SC. 10, PNT., ACV.,
107741	Datainan	27	ACV., HER.	111070			HER.
107741	Retainer		TR.2,3.	111870	Valve Spring Collar (Upp		HER.
107857	Tab Washer		TR.2,3,4.	111871	Valve Spring Collar (Low		HER.
107858	Balance	6	TR.2,3,4.	111872	Push Rod Tube	4	ACV., HER., PNT.,
107948	Wheel Nut—R.H.	34	TR.2,3,4.				SC.10.
107949	Wheel Nut-L.H.	34	TR.2,3,4.	111979	Taper Seal on Plunger	41	PNT., HER.
108020	Selector Shaft	21	SC.10, PNT., ACV., HER.	112394	Circlip		SC.10, PNT., ACV., HER.
108021	Selector Shaft	21	SC.10, PNT., HER.	112429	Stud 2	7. 32	SC.10,10-1, PNT., HER.
108450	Wheel Nut Mallet	34	TR.2,3,4.	112527	Clutch Throw-out Bearing	g 19	EN., SC.10.10-1, PNT.
108495	Washer	6	TR.2,3,4.		,	,	ACV., HER.
108496	Bush	6	TR.2,3,4.	112626	Rear Gasket	120	/ IOTI, TIERL
108499	Sleeve	6	TR.2,3,4.	112654	Snap Ring	22	
108657	Brush, Horn Push		HER., TR.4.	113071	Spindle		CC 10 DNIT ACV
108756	Connection Screw				•		SC.10, PNT., ACV., HER.
1007.50	Sciew	17, 43	SC. 10, TR. 3, 4, PNT.,	113087			HER.
100757	Oil Seel	20	ACV., HER.	113150	Bolt	44	
108757	Oil Seal		SC. 10, 10-1, PNT., ACV., HER.	113229	Thrust Washer	28	SC. 10, PNT., ACV., HER.
108860	Casing	57	STB., SC.10-1, TR.2,4,	113256	Medallion	34	TR.3,4, T.2000, HER.
			PNT., ACV., HER.,	113270	Grommet		STB., SC. 10-1, EN.,
			V.3.				PNT., HER., V.3.
108935	Washer	31	SC.10, PNT., HER.	113569	Oil Filler Cap	5	TR.2,4, SC.8,10, 10-1,
108936	Washer		SC.10, PNT., HER.	1	F		STB., EN., PNT.,
108937	Washer		SC.10, PNT., HER.				ACV., HER., V.3.
108938	Washer		SC.10, PNT., HER.	113797	Cup	22	SC. 10, PNT., ACV.,
108939	Washer		SC.10, PNT., HER.	113,77	Cop	22	
108976	Bolt		PNT., EN., STB., V.3,	113868	Selector Fork	24	HER,
			SC.8,10, 10-1.				SC. 10, PNT., ACV., HER.
108977	Rubber Bush	35	V.3, PNT., EN., STB.,	114006	Thrust Button	32	
400070			HER., SC.8,10, 10-1.	114438	Spring 3	9, 40	SC.8, 10, 10-1, ACV.,
108979	Gear		SC.10, PNT., HER.				HER.
109023	Rocker No. 1	5	SC.10-1, PNT., ACV.,	114749	Washer	32	SC.8,10, PNT., HER
109024	Rocker No. 2	5	HER. SC.10-1, PNT., ACV.,	114774	Taper Plug 2, 9, 20, 3	1, 94	SC.8,10, 10-1, ACV., EN., PNT., STB.,
100040	NI	20	HER.				TR.2,3,4, V.3, HER.
109049	Nut	32	SC.8,10, PNT., ACV.,	114781	Reverse Actuator	21	PNT., HER.
			HER.	115459	Hose Assembly	42	
109050	Flange	22	SC.8,10, PNT., ACV.	115706	Rubber Sleeve	66	STB., EN.
109054	Seal	32	SC.10, PNT., HER.	115783	Connector	49	
1 0919 0	Seal		SC.10,10-1, PNT., HER.	116011	Battery, 12 volt, 38 amp.	65	SC.8,10, 10-1, PNT.,
109438	Bolt		SC. 10, PNT., HER.,		·		ACV., HER.
			TR. 4.	116012	Battery (Dry), 12 volt,	65	SC.8,10, 10-1, PNT.,
110376	Pin	31	SC. 10, PNT., HER.		38 amp.		ACV.
110461	Strip	35		116278	Sleeve	10	
	•		SC.10,10-1, PNT., HER.	116511		19	
110748	Nut	4		i	Plug, Core	4	BRIG., 2 TON.
110777	Sealing Washer	49		116535	Driven Plate Assembly		EN.
110907	Spacer		SC.10, PNT., HER.	117400	Sleeve	69	STB., EN., PNT., V.3,
110959	Adaptor		SC.10,10-1, PNT., HER.	ł			HER., SC.8, SC.10,
110960	Plate, Flexible Joint		SC.10,10-1, PNT., HER.				COUR., 7 CWT.
110961	Flexible Joint Assembly	35	SC.10,10-1, PNT., HER.				VAN,ENDL.,T.2000.
111054	Tappet	44		117509	Washer	22	
111163	Valve Spacer	41	SC. 10, 10-1, TR. 3, 4, PNT., ACV., HER.,	117510	Oil Seal	20	ACV., SC.10, 10-1, PNT., HER.
			SC.8.	117511	Bearing	20	ACV., SC.10, 10-1,
111422	Thrust Washer	22	SC. 10, PNT., ACV., HER.		-		PNT., HER.
111122	hl			117547	Cap, Bearing, Retaining		HER.
111423	Bush	22	SC. 10, PNT., ACV.,	117575	Rubber Bush	33	
			HER.	117578			

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
117852	Rear Hub Assy. (Inner)	32	HER.	119891	Front Retaining Ring	23	ACV.
117853	Bearing Needle Roller	32	HER.	119892	Rear Retaining Ring		ACV.
117933	Ball Bearing		HER.	119893	Needle Rollers		ACV.
	•			1			HER.
117952	Oil Seal	32	HER.	120044	Pivot Bracket, Front End,	33	HEK.
118040	Internal Gear Lever	24	PNT., HER.	100015	L.H.		LIED
118041	Gear Lever Shaft	24	PNT., HER.	120045	Pivot Bracket, Front End,	33	HER.
118053	Seal, Oil, Shaft Top Cover				R.H.		ACM LIED DATE
118054 118507	Screw Bearing, Needle Roller	24 22	PNT., HER. SC.10, PNT., ACV.,	120124	Pin	44	ACV., HER., PNT., SC.10, TR.2.3.
			HER.	120132	Rear Wheel Cyl. Assy.	38	ACV., PNT.
118557	Retaining Stud	10		120134	Dust Cover	45	PNT., ACV., HER.
118577	Steering Wheel	35	HER.	120137	Spring Plate	45	ACV., PNT., SC. 10,
118599	Fulcrum Pin	33	HER.				HER.
118632	Plug	1	ACV., EN., SC. 10, HER., V.3.	120138	Retaining Plate	45	ACV., PNT., SC. 10, HER.
118686	Plug	1	V.6.	120139	Dust Cover	45	ACV., PNT., SC. 10,
118825	Shim	33	HER.				HER.
118826	Core Plug	31	HER.	120142	Adjuster Unit Assembly	44	PNT., ACV., HER.,
118977		, 31		1	, , , , , , , , , , , , , , , , , , , ,		SC.10, TR.2,3,4.
119096	Bearing, End Thrust		HER.	120305	Joint Washer	24	,
117070	Speedo Drive Shaft		112111	120307	Plate, Reverse, Baulk	24	PNT., HER.
110007	·	20	LIED	120308	Master Cylinder Assembly		HER.
119097	Speedo Assembly, Bearing	20	HER.	120300	(Clutch)	-11	TIEK.
119099	Oil Seal	20	HER.	120570	Bush, Spherical	24	HER.
119100	Speedo Driven Gear	20	HER.	120580	Trip, Reset, Flexible	67	TILIX.
119131	Speedo Driving Gear	22		120694	Angle Drive	121	
119142	Bolt	33	DAIT LIED	120844	Stud, Carb. Attachment	10	V.6.
119251	Cap, Retainer Spring		PNT., HER.	1		36	HER., TR.4.
119252	Reverse Baulk Spring	24		120941	Shim	36	HER.
119262	Bush, Operating Shaft	24		120946	Plunger		TR.4.
119263	Circlip	24	,	120948	Bellows	36	HER.
119272	Top Wishbone Arm and	27	HER.	120949	Shim	36	TR.4.
	Bush Assembly			120953	Spring	36	TR.4.
119312	Spring	5	V.6.	120955	Socket, Ball	36	TR.4.
119313	Spring	5	V.6.	120957	Washer, Tab	36 36	1 K.4.
119322	Washer 5,	118	V.6.	120959	Shim		TD 4
119324	Spherical Washer	10	V.6.	120968	Nut, Lock	36	TR.4.
119331	Grommet	17	V.6.	121251	Valve Spring	5	ACV., HER., SC. 10,
119389	Wheel	6	V.6.				PNT.
119390	Deflector	6	V.6.	121254	Link, Bonnet Attachment		HER.
119450	Rubber Bush	29		121255	Spacer, Bonnet Attachme		HER.
119451	Rubber Bush 27, 28	3, 33	HER.	121267	Flasher Unit	56	
119542	Gasket 9,	118	V.6.	121269	Starter Solenoid Switch		HER., TR.4.
119571	Nylon Bearing	32	HER.	121295	Wheel Nut-R.H.	34	TR.4.
119572	Distance Pin	32	HER.	121296	Wheel Nut-L.H.		TR.4.
119573	Dished Washer	24	PNT., HER.	121297	Wheel Nut Spanner		TR.4.
119575	Pedal Shaft	40	HER.	121398	Oil Pressure Indicator	3	HER., EN., ACV.
119581	Pedal, Mounting Bracket	40	HER.		Switch		
119583	Master Cylinder Brake and Clutch Support Bracket		HER.	121400	Lamp Assembly, Stop Tail Flasher	, 62	
119616	Warning Light Flasher	68		121.404	Reflex Unit	62	
119622	Guide	4	V.6.	121401	Compensating Selector		HER.
119729	Bolt, Connecting Rod		V.6.	121699	Seal, Dust (Rubber)		HER.
117727	Attachment	/	٠.0,	121755 121757	Bearing		HER.
440730		_	V/ /	1	Tab Washer		HER.
119730	Tab Washer, Locking Bolt		V.6.	121758			HER.
119758	Stud	1		121759	Shouldered Pin		HER.
119759	Washer	5		121760	Felt, Seal		nek.
119811	Push Rod		V.6.	121762	Bracket, Fulcrum Assy.,	73	
119812	Connecting Rod Assembly				Relay Lever		
119813	Bush, Small End		V.6.	121765	Bracket, Fulcrum,	73	
119889	Countershaft	23	ACV.		Handbrake Lever		

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
121766	Handbrake Cable Assembl	y 43	HER.	123502	Bracket	30	HER.
121770	Flange		HER.	123602	Earth, Tail Lamp		HER.
121782	Connector, Double End	42		123694	'U' Bolt		HER.
	Union	12		123715	Lifting Eye—Rear	30	
121860	Tab Washer	32	HER.	123716			V.6.
121862	Bolt	32		123760	Lifting Eye—Front		
121997	Temperature Transmitter		HEN.			10, 11	
122022	Shim	28	HER.	123761 123803	•	10, 11	
122092	Windscreen Wiper Tubing			123803	Screw, Bearing		HER.
122126	Oil Seal	28	HER.	123814	Shim, .009"		HER.
122132	Plug	9	HEN.	123817	Shim, .013"		HER.
122136	Filler Cap Assembly	46	HER.	123962	Shim, .020"		HER.
					Take-off Pipe Seal		HER.
122137	Upper Spring Assy. Plate	29	HER.	123998	Rubber Bush		HER.
122229		, 62		124954	Breather Pipe, Gasket		V.6.
122252	Pedal Assembly, Clutch	40		125054	Bolt	24	
122257	Valve	5	V.6.	125074	Stud, Anti-roll Bar		HER.
122258	Valve		V.6.	125170	Front Petrol Pipe	49	
122289	Pedal Pad (Rubber)		HER.		Connector		
122296	Push Rod Assembly		HER.	125189	Fuse Box		HER., EN., TR.4.
122392	Spring		HER.	125195	Ignition Coil		TR.3,4.
122438	Accelerator Mounting and	37	HER.	125217	Dust Cover	40	HER.
	Stop Bracket			125245	Switch	69	HER.
122496	Nylon Bearing	28		125441	Front Road Spring Packing	ng 29	HER.
122509	Ball Joint Assembly	27	HER.	125469	Clip, Harness Cable	66	HER.
122525	Clip	35		125481	Link Assembly—L.H.	30	HER.
122529	Upper Steering Column	35		125482	Link Assembly—L.H.	30	HER.
	Assembly			125505		0, 119	SC.8, 10, HER., PNT
122534	Lower Trunnion Dirt Seal	28			· ·	,	TR.4.
122536	Dirt Seal	33		125531	Sealing Ring 1	1, 118	
122569	Joint Washer	20	SC.8, 10, HER., ACV.,	125631	Oil Seal in Timing Cover		V.6.
			PNT.	125733	Strut, Lower Wishbone		HER.
122653	Setscrew 21	. 24	SC.8, 10, HER., EN.,	125781	Locating Screw		TR.4.
			PNT., ACV., TR.4.	125782	Locating Plate		TR.4,
122669	Steering Column Clamp	35	TR.4.	125905	Speedo Cable Bracket		HER.
122689	Outer Flexible Mounting	25		125957	Lead	66	V.6.
122695	Connection, Petrol Pipe		V.6,	126019	Cable, Temperature Gau		
122707			V.6.		to Temp. Transmitter	60 01	
122718	End Cap		TR.4.	126022	Bulbholder & Cable, 6	7 118	
122719	Bearing Washer	35		120022	Temperature Gauge	, 110	
122744	Thermostat Unit	117		126264		7, 118	
	(Winter Setting)			120201	and Oil Gauge	, 110	
122745		119		126322	Dynamo Pulley	18	ACV., HER.
	½" A/F, 7/10" A/F			126575	Gaiter	36	
122746	Pouch, Tool 50,	119		126577	Clip, Gaiter	36	TR.4.
122759	Foot Dipper Switch	65	ACV., HER., TR.2,3,4.	126586	Accelerator Pedal and	37	HER.
122779	Stop Light Switch 42	., 65			Support Bracket Assy.		
122780	Gasket 42	, 65		126587	Accelerator Pedal	37	HER.
122781	Wheelbox Assembly	57	HER.	126607	Top Cover Extension Ca	p 24	HER.
122796	Connector, Tank to Pipe	49		126746	Bracket Assembly	118	
122806	Nave Plate	34	HER.		(Reverse Light Switch)		
123100	Rear Damper		HER.	126750	Arm Operating Assembly		
123135	Operating Lever Wheel	45	HER.	126754	Dowel Some		HER.
	Cylinder Assembly	-		126765			
123231	Cap, Spring Plate	20		1	Spring	36	HER.
	–	29		126767	Tail Pipe (Exhaust)	96	V//
123286	Gauge Unit Cover	49		126784	Pedestal Distributor		V.6.
123287	Stiffener Plate	26	LIED	126785	Distributor Gear	8	V.6.
123312	Bolt	28	HER.	126786	Distributor and Oil Pum	P 8	V.6.
123 4 15	Exhaust Pipe 28, 48,	118	V.1.		Drive Shaft		
123451	Gasket Body Harness		HER.	126787 126792	Bush	1	V.6.

Part No.	Description Pa	ge Also Used on Models	Part No.	Description	Page	Also Used on Models
134901	Washer 15, 11	3 V.6.	128404	Sparking Plug	18	V.6.
126901		3 V.6,	1	Pedestal Pedestal		V.6, HER.
126902		5 V.6.	1	Pedestal	5	V.6, HER.
126938	1			Flinger	32	HER.
27311	,			Circlip .058"/.059"		HER.
127380	Overdrive Inhibitor 118, 12		•		18	TILIX.
	Switch	4	128738	Engine Lead	10	
127398	4 (-1 //	4	420720	Complete No. 1	10	
	Manifold Attachment		128739	Engine Lead	18	
127400		2	1207.10	Complete No. 2, 3	40	
127401		2	128740	Engine Lead	18	
127651	Ignition and Starter Switch 7		100711	Complete No. 6	40	
127652	1000	2 V.6.	128741	Engine Lead	18	
127653	D ipotitum	2 V.6.		Complete No. 4		
127689	Link 1		128742	Engine Lead	18	
127732	Body	2		Complete No. 5		
127740	Actuator Shaft 12		128774	Engine Lead	18	V.6.
127741	Coupling, Gear Lever Shaft 2	4 HER.		Baffle, Breather Pipe	3	V.6.
127745		9 V.6.		Tubing, Choke Control	15	
	71°C. opening		120110	fitted on Link Wire		
127751	Adaptor 9	3 V.6.	128919	Wire, Link, Choke Contr	ol 15	
127883		6 ACV., TR.4.	1	Oil Seal		HER,
127000	Dowel		129058	Push Rod	5	
407047		4	l .	Piston Assembly	7	
127916		6 TR.4.	1	Compression Plated Ring	7	
127995			1	Compression Tapered Rin		
127996	1 1.1.10.1.1, 2.11.1.11	6 TR.4.	129061		ig 7	
127997	,	6 HER., TR.4.	1	Scraper Ring	7	
127998	4 4 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	6 TR.4.	129063	Gudgeon Pin		
127999		6 TR.4.	129101	Wire Mesh	3	V.6.
128000	Washer, Thrust, Lower 3	6 TR.4.	129118	Bush	24	
128001	End Plug 3	6 TR.4.	129119	Sleeve	24	ACV.
128002	Bush, Rack Tube 3	5 TR.4.	129121	Gear Lever	24	HER.
128004	Bellows, Pinion End 3	6 TR.4.	129361	Bolt 34	, 121	
128008	Pin 3	6 TR.4.	129619	Stud	10	
128020	End Cover 3	5 TR.4.	129650	Tapping Plate	26	
128021	'O' Ring 3	6 TR.4.	129781	Bolt	31	HER.
128022	•	6 TR.4, SP.4, HER.	129795	Gauze Strainer	2	
128023		6 TR.4.	129839	Circlip	22	
128024		6 TR.4.	129889	Adaptor	1	
128087		8 V.6, TR.4, T.2000.	129897	Outer Hub Bearing	32	
128088		8 V.6, TR.4, T.2000.	129914	Bracket Assembly, L.H.	56	
		3 V.6, T.2000.	129915	Bracket Assembly, R.H.	56	
128089		4 HER.	129917	Oil Filter Assembly		V.6.
128133		2 HER.	127717	(Full Flow Type)	''	* 101
128135	10110 011-11				44	V.,
128188			129925	Oil Filter Element		V.6.
128192	Lamp, Reverse 11		129952	Operating Shaft Assembly		HER.
128217	· · - · · ·	5	129961	Inner Ball Joint Assembly		TR.4.
128262		5	129963	Sleeve, Adaptor	36	TR.4, SP.4, T.200
128265	Lead, Feed, Reverse 11 Lamp Switch	8				HER.
	•	0	130031	Shim, .002"		TR.4.
128266	Harness, Reverse Lamp 11	8	130032	Shim, .010"		TR.4.
	to Switch		130034	Wiper Arm, R.H.S.		HER.
128267	Lead, Earth, Reverse Lamp 11		1	Wiper Arm R.H.S.		HER.
128334	Valve, Inner Collar	5 ACV.	130035	Wiper Arm, L.H.S.		HER.
128335	Valve, Outer Collar	5 ACV.	130035/TEX	Wiper Arm, L.H.S.	57	HER.
128348		4 HER.	130036	Windscreen Wiper Blade	57	V.6.
128352		3 HER.	1	Wiper Blade	57	HER.
128356		6	130355	Differential Bearing	31	HER.
		4 HER.	130449	Sparking Plug	18	
128373	Lighting Switch	66 SP.4.	130484	Bracket		HER.
128383	0 0	7 V.6.	130544	Windscreen Wiper		TR.4, SP.4.
128391	Big End Bearing	7 7.0.	130344	TTHIOSCIECT VVIPE	00	111.1, 51.1.

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Mod
130545	Washer	68	SP.4.	132115	Stud	120	
130546	Overdrive Switch, L.H.S.			132125	Master Cylinder Assembl		
30757	Lower Wishbone Fulcrum				(Brake)	, .,	
	Bracket (Front)			132130	Steering Column Upper	35	HER.
130758	Lower Wishbone Fulcrum Bracket (Rear)	28		132135	Assembly, Locking Switch Ignition Starter	15, 68	TR.4, SP.4, HER.
130813	Insert, Exhaust Valve Seat	4	V.6.		& Steering Column		
13081 4	Insert, Inlet Valve Seat	4	V.6.		Lock Device Assy.		
30879	Overdrive Switch, R.H.S.	120		132239	Rod, Push	19	
130907	Breather Assembly	3		132292	Front End Cover Oil Seal	20	
131008	Rear Road Spring Stud	31	HER.	132293	Reverse Idler Gear Assy.	23	
131102	Blade, Spring	33	HER.	132296	2nd Speed Gear	22	
131118	Pin, Centre	33	HER.	132297	Clutch Slave Cylinder As	sy. 19	
131144	Cable, Fuel Gauge to	67		132299	Inner Axle Shaft Assemble	y 32	
	Temperature Gauge			132300	Outer Axle Shaft and	32	
131227	Horn Push Assembly	56	HER., TR.4.		Flinger Assy. (B.R.D.)		
131233	Nut, Jam, L.H. Thread	81	HER.	132304	Drain Pipe	10	
131234	Stay Rod, Bonnet	81	HER.	132321	Flywheel Assembly	6	
131246	Knob	24	TR.4.	132328	Flange, Yoke	32	
131273	Toggle Switch, 56, 69, 93	, 94	HER.	132356	Bracket	37	
	Heater			132359	Support Bracket	17	
131274	Flasher Indicator Switch	56	HER.	132360	Tube	17	
131294	Accelerator Control Cable	37		132365	Mounting Bracket, R.H.S		
	Inner (R.H.S. only)			132366	Mounting Bracket, L.H.S.		
131295	Accelerator Control Cable	37		132435	Rear Axle Mounting Brks		
	Outer (R.H.S. only)	•		132439	Bolt	44	
131312	Handbrake Lever Grip	43	HER., TR.4.	132446	1st/2nd Gear and Sleeve	22	
131437	Fuel Gauge	67		1 ,321.0	Assembly		
131438	Fuel Gauge	67		132450	Ball Joint Assembly	36	
131439	Temperature Gauge	67		132495	Stud, Rocker Pedestal	4	
131535	Spring, Piston	2		132569	Stop Light Switch	65	HER., ENDL.
131567	Rear Hub and Stud Assy.	32	HER.	132586	Lever Assembly	43	TILIKI, ENDE.
131570	Starter Motor Packing	54	HER,	132588	Rod Assembly, Handbrak		
131796	Mounting Rubber	31		132589	Handbrake Assembly	43	
131806	Spring, Pull-off, Handbrake			132614	Front Stowage Bracket	30	
	Rear Cable			132615	Bracket	26	
131807		, 43		132634		16, 47	
131812	Switch	69	SP.4, TR.4.	132635	•	16, 47	
132023	Bolt	32	51.1, 110.4.	132637	Overflow Pipe	46	
132023	Shim, Lower Trunnion	28		132639	Pipe Clip	48	
132039	Distance Piece	28		1			
132044	Nipple, Cable Attachment			132650 132664	Circlip Oil Seal Assembly	32	
132053	Screwed Cap	36		132665	Hub End Cover	27 27	
132055	Shim	36		132666	'D' Washer	27	
132063	Bottom Trunnion Assy.,	28		1			
132003	, .	20		132667	Retainer, Felt Seal	27	
	L.H.			132668	Felt, Seal	27	
132064	Bottom Trunnion Assy., R.H.	28		132669 132673	Front Engine Mounting Lighting Switch—Offside	25 56	
132065	Stub Axle	27			Head and Flashing		
132066	Hub Bearing, Inner	27		132674	Lighting Switch—Dip, Sie	de 56	
132077	Clutch Housing and Front End Cover Assembly	20		132751	and Flashing, L.H.S. Accelerator Control Cab	le, 37	
132078	Front End Cover	20			Outer		
132078	Fulcrum Pin	20		132752	Accelerator Control Cab	le. 37	
132079		20 19		.52.52	Inner	, .,	
132000	Clutch Operating Lever	17		122752		27	
	Assembly			132753	Support Bracket	37	
132097	3rd Speed Gear	22		132763	Rear Vertical Link Assy.,	33	
132104	Suspension Bracket, R.H.	26			R.H.		
132105	Suspension Bracket, L.H.	26		132764	Rear Vertical Link Assy.,	33	
132107	Piston, Oil Relief	2			L.H.		

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
132856	Bolt	31		133996	Cylinder Lining	2	
132869	Switch	42		134056	Pipe Assembly—L.H.	42	
132872	Bolt, Dowel	21		134057	Pipe Assembly—R.H.	49	
132873	Stud, Engine Plate to Gearbox	1		134174	Starter Solenoid Switch (Cold Climate)	55	SP.4, HER.
132881	Hub Assembly	32		134175	Ignition Coil (Cold Climate	2) 51	SP.4, HER.
132898	Hose, Radiator to Header	46		134216	Bracket Assembly	120	
132912	Tank Radius Arm Assembly	33		134219	Overdrive Mounting Platform Assembly	120	
132958	Hose	42		134229	Flexible Mounting	120	
133034	Strut Assembly—L.H.	26	HER.	134290	Shaft	21	SP.4, HER.
133035	Strut Assembly—R.H.	26	HER.	134301	Earth Lead	66	31 . I, I I E K.
133037	Body Harness	65	· · · ·	134329	Overdrive Harness	120	
133043	Clip	42		134330	Gearbox Harness	120	
133073	Horn Mounting Bracket	56		134345	Bracket	48	
133103	Grease Plug	36		134416	Washer	48	
133103	Gauge	118	TR.4, HER.	134540	Bearing, Cross-shaft, R.H.S		
133120	Gauge	118	TR.4, HER.	134576	Tab, Return Spring	37	
133121	Bracket, Gearbox Mountin		TINT, TIEN,	134578	Lever, Carb. Throttle,	15	
133233	Lead, Engine to Earth	66		1343/6	fitted on Link	13	
133234	Key, Crankshaft Chainwho			134634	Rear Damper, Heavy Duty	33	
133235	Sleeve	6		134635		29	
133233	Fan Adaptor	6		134688	Damper, Front Pinion—L.H.S.	_	TR.4, SP.4.
		9			Pinion—L.H.S. Pinion—R.H.S.	36	
133239	Pulley			134689		36	SP.4.
133240	Dynamo Pedestal	18		134761	Cover, Top, Sub-Assembly		
133241	Bracket	18 18		134811	Front Damper and Road	29	
133243	Adjusting Link			124024	Spring Complete Assy.	44	
133244	Pulley and Damper	6		134821	Lever and Spindle	44	
133258	Bearing Housing Assembly			424022	Assembly Relay	47	
133277	Brake Pedal Assembly	40		134823	Foot, Mounting Header	46	
133279 133284	Bracket Assembly, Pedal Engine Mounting Bracket Assembly, R.H.	40 2		134829	Tank (Rear) Foot, Mounting Header Tank (Front)	46	
133285	Engine Mounting Bracket	2		134862	Relay Lever Assembly	43	
133203	Assembly, L.H.	-		134878	Link, Accelerator Cross-	43	
133289	Seal, Mounting	17			shaft to Relay Actuating		
133319	Bracket	119	SP.4, T.2000, HER.		Lever		
133322	Horn Switch	56	TR.4, SP.4.	134879	Link, Relay Lever to	44	
133325	Lead, Horn Extension	56			Carburettor Lever		
133326	Lead, Horn Extension	56		134880	Relay, Actuating Lever	44	
133363	Horn Assembly, High Note			134882	Link and Lever Assembly	15	
133450	Master Cylinder Brake	56		134891	•	2, 53	SP.4.
	Support Bracket			134887	Engine Lead Complete,	18	
133534	Pipe Assembly	42	SP.4.		No. 4		
133568	Rubber, Mounting, Rear Axle, Upper	31		134953	Washer, Felt, Accelerator Cross-shaft	43	
133587	Flange, Coupling	98		134955	Bracket Assembly,	43	
133770	Bracket Assembly	121			Accelerator Cross-shaft		
133771	Operating Arm Assembly			134985	Pedal Accelerator	43	
133788	Bracket, Steering Mountin L.H.			134997	Accelerator Pedal and Support Bracket Assy.	43	
133789	Bracket, Steering Mountin R.H.	g, 2 6		134998	Bracket Assy., Accelerator Mounting and Stop	43	
133803	Short Stud	1		136402	Header Tank Assembly	46	SP.4.
133804	Short Stud	1		136451	Rear Wheel Cylinder Assy		
133805	Stud	1		136487	Spring, Valve	5	SP.4, HER.
133823	Clip	12		136666	Pedal—R.H.S.	40	HER.
133872	Mounting Rubber, Steering	36		136824	Clutch Cover Assembly	19	
133874	Clamp	36		136908	Piece, Three-way	42	BRIG., SP.4, HER.

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on	Models
136968	Extension	39		139541	Engine Lead	18		
136990	Plunger	21	SP.4, HER.	139564	Switch	68		
137075	Connection—Five-way		HER.	139566	Nut	68		
137248	Pedal—R.H.S.	38	V.6.	139567/O	Cable	67		
137257	Accel. Pedal and Support	38		139567/I	Cable	67		
	Bracket Assy.—R.H.S.	30		139836	Stud		T 2000	
27200		400		139909		1	T.2000.	
37308	Spring, Ring	122		1	Clip—R.H.S. & L.H.S.	38		
37373	Packing		T.2000.	139916	Pedal—R.H.S.	38		
137374	Oil Retaining Cover, Rear		T.2000, HER., V.6.	139918	Accelerator Pedal and	38		
37532	Spring	23		430034	Support	20		
137630	Foot Dipper Switch		T.2000.	139924	Accelerator Pedal and	38		
37632	Radiator Overflow Bottle		T.2000.		Support Bracket Assy.			
37691	Cap, Filler	47	T.2000.		L.H.S.			
37743	Cap, Overflow	52	T.2000.	139925	Pedal—L.H.S.	38		
37801	Stop, Rebound	20	HER.	139978	Flywheel Assembly	6		
37841	Valve, Exhaust	5	T.2000.	140038	Tail Pipe Finisher	127	HER.	
38051	Ring, Sealing	28	SP.4, HER.	140104	Lever	13		
38086	Piece, Distance	20	HER.	140106	Link	39		
38092	Bearing	20	HER.	140136/O	Cable	67		
38100	Hose	16		140136/I	Cable	67		
38126	Plate	3	T.2000.	140549	Clip	3 5		
38176	Cap, Oil Filler	5	T.2000, SP.4, HER.	140626	Flasher Indicator Switch	56		
138316/O	Cable	67	SP.4.	140755	Steering Column Upper	35		
38316/I	Cable	67			Assembly			
38476			HER.	140892		8, 119		
38477	Pipe		HER.	140893		8, 119		
38526	Bolt		T.2000, SP.4, HER., V.6	140894		8, 119		
38529	Bolt	7	SP.4, V.6, HER.	140919	Bottom Trunnion Assy.	28		
138548	Connecting Rod Assembly		T.2000, V.6.		—R.H.	20		
138667	Pad, Lining		SP.4, HER.	140920	Bottom Trunnion Assy.	28		
138669	Lead	67	3F.4, HER.	1	—L.H.	20		
38684	Insert		LIED	140970	Thermostat Unit	9		
38685	Bush		HER.	140770	(82° C. opening)	,		
38686	Bush		SP.4, HER.	141218	Bearing	32		
38701	Gasket		SP.4, HER.	141221	Piece, Distance	32		
38715			T.2000, HER., V.6.	141435	Dirt Seal	32		
138717	Pedal—L.H.S.		HER.	141443	Shim	32		
138767	Bracket Assy.—R.H.S.		HER.	141444	Shim	32		
	Shim—R.H.		SP.4, HER.	141625				
38768	Shim—L.H.		SP.4, HER.	141025	Steering Column Upper	35		
38791	Washer		V.6, T.2000.	4.44.000	Assembly, Locking			
38792	Gasket		T.2000, V.6.	141998	Hose	94		
38802	Pedal—R.H.S.		HER.	141999	Hose	93		
38803	Bracket Assy.—R.H.S.		HER.	142123	Pipe, Overflow	47		
38892	Clip		HER., V.6, T.2000.	142167	Washer	31		
38926		122		142168	Washer	31		
39243		120		142276	Body Assembly	9		
39288	Cover Assembly, Body	2		142597	Hub Adaptor—R.H.	34		
39500	Engine Lead Complete,	18		142598	Hub Adaptor—L.H.	34		
	No. 2			142701	Adaptor Nut	34		
39521	Bracket—R.H.	26	HER.	200535	Starter Motor	54	SC.10, 10-1,	PNT.
39522	Bracket-L.H.		HER.				ACV., HER.	
39523	Pipe Assembly—L.H.		HER.	201312	Joint Washer	7, 118	SC.10, PNT.,	ACV.
39529	Stop Light Switch	65					HER.	
39536		, 93		201316	Housing	9	SC.10, PNT.,	ACV
39538	Engine Lead Complete,	18			-		HER.	
39539	No. 1 Engine Lead Complete,	18		201350	Gear, Ring	6	SC.10, 10-1, ACV., HER.	PNT.
39540	No. 3 Engine Lead Complete,	18		201403	Fan Belt	6	SC.10, PNT., HER.	ACV.
	Nos. 5 & 6			203077	Front Brake Drum	45	HER.	

art No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Mode
203925	Cylinder Head Assembly	4		208893	Front Outrigger Assembly,	26	
204679	Mainshaft	22	ACV., SC.8, 10, 10-1, PNT., HER., ACV.,	208894	R.H. Front Outrigger Assembly,	26	
204731	Washer 2,	118	7 CWT. VAN.	208914	L.H. Distributor Assy., High	51	
204736	Rocker Shaft	5	V.6.	200714	Comp. Ratio Engine	31	
204741	Horn Assembly Clip	56	SC.10, HER., TR.4.	208923	Rocker Cover Assembly	5	
04878	Tube	4	30.70, 112,11, 111.11	208935	Bracket, R.H.	26	VIT., HER.
205053	Channel, Side Assembly	26		208936	Front Brake Caliper Assy.,		, ,
205303	Gauge Unit, Petrol Tank	49			L.H.		
205456	Front Engine Plate	3	ACV., HER., SC.10.	208937	Front Brake Caliper Assy.,	44	
05457	Washer 3,	118	ACV., SC.10, HER.	ļ	R.H.		
05504	Tie Rod Lever-R.H.	28	HER.	208938	Front Carburettor Assy.	14	
05505	Tie Rod Lever-L.H.	28	HER.	208939	Rear Carburettor Assy.	14	
05526	Side Lamp Flasher	61		208942	Propellor Shaft (B.R.D.)	34	
05554 05593	Motor Tubing Clutch and Brake Pedal	57 40	HER. HER.	208943	Rear Damper Mounting Assembly	26	
	Assembly			208952	Voltage Current Regulator	65	
05642	Lower Steering Column	35		209000	Dynamo	54	
05997	Petrol Pipe	49		209009	Road Spring Assembly	29	
206540	Flasher-Side Lamp	62	HER.	209012	Front Cross Tube Assy.	31	
	(U.S.A. & Canada only)			209014	Water Elbow 46	, 47	
106623	Petrol Pump Assembly	12	V.6.	209036	SpeedometerMile	67	
206685	Lower Wishbone Assy.	28	HER.	209037	Speedometer—Kilo	67	
.06686	—R.H. Lower Wishbone Assy.	28	HER.	209049	Cylinder Head Assembly, with Valves and Springs	4	
	L.H.			1	(7 to 1 ratio)		
206977	Side Lamp Flasher	62		209058	Front Exhaust Pipe Assy.	48	
207093	Anti-roll Bar	30	HER.	209072	Vertical Link—R.H.	32	
07492	Timing Cover Assembly	7	V.6.	209073	Vertical Link—L.H.	32	
07857		118		209244	Fan Assembly	6	
207939	Air Box Assembly	17	LIED	209250	Horn Assy., High Note	56	
208001	Axle Casing Assembly	31 29	HER.	200254	(Windtone)	F.	
208022 208058	Front Damper Rack	35	HER.	209251	Horn Assy., Low Note	56	
208142	Gearbox, Mainshaft	120	THER.	209256	(Windtone) Brake Pedal Assembly	40	
208246	Outrigger Assembly, R.H.			209257	Rear Brake Assembly, L.H.		
2002-10	Intermediate	10		209258	Rear Brake Assembly, R.H.		
208247	Outrigger Assembly, L.H.	26		209259	Back Plate—L.H.	44	
	Intermediate			209260	Back Plate—R.H.	44	
208338	Propellor Shaft	121		209314	Extension Brake, Master	30	
2086 5 2	Gasket, Cylinder Head 4,				Cylinder Reservoir		
208659	Horn Assy., High Note	56		209330	Bracket, Damper Support	26	
	(Windtone)				Assembly—R.H.		
208660	Horn Assy., Low Note (Windtone)	56		209331	Bracket, Damper Support Assembly—L.H.	26	
208713	Shield, Dust—L.H.	44		209333	Mounting Plate	31	
208715	Friction Disc	44		209343	Pipe Assembly—R.H.	42	
208716	Caliper Mounting Plate,	28		209360	Bracket—R.H.	26	HER., VIT.
	R.H.			209361	Bracket—L.H.	26	HER.
208717	Caliper Mounting Plate, L.H.	28		209402	Front Damper and Road Spring Complete Assy.	29	
208718	Shield, Dust-R.H.	-14		209403	Bonnet Stay Assy.—R.H.	81	
208750	Rear Outrigger Assembly, R.H.			209404 209471	Bonnet Stay Assy.—L.H. Accelerator Cross-shaft	81 38	
208751	Rear Outrigger Assembly, L.H.	2 6		209499	R.H.S. only Lamp Assy., Stop, Tail and	63	
208788 208 82 0	Gear, Cluster Constant Pinion Shaft	23 22			Flasher, Red Lens (U.S.A. & Canada only)	-3	
208833	Rear Engine Plate	3		200502		40	
CC00033	Rear Engine Fidte	3		209503	Pipe Assembly	49	

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
209504	Pipe Assembly	42		305306	Radiator Block Assembly	4 6	
209543 209590	Rev. Counter Gearbox Extension Assy.	67 2 0	SP.4.	305452	Suction Pipe, Carburettor to Distributor	15	
209799	Accelerator Cross-shaft Assembly—L.H.S. only	38		305454	Pipe Assembly, Pump to Carburettor	12	
209815 209882	Platform, Rear Engine Mtg Brake Pedal AssyR.H.S.		HER.	305461	Extension, Rear Frame AssemblyR.H.	26	
210829 210860	Tube Assembly Cylinder Head Assembly	4	T.2000.	305462	Extension, Rear Frame Assembly—L.H.	26	
210892 210893	Plate—R.H. Plate—L.H.	28	SP.4, HER. SP.4, HER.	305489	Extension, Front Frame Assembly—R.H.	26	
210907 210908		', 21	T.2000.	305492	Extension, Front Frame Assembly—L.H.	26	
210926/M			SP.4, HER.	305506	Air Cleaner Assembly	17	
,	-			305523	Main Harness-L.H.S.		
		119		303323		66	
210926/P	,	119		305550	(U.S.A. only)	40	
		119	HER.	305559	Petrol Tank Assembly	49	
210926/S	Jack Assembly	50		305560	Exhaust Silencer and Tail	48	
210926/SH	Handle, Jack	50	HER.		Pipe Assembly		
210957 210958	Carburettor Assy.—Front Carburettor Assy.—Rear	13 13		305562	Headlamp Assy. 58, 59 R.H.S.	, 60	
210976	Cylinder Head Assembly	4		305562/B	Headlamp Assy.—Inner	58	
210988	Caliper Assembly—L.H.	44	SP.4, HER.	305563	Headlamp Assy., Inner	59	
210989	Caliper Assembly-R.H.	44	SP.4, HER.		Main Beam		
211125	Washer	2	T.2000, V.6.	305564	Headlamp Assy., Inner,	53	
211126	Washer, Joint		T.2000, HER., V.6.		Main Beam		
211127 211138	Brake Pedal Assy.—L.H.S. Belt, Fan		HER.	305565	Headlamp Assy., Inner, Main Beam	61	
211166 211399	Brake Pedal Assy.—R.H.S. Pipe Assembly—R.H.		HER.	305566	Headlamp Assy., Inner, Main Beam	60	
211403 211404	Speedometer—Mile Speedometer—Kilo	67 67		305569	Headlamp Assy., Outer, Main and Dip Beam—R.I	58 -LS.	
211407	Distributor Assembly	51		305569/B	Headlamp AssyOuter	58	
211414	Distributor Assembly	53		305570	Headlamp Assy., Outer,	59	
211514	Rear Engine Plate	3		300070	Main and Dip Beam	3,	
211529	Fan Assembly		T.2000.	305571	Headlamp Assy., Outer	58	
211544	Plate		HER.	303371	Main and Dip Beam	J 0	
	Washer			305572		(1	
211555 211737	Carburettor Assy.—Rear	10 13	٧.6.	.303372	Headlamp Assy., Outer, Main and Dip Beam	61	
211986	Fan Assembly	6		305573	Headlamp Assy., Outer,	60	
212124	Lamp Assembly, Stop, Tail and Flasher, Amber Lens				Main and Dip Beam		
212146	Bracket	47		305574	Headlamp Assy., Outer, Main and Dip Beam	59	
212344 30 316 3	Wire Wheel Body, Water Pump		V.6.	305575	Headlamp Assy., Outer, Main and Dip Beam	60	
303727	Rear Transverse Road	33	HER.	305588	Pipe, Water Return Assy.	99	
	Spring Assembly			305592	Bracket—R.H.	26	
30372711	Main Leaf	33	HER.	305593	Bracket—L.H.	26	
303304	Road Wheel	34	SP.4, HER.	305622	Main Harness	71	
304259	Road Wheel	34		305708	Complete Overdrive Unit	98	
304570	Extension, Top Cover	24		305763	Pipe Assembly	98 42	
304932	Oil Sump Assembly	2		i	•		
304950	Crankshaft	6		305764	Pipe Assembly	42	
304982	Differential Casing		HER.	305765	Pipe Assembly—R.H.	42	
305137	Gearbox Adaptor	120		305766	Pipe Assembly—L.H.	42.	
305273	Exhaust Manifold	10		305767	Pipe Assembly—R.H.	42	
305288	Rear Transverse Road		HER.	305768	Pipe Assembly—L.H.	42	
		33	1161	305769	Pipe Assembly	49	
	Spring			305770	Pipe Assembly	49	
305294	(Saloon & Convertible) Inlet Manifold	10		305775	Rack and Pinion Assy., R.H.S.	35	

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
305776	Rack and Pinion Assy., L.H.S.	35		500463	Washer, on Setscrew	1	V.1,2,3, STB., TR.2,3,4, EN.
305782	Main Harness	66 34	T.2000, SP.4.	500464	Copper Washer	20	SC.8, 10, STB., EN., HER., ACV., PNT.,
305789 305825	Wheel Trim Rear Frame Extension,	26	1.2000, 35.4.				TR.2, 3, 4, V.1, 2, 3.
305826	R.H. Rear Frame Extension,	26		500469	Washer	4	SC.8, 10, 10-1, PNT., ACV., HER.
	L.H.		CD 4 LIED	500492	Glass, Rear Number Plat	e 64	7.0., 7.2
305931	Rack and Pinion Assy., L.H.S.		SP.4, HER.	500568	Lamp Washer, Valve Plug	122	SC., STB., TR.2, 3, 4,
305932	Rack and Pinion Assy., R.H.S.	35	SP.4, HER.				VIG., EN., T.2000, V.3.
305945	Rear Transverse Road Spring Assembly (Convertible only)	33		500591	Plunger	122	SC., STB., EN., TR.2, 3, 4, VIG., V.3, T.2000.
305945/M	Leaf, Main (Conv. only)	33		500594	'O' Ring	122	STB., TR.2, 3, 4, EN., VIG., V.3, T.2000.
306133	Skid Plate Assembly	119	HER.	500613	Washer 12	3, 128	VIG., V.J, 1.2000.
306470 306480	Gearbox Case Front Suspension Unit R. with Disc Brakes	20 H. 27		500633	Spring	122	STB., TR.2,3,4, EN., SC., VIG., V.3, T.2000.
306481	Front Suspension Unit L. with Disc Brakes	H. 27		500642	Washer	123	STB., TR.2,3,4, EN., VIG., V.3, T.2000.
306512	Front Suspension Unit L.	H. 27		500872	Circlip	27	
306513	with Disc Brakes Front Suspension Unit L.	H. 27		500892	Pinion	54	SC.10, 10-1, PNT., ACV., HER.
	with Disc Brakes			500895	Screw, Self-tapping		10 H.P. EST.
306553), 122		500921	Circlip	9	SC.10, PNT., ACV., HER.
306767 306768	Main Harness (U.S.A. onl Main Harness	66		500926	Brush	54	SC.10,10-1,PNT., ACV.
306769	Pipe Assembly—Pump to	12		500927	Bush	54	
	Carburettor			500974 500975	Mills Pin Mills Pin	8 5	SC.10,10-1, PNT., ACV.
306785 307039	Camshaft Oil Sump Assembly	6 2		300773	11113 1111		HER.
307125 307134	Radiator Block Assembly Wheel Trim			500995	Shakeproof Washer	5	ACV.,SC.10,10-1,PNT. HER.
307245	Wood Rimmed Steering Wheel	117		501005	Diaphragm Assembly	12	STB., V.1,2,3, TR.2,3, EN., TR.4.
401458	Cable, Outer, Primary	69		501133	Lever	19	
401463	Cable, Inner	69		501258	Washer	2	SC.10,10-1,PNT.,ACV.
401464 401816	Cable, Outer, Secondary Cable	69 69	V.6.	F04.42.4	D. II		HER., TR.4.
401831	Cable	69	7.0.	501436 501606	Bulb Pin	64 124	TR.4.
401832	Cable	69		501652	Setscrew	87	
401833	Cable	69		501702	Fog Lamp, Small Type	117	
401835	Cable	69		501703	Spot Lamp, Small Type	117	
401836	Cable	69		501705	Brush Set	54	SC.10,10-1,PNT.,ACV.
401956 401988	Chassis Frame complete Chassis Frame Assembly	26 2 6		1			HER.
402337	Cable Assembly	69		501706	Bracket Assembly	54	SC.10,10-1,PNT.,ACV.
402339	Cable	69			B 1 51	40	HER.
402340	Cable	69		501707/LV	Brake Fluid	42, 50	SC.8, 10, 10-1, PNT., HER., TR.2,3,4.
402341	Cable	69		E01700	Spuing Sat	E 4	ACV., SC. 10, HER.
500186	Circlip	43	STB., V.1, 2, 3, PNT., HER., EN., SC.8,10, 10-1.	501708 501709	Spring Set Nut		SC.10, 10-1, PNT., HER., ACV.
500225	Washer		HER.	501710	Main Spring	54	SC.10, 10-1, PNT.,
500298	Screw, Self-tapping		7 CWT. VAN.	504744	Carrie	F.4	ACV., HER.
500 3 09 500 4 12	Plain Washer Mills Pin	79 123	HER., STB. EN., STB., V.3.	501711	Spring	54	SC.10, 10-1, PNT., ACV., HER.

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
501712	Bracket Assembly	54	SC.10, 10-1, PNT.,	505241	Gasket	12	SC. 10, PNT., ACV.,
501714	Armature Assembly	54	ACV., HER. SC.10, 10-1, PNT.,	505259		6, 82, 97	HER., V.3, EN.
501715	Coil	54	ACV., HER. SC.10, 10-1, PNT.,	505260 505306	Lock Washer Washer	107	ACV., V.EST., EN., V.3.
501718	Bush and Spring	51	ACV., HER.	505 44 6	Battery (Sealed), 12 vo 38 amp.	olt, 65	ACV., SC.8, 10, 10-1, PNT.
501997	Screw	14		505491	Rim	61, 62	TINI.
502136	Washer, Plain		SC.10,10-1, PNT., HER.	505492	Lens	61, 62	
502146	Packing Washer	120, 121		505825	Wing, Mirror, Bezel	117	
502148	Wire	35	SC.10, 10-1, STB., V.3, EN., PNT., HER.	505854 505856	Bulb Cover Grommet, Cable,	61 61, 62	
502210	Bolt	54	ACV., SC.10, HER.	•	Flasher		
502287	Stop/Tail Bulb	62, 63		506044	Sunwheel Assembly	123	SC.
502356	Lens, Roof Lamp		SC.10-1, 7 CWT. VAN.	506063	Rollers	123	SC.
502379 502450		61, 62, 63		506064	Operating Valve Lever	122	SC.
502450 50 2 455	Nut Washer, Plain	47 47	T.2000.		Assembly		
502459	Wing Mirror, Round			506066	Bearing Assembly	124	
502476	Screw, Self-tapping	90		506067	Speedometer Drive A	•	
502559	Cage		STB., TR.2,3, EN., V.3,	506070	Spring		SC., T.2000.
			VIG., T.2000.	506071	Washer		SC., T.2000.
502619	Screw	13		506076	Screw	122	
502658	Screw	103	HER.	506081	Housing	123	
502661	Washer	33	STB., V.3, EN., ACV.,	506082 506083	Stud Stud	122 122	
			HER.	506084	Bridge Piece	123	
502884	Nut		TR.2,3.	506091	Spring	123	
503213	Sleeve		EN., TR.4.	506097	Side Cover	122	
503467	Screw, Self-tapping	102	VIC 46V 5TD 1/2	506098	Joint for Plate	122	
503534	Rubber Washer	61, 62, 63	VIG., ACV., STB., V.3,	506099	Gear	124	SC.
503561	Screw, Rim fixing	61, 62	EN., HER., TR.4.	506101	Joint	122	
503603	Sundry Parts Set		ACV., STB., EN., PNT.	506103	Stud	122	SC.
	Sundi / Tures See	3,	TR.4, SC.10, 10-1,	506104	Plate	123	
			V.3.	506105	Stud	122	
503627	Nut	60, 63		506107 50610 8	Plate Washer	122	
503628	Washer		STB., V.3, EN., VIG.	506108	Side Cover Plate	124 123	
503661	Washer, Plain	84		506111	Bearing	123	
503678	Plate, Clamping	51		506112	Bearing	123	
503681	Contact Set	51		506113	Bearing	123	
503684	Plate, Contact Breake			506114	Plug	122	
503687	Bush, Insulating	51		506115	'O' Ring	124	
503688	Washer, Insulating Te			506117	Plug, Valve	122	SC., T.2000.
503690 503693	Lead, Earth Spring, Return, Micro	51 motor 51		506118	Washer	122	
503702	Screw	64		506119	Gear	124	
504621/O	Cable		SC.10-1, PNT.	506129	'O' Ring	122	
504621/I	Cable	67	SC.10-1, PNT.	506130 506155	'O' Ring	123	
504806	Sleeve		TR.4.	306133	Nut	7/	ACV., STB., BRIG., HER.
504877	Shoe Hold Down Spr		ACV., TR.3, PNT., SC.10.	506186	Setscrew	63	HER.
504878	Cup Washer	44	ACV., TR.3, PNT., SC.10, HER.	50654 2 506619	Circlip Interior Bulb Holder	40 61, 62	HER.
504968	Spring, Anti-Rattle	24		506620	Grommet, Cable, Side Lamp	61, 62	
505031	Clip	120		507002	·	10	
505239	Valve Assembly		SC. 10, PNT., ACV.,	507002	Eyebolt Cover	19 19	
	,		HER., V. 3, TR.4,	507003	Plate, Pressure	19	
			EN.	507005	Facing Package		EN.
505240	Retainer	12	SC.10, PNT., ACV.,	507032	Bezel	68	HER.
				_			

xlix

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Mode
507261	Thin Washer	83	ACV., HER.	509307	Bearing, Driving End	54	
507262	Thick Washer	83	ACV., HER.		Bracket		
07821	Screw, Set	79, 83		509308	Bracket Assy., Driving E	nd 54	
07900	Lead, Battery	66	HER.		(Less Bush)		
07903	Lead, Battery to Solend	oid 66		509309	Nut, Shaft	54	
07946	Screw	107		509312	Retainer, Bearing Ring	54	
07947	Rear Bush	57	HER.	509313	Collar, Drive End Bearin	g 54	
07948	Bush, Front	57	HER.	509315	Set, Terminal (Lucar)	54	
08137	Shade	68	HER., ACV.	509317	Set, Sundry Parts	54	
08138	Window (Amber)	68	HER., ACV.	509319	Condenser	51	
08139	Bulbholder	68	HER., ACV.	509324	Plate, Shaft and Action	51	
08169	Brush Gear	57	TR.4.	509361	Spanner, Open End 5	0, 119	
08170	Brush, Set	57	TR.4, SP.4, ENDL,.		.50" A/F, .56" A/F		
			BRIG., 2 TON,	509373	Screw	15	
			T.2000, HER.	509531	Screw, Self-tapping	89	
08182	Crosshead and Rack	57		509537	Circlip	36	TR.4.
08250	Screw, Self-tapping	94		509539	Screwed Plug	32	
08311	Inner Frame Glazed	83		509540	Bolt	15	
	Assembly—L.H.			509541	Nut	15	
08312	Inner Frame Glazed	83		509563	Washer	74	
	Assembly—R.H.	03		509572	Clip	118	
.00.433	,	45 50	LIED	509611	Screw, Sun Visor to Head	ler 90	
508433	Rear Brake Wheel	45, 50	HER.		Panel (Convertible on		
08445	Cylinder Service Kit Master Cylinder	41, 50	HER.	509651	Synchro Sleeve and Operating Sleeve Assy	22	HER.
	Service Kit			509675	Tow Bar Kit (Witter)	118	
08537	Interior Bulbholder,	61, 62		509688	Setscrew	101	
	Flasher			509736	Dome Nut	64	
08542	Lens	62	HER.	509792	Reversing Lamp Kit	118	
08543	Screw	62, 63	HER.	509815	Hypoid Housing Assy.	31	HER.
08544	Clip, Lens, Joint	62, 63	HER.	509817	Bracket Assembly	54	V.6.
508545	Stop/Tail Lamp	62, 63	HER.	509818	Bush	54	V.6.
08546	Gasket, Lens, Seating	62	HER.	509819	Spring Set, Brush Tension	n 54	HER.
08566	Screw	107		509820	Sleeve	54	V.6.
08701	Lamp Assembly—Stop,	, 62	HER.	509883	Centraliser Element	11	V.3.
	Tail, Flasher			509923	Glass Bowl	12	
08726	Clip, Cable, Temperati			509924	Screen Assembly	12	
	Transmitter Lead to)		509925	Diaphragm Spring	12	
	Dynamo Bracket			509926	Body and Primer	12	
08730	Cable Clip	66	HER., ACV.	509927	Primer Parts Set	12	
08890	Lens (Red Flasher)	62		509928	Upper Casting	12	
08955	Water Pump Repair K			509929	Bail Assembly, Bowl	12	
08975	Spindle and Rotor Assy				Attachment		
508977	Amber Bulb, 12v. 62 w		HER.	509930	Gasket	12	
08978	Circlip, retaining Gugo		V.6.	509944	Spindle, Throttle Assy.,	13	
08980	Retainer	12	T.2000.		Front Carburettor		
08981	Washer, Oil Seal		V.6.	509945	Lever, Intermediate	13	
08983	Arm, Rocker	12	V.6.	509946	Connection	15	V.6.
09161	Screw	89	HER.	509947	Float, Carburettor	14	
09191	Screw, Capping to 'B' P			509948	Spindle, Float	14	
09210	Screw	100	HER.	509950	Washer, Jet	14	
09224	Screw, Self-tapping	101	TR.4.	509953	Jet, Pump	14	
09260	Rubber Bush Top	29		509954	Gasket	14	
09281	Plain Washer	87	HER.	509956	Valve, Needle	14	
09289	Washer	98	HER.	509957	Washer, Needle Valve	14	
09302	Brush Set	54		509958	Gasket	14	
509304	Bush, Commutator End	d 54		509959	Screw	14	
	Bracket			509962	Body, Starter	14	
509305	Oiler Assembly	54		509963	Circlip	14	
509306	Spring Set, Brush Tens	ion 54		509964	Spring	14	

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Model
509966	Membrane Assy., Pump	14		511001	Bolt, Fixing	57	TR.4.
509967	Spring, Pump	14		511002	End Cover	57	
509968	Cover	14		511003	Armature	57	TR.4.
09970	Washer	15		511004	Field Coil	57	
09971	Spring	14		511005	Stud	57	TR.4.
09978	Cover	14		511006	Parking Switch	57	111.1.
10005	Crown Wheel and Pinion Assembly	31	HER.	511010	Plate, Contact Breaker Bearing	51	
510024	Arm, Rotor	51		511013	Nut, Knurled, Micrometer	51	
10045	Set, Sundry Parts	51		511013	Spring, Ratchet,	51	
10101	Screw	15		311014	Micrometer	31	
10101	Swivel	15		511031		44	
			V	1	Pin, Pad Retaining	44	
10107	Shell Assembly	11	V.6.	511032	Clip, Pin Retaining	44	
10108	Central Ball	11	V.6.	511033	Pad, Lining	44	
10109	Gasket	11	V.6.	511034		ł, 50	
10110	Spring	11	V.6.	511077	Shaft and Gear Assembly	57	
510111	Valve Assembly	11	V.6.	511086	Terminal, Bush and Lead	51	
10127	Plain Washer	112	HER.	511096	Rod, Connecting	57	TR.4, SP.4, END
510218	Bulb 59, 60), 61					HER.
10219	Bulb	58	TR.3, 4, SP.4, BRIG,	511109	Lead, Starter to Solenoid	66	
			2 TON, T.2000, HER.	511110	Lead, Battery to Solenoid	66	
510239	Setscrew	63	TR.4.	511117	Water Pump Assembly	9	
510273	Screw	91		511122	Cylinder Head Assembly	4	
10293	Setscrew	81		"	(with Valves and Springs		
10395	Motor Unit	93			(8.75 to 1 ratio)	''	
10408	Cotter Pin	31	HER.	511123	Cylinder Head Assembly	4	
510424	Spring	16	HER.	311123	· · · · · · · · · · · · · · · · · · ·		
510445	Screw, Set	89	HER.		(with Valves and Springs	•)	
				F44434	(7 to 1 ratio)	4	
510485 510497	Screw, Set Screw, Shell to Bottom	89 17	HER.	51112 4 511125	Cylinder Block Assembly Decarbonising 50,	1 118	
	Plate			311123	Gasket Set	110	
510498	Gasket, Screw	17		511126	High Compression	1	
510506	Washer, Lock	47	TR.4, T.2000		Engine Unit		
510526	Piston	19		511127	Low Compression	1	
510528	Spring, between Body and Piston	19			Engine Unit		
510529	Circlip, retaining Piston in Body	19		511236 511345	Book, Instruction Clip	50 120	
510533	Tube, Emulsion	14		511350	Rear Axle Centre Assy.	31	
510596	Fibre Washer	24		511355	Speedometer Cable Assy.		
	Valve, Starter Assembly	14		511355/O	Outer Speedometer Cable		
510616 510618	Nut, Nyloc		LIED	511355/I	Inner Speedometer Cable		
10638	. ,	51	HER.	511363		, 8 0	
	Weight Washer, Distance, fitted o			511364		, 80	
510716		n 13		511365		, 80	
	Spindle, Front Carb.			511370	Decarbonising, Gasket Set	1,50	
510756	Rim	62		511388	Gearbox Assembly	20	
510757	Screw, Rim fixing	62		51139 4	Screw, Rim Fixing		
510758	Lens	62			58, 59, 60	, 61	
510759	Grommet, Cable	62		511 4 01	Overdrive Kit	12 0	
510760	Base	62		511415	Screw, Slow Running	13	
10867	Top, Cover Extension and Hand Lever Assembly	24		511462 511468		119	
510907	Interior, Bulbholder	63	TR.4, COUR., SP.4,				
	Flasher	- •	T.2000, 2 TON.	511489 511498	Top Cover Assembly	21 19	
10013		00	, 2 1011,	511498	Nut, Eyebolt	19	
510913	Screw, Self-tapping	89	CD 4	511506	Nut, Nylon	32	
10940	Cover, Dust		SP.4.	511545	Сар	51	
10945	Seal	45	ENDL., 15 CWT, TR.4.	51 15 4 6	Screw		HER.
10975	Screw	65		511582	Cam	51	
10987	Motor and Gearbox	57		511583	Spring, Automatic	51	
510 99 5	Screw, Self-tapping	90			Advance (Set of 2)		

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Mode
511584	Clip, retaining Cup	51		511835	Element, Paper	17	
511585	Cover	65		511837	Rotor	52, 53	SP.4.
11586	Resistance, Swamp,	65		511838	Contact Set	52, 53	
11300	55 ohms.	•••		511839	Stud, Contact Arm	52, 53	
11587	Resistance, Points,	65		511840	Washer, Lock	52, 53	
11307	60 ohms.	00		511841	Nut, Contact Arm	52 ,53	
11589	Bracket Assy., Commutato	r 54		511842	Screw	52, 53	
11307	EN. (Less Bush)			511843	Condenser	52, 53	
11593	Armature Assembly	54		511844	Screw	52, 53	
311594	Coil, Field Set	54		511845	Lead L.T.		SP.4.
11596	Bolt		2 TON.	511846	Lead, Earth		SP.4.
11598	Rim 58, 59, 60			511847	Plate		SP.4.
11599	Light Unit 58, 59			511848	Screw	52, 53	
11599/B	Light Unit	58		511851	Felt Wick	52, 53	
511600	Adaptor 58, 59, 60			511856	Washer	52, 53	
11601	Attachment Set, 58, 59, 60			511857	Clip, Cap		SP.4.
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Seating Rim	,,		511858	Clamp, L.T. Lead		SP.4.
11602	Gasket, Lamp 58, 59, 60	0. 61		511859	Gear	52, 53	
111002	Seating	,,		511860	Washer	52, 53	
11603	Light Unit	58		511861	Plug	52, 53	
511603/B	Light Unit	58		511863	Ring, Oil Seal	52, 53	
511604	Light Unit	61		511864	Washer	52, 53	
511605	Light Unit	61		511865	Pin, Coupling	52, 53	
511605	Light Unit	59		511866	Coupling	52, 53	
511607	Light Unit	59		511947	Plate, Release Lever		2 TON.
	Light Unit	60		512072	Fog Lamp, Ranger Type	,	2 10111
611608 611609	Light Unit	58		512073	Spot Lamp, Ranger Typ		
511610	Light Unit	58		512086	Tube, Emulsion	16	
511611	0	8, 59		512087	Plug, Blanking	16	
,,,,,,,,	Bulb	0, 0,		512114	ŭ ţ	22, 128	
11/12	Light Unit	59		512371	Low Speed Flexibility	16	
511612 511613	Light Unit	60		312371	Improvement Kit		
511614	Continental Touring Kit	118		512372	Low Speed Flexibility	16	
511653	Brake Shoe Assembly	45		312372	Improvement Kit		
511655	Vacuum Unit, with	51		512390	Gearbox Assembly	20	
311633	Actuating Arm	٠,		512469	Top Cover Extension &		HER.
511774	Valve	94		312107	Hand Lever Assembly		,
511774	Screw	82		F42F20	Pad, Lining	44	SP.4, HER.
511814	Body Assembly—Front	13		512539	. •		JEA, HEN.
711011	Carburettor	13		512542	Tube, Choke	16	CD 4 LIED
E1101E	Jet, Econostat	14		512543	Ring, Sealing		SP.4, HER.
511815 511816	Emulsion Block	14		512544	Cap, Dust	45	
511817	Cover, Float Chamber,	14		512581	Oil Pressure Gauge Kit	118	HER.
	Front Carburettor			512582	Oil Pressure Gauge Kit (Metric)	118	HER.
511818	Bleed Air, Econstat	14		512655	Body Assembly, Front	13	
511819	Starter Assembly, Front	14		512656	Spindle	13	
511821	Lever, Starter Assembly,	15		512658	Washer	14	
	Front			512837	Cylinder Head Assemb		
511824	Screw, Locking	15		512838	Cylinder Head Assemb		
511825	Rod, Pump Control	14		1	•	,	T 2000
11826	Circlip	14		512958	Screw, Set	47 19	Т.2000.
511827	Body Assy., Rear Carb.	14		512970	Spring		
511828	Spindle, Throttle Assy., Rear Carburettor	15		513192 513193	Body Assembly Relief Valve Kit	122 122	
511829	Cover, Float Chamber, Rear Carburettor	14		513194 513195	Planet Carrier Assemb Annulus Assembly	ly 123 123	
E11930		14		513196	Oil Pump Plunger Assy	. 122	
511830	Starter Assembly, Rear			513197	Front Casing Assembly		
511831	Lever, Starter Assy., Rear Gasket, Rubber Filter	17		513198	Rear Casing Assembly	124	
511833	Element	17		513199	Spring	123	

lii

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
513200	Clutch Sliding Member	123		51 44 17	Lens, Red (U.S.A. &	63	
F43004	Assembly				Canada only)		
513201	Washer	123	T.2000.	514418	Gasket, Lens Seating	63	
513202	Oil Filler	122		514419	Washer, D.P. Cable Grip		
513203	Bolt	123		514420	Washer, S.P. Cable Grip	63	
513204	Washer	123		514426	Motor Unit, Heater	93	
513205	Magnet		T.2000.	514517	Wire Wheel Kit	34	
513206	Plug	122		514518	Wire Wheel Kit	34	
513207	Spring	122		514560	Fresh Air Intake Kit	94	
513208	Spring		T.2000.	550026	Washer	98	HER., TR.4.
513209	Freewheel Member	123		550517	Semi-tubular Rivet	83	
513210	Spring	123		550924	Washer, Waved		TR.4.
513211	Tube	124		552547	Clip	87	ACV., EN., SC.10,10-1
513212	Coupling	124					PNT.
513214/1	Adjustment Washer	123		553033	Clip, Cable	50	
513214/2	Adjustment Washer	123		553252	Button	104	HER.
513214/4	Adjustment Washer	123		554124	Pin, Mills, Grooved		HER.
513215	Plate	123		554127	Rivet		STB., V.3.
513216	Cam	122		554128	Strip, Glazing	74	HER.
513219	Spring	123		554134	River	74	
513220	Piston	123		554217	Ignition Locking Barrel	50	SC.8, 10, STB., V.3
513222	Body	122		1			PNT., TR.4, HER.
513223	Spring	123					EN.
513224	Bearing	123		554407	Rivet 7	4, 1 07	TR.4.
513225	Screw	123	T.2000.	554517	Socket	104	PNT., EN., SC.10-1
513226	Screw		T.2000.				STB., V.6, HER.
513227	Nut	123		554518	Stud, Tabs to Carpet	65	PNT., SC.10-1, EN.
513228	Ring	123					HER., V.6.
513229	Bearing	123		554519	Eyelet, Tabs to Carpet	65	PNT., SC.10-1, EN.
513231	Oil Seal	124					V.6.
513249	Screw	97		555861	Rubber Moulding	59	
513757	Gasket Set, Carburettor	13	T.2000.	556047	Signal Red—Spray	117	
513948	Washer		HER.	556052	Black—Spray	117	
513992	1.	2, 53		556141	Rivet		ACV., HER.
513993	Lead, Earth	53		557046	Locking Barrel with Key		ACV., TR.4.
513994	Lead, L.T.	53		557221	Rivet		ACV., HER.
513995	Plate	53		557222	Rivet	83	ACV., HER.
513996	Mainshaft	53		557799	Rivet		HER.
513997	Spring Set	53		557880	Lichfield Green—Spray	117	
513998	Control	53		557883	Powder Blue—Spray	117	
513999	Screw	53		557884	Pale Yellow—Spray	117	
513400	Clip, Cap	53		557887	Phantom Grey—Spray	117	
514002	Spring Set	52		557922	Rivet, Imex 74, 79, 8		HER.
514004	Mainshaft	57		557923	Clip		HER.
514005	Control	52		559176	Clip		HER.
514191	Bottom Trunnion	119		559178	Screw		HER.
	Conversion Kit			559182	Washer		HER.
514200	Adjusting Screw Assy.	123		559183	Washer		HER.
514292	Boot, Rubber	19		559356	Strip, Glazing Channel	84	HER.
514293	Seal	19		559474	Channel	83	HER.
514332	Piston	45		559513	Screw, Countershaft	84	
514333	Retainer, Dust Cover	45		559530	Washer		HER.
514356	Clutch Slave Cylinder Ass	y. 19		559531	Nut	84	HER.
514368	Engine Unit (8.75 to 1 Ratio)	1		559546	Rivet, Semi-tubular, Oval Head	84	
514369	Engine Unit (7 to 1 Ratio)	1		559547	Semi-tubular Rivet	84	
514370	Rear Bearing & Sealing Kit	32		559639	Wheelarch Cover Assy. (Matador Red.) L.H.		HER.
514397	Water Pump Assembly	9		559640	Wheelarch Cover	106	HER.
	, ,			1			1

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Model
559642	Wheelarch Cover	106	HER.	566063	Headlining, 'A' Post	104	
559643	Cover Assy., Wheelarch, Phantom Grey, R.H.	84		566284	Sebring White, R.H. Rear Cushion Cover Assy	112	
559892	Bracket Assembly,	75	HER.		(Matador Red)		
559925	Battery fixing Seal, Header Rail	78		566285	Rear Cushion Cover Assy (Phantom Grey)	. 112	
559930	Exterior Sun Visor	117		566286	Rear Cushion Cover Assy	. 112	
559980		3, 94	SC.8-10, PNT., HER.		(Black)	–	
560008	Phantom Grey—Pencil	117		566287	Cover	112	
560071	Roof Rack	117		566288	Cover	112	
560632	Wing Mirror 'D' Type	118	TR.3, SP.4, T.2000.	566600	Cover	115	
60839	Backlight	101		566611		, 1 10	
60840	Rear Quarter Light	101			Cover Assembly		
61210	Rivet, Imex	101	TR.4.	1	(Matador Red)		
62116	Bonnet Lock Kit	1 18		566612	Front Seat Cushion Cover	108	
62133	Button	101			Assy. (Phantom Grey)		
62134	Socket, Dot	101	TR.4.	566613		, 110	
62309	Wheelarch Cover Assy.	106	HER.	566614	Cover Assy. (Black) Cover Assy., Front 108	, 110	
562310	(Black) L.H. Wheelarch Cover Assy.	106	HER.	300014	Seat Cushion, P.V.C.	, 110	
	(Black), R.H.	0.5	LIER	566615	Trim (Black)	110	
62617	Detachable Nipple	95	HER.	566617	Cover Front Cushion Cover 109	110	
62714 62926	Tube Assembly Screw	96 97	HER.	300017	Assembly, Leather	, 110	
63044	Intermediate Stick Assy.	98	HER.		Trim (Mat. Red)		
63132	Front Stick Assy., Trimme			566618	Front Cushion Cover	109	
63162	Front Stick Assy., Trimme		V.6.	300010	Assembly, Leather	107	
63468	Cushion Cover Assy.,	112	v.o.	566619	Trim (Ph. Grey) Front Cushion Cover 109	110	
63469	Leather Trim (Mat. Rec Cushion Cover Assy., Leather Trim (Ph. Grey	112		360017	Assembly, Leather Trim (Black)	, 110	
63472	Cushion Cover Assy.,	[′] 112		566620	Cover	109	
	Leather Trim (Black)			566621	Cover 109	, 110	
63473	Cover	112	HER.	566623	Front Seat Squab 109	, 110	
63474	Cover	112	HER.		Cover Assembly		
63732	Squab Backing	114	HER.		(Matador Red)		
563769	Rivet, Imex 101	, 103	TR.4.	566624	Front Seat Squab	109	
63857	Lead	94	HER.		Cover Assembly		
63868	Webbing	101	HER.		(Phantom Grey)		
63976	Rear Cushion Cover Assy Leather Trim (Mat. Red			566625	Front Seat Squab 109 Cover Assy. (Black)	, 110	
63977	Rear Cushion Cover Assy.	, 113		566626	Cover 109	, 110	
	Leather Trim (Ph. Grey))		566627		, 110	
63980	Rear Cushion Cover Assy Leather Trim (Black)	., 113		566629	Assembly, Leather	, 110	
63982	Cover	113		F///30	Trim (Matador Red)	100	
63983	Cover	113		566630	Front Squab Cover Assy.,		
63992	Safety Belt Kit (Saloon)	118		F///24	Leather Trim (Ph. Grey		
563993	Safety Belt Kit (Conv.)	118		566631	Front Squab Cover 109	, 110	
64801	Bush	64			Assembly, Leather		
65290	Capping, Door, L.H.	107		F	Trim (Black)	440	
65291	Capping, Door, R.H.	107		566632		, 110	
65292	Capping, Quarter, L.H.	107		566633		, 110	
565293	Capping, Quarter, R.H.	107		566640	Rear Squab Cover Assy.	114	
565407	Renoir Blue—Spray	117			(Matador Red)		
65408	Renoir Blue—Pencil	117		566641	Rear Squab Cover Assy.	114	
566061	Headlining, Screen Head,	104		F	(Phantom Grey)	444	
566062	Sebring White, R.H. Headlining, 'A' Post,	104		566642	Rear Squab Cover Assy. (Black)	114	
	Sebring White, L.H.			566643	Cover	114	

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
566644	Cover	114		568116	Mat, Rubber, Rear Flo	or 104	
566647	Rear Squab Cover Assy., Leather Trim (Mat. Rec	114		568123	(Saloon only) Mat, Rubber, Rear Flo		
566648	Rear Squab Cover Assy.,	114			(Convertible only)		
566649	Leather Trim (Ph. Grey Rear Squab Cover Assy.,	,		568489	Panel, Veneered Assy., Facia	88	
566650	Leather Trim (Black) Cover	114		568637	Panel, Veneered Assy., Facia, L.H.S., Norma		
566651	Cover	114			Fitment		
566657	Rear Squab Cover Assy., P.V.C. Trim (Mat. Red)	115		568639	Panel, Veneered Assy., Facia, L.H.S., Temp.	88	
566658	Rear Squab Cover Assy., P.V.C. Trim (Ph. Grey)	115			Gauge Condition (U.S.A. and Canada)		
566659	Rear Squab Cover Assy., P.V.C. Trim (Black)	115		568993 569010	Badge Bar Bolt and Nut Assembly	117 , 86	
566661	Cover	115		367010	Lock Adjusting	, oo	
566663	Rear Squab Cover Assy., Leather Trim (Mat. Red	115		569011	'E' Clip, Locking Hand	le 86	
566664	Rear Squab Cover Assy.,	,		569012	Intermediate Stick Ass	y. 77	
566665	Leather Trim (Ph. Grey Rear Squab Cover Assy.,			569034	Body Shell, Prime Finis (Sunshine Roof)		
	Leather Trim (Black)			569036	Body Complete Painte	d 70	
566666	Cover	115			& Trimmed (Less Se		
566667	Cover	115		ŀ	Sunshine Roof Cond	ition	
566669	Rear Cushion Cover Assy. P.V.C. Trim (Mat. Red)	, 113		569037	Body Complete Painte & Trimmed (Including		
566670	Rear Cushion Cover Assy. P.V.C. Trim (Ph. Grey)	, 113			Seats) Sunshine Room Condition		
566671	Rear Cushion Cover Assy. P.V.C. Trim (Black)	, 113		569042	Dash & Windscreen Assy., Saloon, L.H.S.	71, 76	HER.
566672	Cover	113		569043	Dash & Windscreen	71, 76	HER.
566673	Cover	113		•	Assy., Saloon, R.H.S.		
566694	Veneered Facia Panel Assembly, L.H.S.	88		569044	Dash & Windscreen Assy., Convertible	71, 76	
566783	Peg, Locking	64		ļ	L.H.S.		
567017	Push Button	86		569045	Dash & Windscreen	71, 76	
567018	Push Button	86			Assy., Convertible		
567019	Locking Barrel	86			R.H.S.		
567021	Washer	86		569365	Cover	106	HER.
567022	Rubber Washer	86		569366	Cover		HER.
567023	Spring, Return	86		569367	Cover	106	HER.
567024	E' Clip	85		569368	Cover	106	HER.
567228	Rivet Clip	101		569994	Panel	88	
567272	Fresh Air Intake Kit with	94		600395 600421	Grommet	49	TD 2 2
	Blower Unit			600421	Plug Petrol Filler Cap		TR.2, 3. SC.10-1, 7 CWT. VAN,
567515	Sebring White—Spray	117		000-62	retion times Cap	117	PNT., HER.
567516	Sebring White—Pencil	117		(00/35	Francisco Handle	07	
567609	Mat, Rubber, Front, R.H.S			600635	Escutcheon, Handle		HER., TR.4.
567616	Mat, Rubber, Front, L.H.S.			600832	Pin Washer	85, 86 87	SC.10-1, PNT., TR.4.
567894	Rivet, Pop, Bumper	103		600949 601553	Washer Angle		ACV., TR.4. SC.10,10-1, PNT., HER.
F 400 / 1	Attachment			601597	Plate	73 91	SC.10, 10-1, PNT., HER.
568041	Body Shell, Prime Finish	70		601598	Pad	91	SC.10, 10-1, PNT.
	(Saloon)			601661	Grommet, Fuel Filler	49, 116	00.10, 10-1, 1 NT.
568042	Body Complete, Painted and Trimmed (Saloon)	70		601750 601761	Spring Cap, Fuel Filler	84 49	SC.10, 10-1, PNT.
568043	Body Shell, Prime Finish	70		601847	Bracket		SC.10,10-1,PNT., HER.
	(Convertible)			602030	Securing Plate		TR.4.
568044	Body Complete, Painted and Trimmed (Conv.)	70		602037	Grommet, Speedo Cable	67, 116	110.7.

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
602053	Rubber	75	SC.10,10-1,PNT., HER.	607741	Retainer, Tapped Plate,	76	
602621	Demister Hose	94	HER.	007711	L.H.	, ,	
602821	Seal, Check Arm, Front Door		HER.	607742	Retainer, Tapped Plate, R.H.	76	
603146	Locking Filler Cap	49		607743	Plate, Tapped	76	
603212	Washer		SC.10, PNT., TR.4.	607758	Reinforcement Assy., Doo	r 85	
603213	Washer		SC.10, PNT., TR.4.		Restraint Device, L.H.		
603344	Spring		HER.	607759	Reinforcement Assy., Doc	r 85	
603382	Spring	85, 86	SC.10-1, PNT., HER.,		Restraint Device, R.H.		
	, -		TR.4.	607774	Coat Hook	107	HER.
603559	Wiring Clip 75, 77, 78,	80, 82		607823	Pin, Door Hinge	83	HER.
603790	Plug, Blanking Cable Hol	e 39		607824	Hinge, Door Assembly	83	HER.
603906	Name Plate, Overdrive	121		607826	Brkt. Support, Rear Floor		
604146	Tubing, Delivery	95	HER., V.6, TR.4.	607841	Pivot	85	
6041 <i>4</i> 8	Tubing, Suction	95		607847	Battery Fixing Rod	75	HER.
	(sold in feet)			607861	Striker Assembly, L.H.	85	HER.
604291	Roof Lamp Assembly	64	SC.10-1, EST., V.3,	607862	Striker Assembly, R.H.	85	HER.
			PNT., 7 CWT. VAN, ENDL.	607863	Bracket Assembly, Spare Wheel Mounting	73	
604917	Trunk Lid Hinge, R.H.	96	SC.10-1, HER., PNT.,	607867	Stud	85	HER., TR.4.
			TR.4.	607868	Brkt, Support, Mill-board	73	
604918	Trunk Lid Hinge, L.H.	96	SC.10-1, HER., PNT.,	607869	Anchor Bracket	80	
			TR.4.	607870	Bracket, Stay, Facia	89	
605744	Packing	111	VIG., EN., V.3.	1	Bottom Rail, R.H.S.		
605811	Clip		HER.	607871	Bracket, Stay, Facia	89	
605816	Clip		HER.		Bottom Rail, L.H.S.		EN 1/2 11ED
605953	Sleeve, Terminal	63	EN., PNT., SP.4, HER., ENDL., BRIG., 2	607880	Seal, Cowl, Number Plate Lamp		EN., V.3, HER.
			TON, T.2000.	607902	Leather Washer		HER., TR.4.
6062 4 1	Courtesy Light Switch	62	,	607910	Spacer	81	
606242	Courtesy Light Switch	64	HER.	607927	Bracket, R.H.S.	89	HER.
606389	Clip	87	HER.	607928	Bracket, L.H.S.	89	HER.
606630	Bearing Assembly, Steeri	ng 9 1		607931	Anchor Plate Assembly	72	HER.
	Column	20. 20		607978	Handle, Trunk Lid Assy.	97 73	HER., TR.4.
606698	Clip, Link Attachment			608049	Reinforcement, Fulcrum	73	
607348 607505	Spare Wheel Pan Closing Panel, Tonneau	116 77		608050	Bracket Bracket, Fixing, Lower	77	
407547	End (Upper)	447		(00054	Petrol Tank		LIED
607517	Luggage Floor	116	LIED	608051	Glass, Rear Number Plate	63	HEK.
607629	Bracket		HER.	(00053	Lamp	40	
607631	Bracket, Assembly		HER.	608052	Seal, Drain Plug, fitted in Floor	49	
607655	Bracket, Mounting, Rear Floor	73		608136	Channel, Mounting Colum	n 72	HER., TR.4.
607663	Bonnet Catch Assembly	81		100100	Switches	04	LIED
607664	Catch Plate	81		608139	Insulator, Slip Ring	91	HER.
607668	Bracket, Petrol Tank,	73		608149		3, 94	HER. HER.
607669	Forward (Lower) Bracket, Petrol Tank,	73		608163 608164	Air Intake Mesh Cover, Plate, Heater	76 93	HEK.
	Forward (Upper)			(00105	Outlet, Dash Shelf	00	LIED TO 4
607670	Angle Support	73	HER.	608185	Support Bracket		HER., TR.4.
607688	Cover		HER.	608192	Trunk Lid Stay, Sliding	97	HER.
607696	Bracket Attachment, R.H. and L.H.	77	HER.	608193	Unit Assembly Bracket, Support, Trunk,	77	
607708	Assembly Plate, 'B' Post Mounting	72	HER.	608201	Stay and Petrol Tank Bracket Support Assy.,	73	
607711	Bonnet Backing Plate	80	HER.		Seat		
607729	Bracket Assembly	77	HER.	608213	Lower Tie Plate	78	HER.
607730	Clip, Screen Washer Container	95	HER.	608214	Reinforcement, Centre Roof Fixing, Rear Deck	78	
607733		70	LIED	(00222	_		HED TO A
00//33	Mounting Bracket	/6	HER.	608222	Felt Strip, Support Brack	72	TIER, TR.T.

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Mo
508223	Felt Strip	92	HER., TR.4.	608511	Door Clip	87	HER., TR.4.
08237	Pivot Pin	97	HER.	608516	Clip, Trim	107	HER., ENDL.
08241	Reinforcement, Side Roof			608520	•	0, 84	HER.
00211	fixing, L.H.	70		608522	Clip, Curtain to Door		HER., TR.4.
08242	Reinforcement, Side Roof	70		608524	•		17EK., 1K.7.
00272		70		600324	Rubber, Sealing, Quarter	78	
00070	Fixing, R.H.	7.	LIED	(00533	Light Pillar to Cantrail	00	1150
08262	Gusset Panel Assy., L.H.		HER.	608532	Bracket	83	HER.
08263	Gusset, Panel Assy., R.H.,	75	HER.	608533	Bracket	83	HER.
	L.H.S.			608534	Washer, Tab		HER.
08268	Sealing Strip	73	HER.	608536	Bracket, Top Pivot, L.H.	83	HER.
08269	Mounting Pad	72	HER.	608537	Bracket, Top Pivot, R.H.	83	HER.
08270	Sound Deadening Strip	105	HER.	608538	Tapping Block	84	
	(Driver's Side)			608539	Spacing Piece	84	HER.
08271	Washer, Plate	79	HER.	608540	Push Button	84	HER.
08276	Felt, Anti-drum Stiffener	87	HER.	608542	Spring	84	HER.
08278	Sealing Strip, L.H.	83	HER.	608544	Locking Handle		HER.
08279	Sealing Strip, R.H.	83	HER.	608545	Locking Handle	84	
08280	Bracket, Vent Support	84	HER.	608554	Jet		HER.
	Assembly, L.H.	٠.		608563	Rear Seal		HER.
08281	Bracket, Vent Support	84	HER.	608573	Catch Plate	83	HER.
00201		07	TILN,	608574			
00004	Assembly, R.H.	0.4	LIED	1	Catch Plate	83	
08284	Bracket, Vent Support	84	HER.	608576	Cap (Matador Red)	87	HER.
	Lower Assembly, L.H.			608577	Cap (Phantom Grey)	87	HER.
08285	Bracket, Vent Support	84	HER.	608581	Cap (Black)	87	
	Lower Assembly, R.H.			608582	Cap	87	
08288	Sealing Strip	83	HER.	608583	Cap	87	
08301	Tension Washer	85	TR.4.	608586	Cup Washer	87	HER., TR.4.
08307	Clip	104		608588	Heel Mat, L.H.S.	104	
08316	Plunger, Screen Washer	95	HER.	608595	Bracket,FootDipperSwitch	65	HER.
08319	Container	95	V.6, TR.4.	608604	Clip	83	HER., TR.4.
08322	Roof Panel, R.H.	78	HER.	608605	Washer	100	HER.
08350	Support Angle, Squab Side L.H.			608623	Bracket, Inner, Parcel Tra Hinge		
08351	Support Angle, Squab Side R.H.	., 73		608624	Bracket, Outer, Parcel Tra Hinge	y 75	
608372	Cable Clamp 93	3, 94	HER.	(00/33	•	00	LIED
08380	Badge Assembly, Grille	81	HER.	608633	Channel	98	HER.
	Surround			608637	Handle		HER.
08383	Plate, Retaining	74	HER.	608638	Handle	83	
08427	Tie Plate	78	HER.	608642	Pivot	69	HER.
08428	Tie Plate		HER.	608643			HER., TR.2,3,4.
08429	Strap, Retaining Jack	116		608695	Sealing Strip		HER.
08430	Plate, Fixing, Jack,	116		608703	Clip		TR.4.
UCTOU	0	110		608759	Sealing Block	111	HER.
00.47	Retaining Strap			608769	Packing	111	HER.
08451	Large Washer	86		608770	Seal	91	HER.
08452	Small Washer	86		608777	Sleeve	111	HER.
08454	Remote Control Handle	86	TR.4, HER.	608789	Spring		HER.
08461	Roof Seal	78	HER.	608815	Plate		HER.
08462	Slip Ring, Insulator	91	HER., TR.4.	608817	Clip 109, 110		
08478	Slide-on Clip	106		608836	Mounting Pad		HER.
08485	Stay, Support, Listing Rail		HER.	608858	Spacer Tube		HER.
	No. 1	-		608862			HER.
09490		110		1	•		HEK.
08490 08491	Ring, Reinforcement 77, Moulding, Rear Overider		HER.	608940	Packing Piece, Door Pocket Attachment	87	
00.100	(Black)			608942	Clip, Trim	114	
08499	Reinforcement Ring	67		609070	Clip	90	HER.
08500	Spring, Counter Balance	81		609098	Seal, Valance Panel to Das	h 82	
	Bonnet			609113	Grommet, Spare 74	, 116	
08501	Ring	67	HER.		Wheel Cover		
08503	Moulding		HER., ENDL.	609123		3 94	HER.
				, 50/123		-, / ⁻ T	

Part No.	Description	Page	Also Used on Mo	odels Part	: No.	Description	Page	Also Used on Mode
609143	Cover, Corner,	83	HER.	6096	680	Cowl Assembly, Number	64	HER.
	No Draught Vent					Plate Lamp		
09156	Valve and Elbow	93	HER.	6096	593	Rubber, Sealing, Quarter	78	
09157	Bracket, Screen Washer		HER.			Light Pillar to Tonneau S	ide	
	Plunger Mounting			6096	699	Hood Cover Assembly (Black)	101	HER.
609158	Plate Support, Reinforce- ment Rear Lower Roof	78	HER.	6097	706	Hood Cover Assembly (Sebring White)	101	HER.
509173	Plunger	90	HER., BRIG., ENDL.	TR.4, 6097	710	Bush, Spring, Reflex Unit	63	
509175	Jet	90		6097	725	Demister Nozzle Assembly	/ 94	
09206	Bracket, Listing Rail	78	HER.	6097		Accelerator Pedal Cup		HER.
	Mounting			6097		,	102	HER., TR.4.
309215	Hinge	99	HER.			Attachment		
09216	Pin	99	HER.	6097	745	Link	88	HER.
09228	Link	98	HER.	6097		Capping, Rear Side, L.H.		HER.
09241	Bolt	99	HER.	6097				HER.
09242		3, 99	HER.	6097		Capping, Rear Side, R.H. End Finisher, R.H.		HER.
09243		3, 99	HER.			*	100	
507243 509244	Bolt	99	HER.	6097		Front Stick, L.H.	100	HER.
09249	Reinforcement	78	T Hely.	6097		Bezel	120	V . TD . CD .
		98	HER.	6097		Bezel	68	V.6, TR.4, SP.4.
09250	Link, L.H.		HER.	6097		Bezel 56, 56		TR.4, SP.4.
09251	Link, R.H.			6098	824	Tube, Distance, Body	72	HER.
09256	Pull, Handle	87	HER.	1		Mounting Pad		
09272	Bonnet Sealing Rubber		HER.	6098	825	Plate	101	
09291	Anchor Plate Assembly	72	HER.	6098	891	Clip	103	HER.
509292	Rear Stick and Rear Intermediate Stick	100		6098	893	Nut, Dome, Plastic Cover Attachment	5 8	HER.
5093 31	Head Catch	100	HER.	6099	909	Washer, Reverse Lamp	118	
09332	Head Catch	100	HER.	6099		Bezel	95	TR.4, SP.4, V.6.
09333	Retainer	100	HER.	6099		Lock, Bonnet (with Keys)	118	, , , , , ,
09334	Retainer		HER.	6099		Tapping Plate	81	HER.
09340	Weatherstrip		HER.	6099		Bezel	68	TR.4, SP.4.
309363	Stud, Roof to Deck fixing	79	HER.	6099		Knob, Body Washer	95	TR.4, V.6.
309366	Weatherstrip	100	HER.	6099	966/C	Knob	111	HER.
509379	Seal	82		I	966 [/] H	Knob	111	HER.
509402	Finisher Clip	101		6099		Control, Push/Pull 9	3, 94	TR.4.
509412	Spring Button	105	HER.	6099		Plate	101	
609413	Spring Button	105	HER.	6100	042	Washer	83	
09425	Seal, Reinforcement, L.H.	79	HER.	610		Facia Lamp Assembly	64	HER.
609426	Seal, Reinforcement, R.H.		HER.	610		Rubber, Sealing, Striker,	85	
309438	Button	94				Camlock		
609439 609463	Button Plate Finger Pull, Cubby Box	94 89	HER., TR.4.	6101	148	Capping, Door Seal 'A' Post, Top (L.H.)	103	
509482	Lock Bracket, Trunk Closing	103		610	149	Capping, Door Seal 'A' Post, Top (R.H.)	103	
	Board Support			610	170	Door Check Link Assy.	87	HER.
609526	Spacer	90	V.6, TR.4, SP.4.	610		Door Glass Stop Bracket		HER. TR.4.
509602	Finisher (Black)		HER.	510	., ,	(Lower Assembly)	0,5	TIME TIME
509603	Finisher (White)		HER.	440	177	'	, -	
09615	Rivet	98	HER.	610		Rubber Washer	65	LIED
09616		7, 78		6102		Anti-rattle Pad	86	HER.
509617	Rivet	98	HER.	6103		Anti-rattle Pad		HER.
309634	Angle, Trim L.H.	115	HER.	6103	2//	Support, Angle, Front	/5	HER.
609635	Angle, Trim R.H.	115	HER.			Door Seal, L.H.		
509636	Spring	91	HER.	6102	278	Support, Angle, Front	75	HER.
609641	Support Bracket, Steering Column Body	92	HER.	610-		Door Seal, R.H. Trim Assembly	107	HER., TR.4.
	Washer, Sealing, Rubber	85	HER., TR.4.	610-		Bracket, Drain Plug	49	112130 11317.
509649						- acres - latter 102	1/	

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Mode
610553	Bracket, Stay, Facia to	89	HER.	611748	Striker, Bracket Assembly	88	HER.
	Dash			611749	Tie Bracket	88	HER.
10558	Body Mounting Packing	72		611750	Seal, Roof to Rear Deck	78	
10562	Clip, Pipe to Wheelarch	49		611769	Facia Lamp Assembly	64	
	Flange			611773	Door Weather Curtain,	87	
10564	Bolt	99	HER.		L.H.		
10573	Clip 68	3, 69	ACV.	611774	Door Weather Curtain,	87	HER.
10624	Stud, Dot 101,		TR.4.		R.H.		
10649	Special Nut	98	HER.	611776	Centre Weather Curtain	84	HER.
10652	Inner Door Seal	87		611865	Anchor Plate, Mounting		
10685	Bezel	69	ENDL., V.6.		Bracket, Floor		
10707	Special Semi-tubular Rivet	87		611866	Anchor Plate, Mounting	72	HER.
10953	Trunk Lid Seal		HER.		Bracket, Floor Rear		
11022	Front Floor Carpet Assy.			611899	Badge, '6'	97	
	(Moulded), L.H., L.H.S.			611900	Dovetail Plate, Camlock,	85	
	(U.S.A. only)			011700	L.H.	05	
11052	Millboard Strip, R.H.	105		611901		οr	
	R.H.S.	.03		011701	Dovetail Plate, Camlock,	85	
11068/501	. Mat, Heelboard, Saloon	104		611015	R.H.	02	
11000/3AL		104		611915	Buffer	82	
11069/041	only (Matador Red)	104		611938	Rear Floor Cover Plate	121	CD 4 LIED
11063/3AL	· · · · · · · · · · · · · · · · · · ·	104		611952	Steering Column Cowl	91	SP.4, HER.
440701044	only (Phantom Grey)				Assembly, L.H.S.		
110/2/SAL		104		611957	Seal, Gearbox Cover,	74	
	only (Black)			1	Top and Sides		
11077	Washer, Sealing	55		611974	Escutcheon	120	
11177	Rubber Washer, Gear Leve		HER.	612048	Bracket, fixing Headlamp	82	
11189	Bracket, Bonnet Side, L.H.		HER.	1	Cover		
11190	Bracket, Bonnet Side, R.H.		HER.	612073	Plate, Tapped, Safety	73	
11192	Support Bracket, Dash Side	e 75			Harness Fixing		
	Bonnet			612074	Centre Facia Finisher	89	
11225	Catch Plate, Trunk Lid	97	HER.	612081	Support Bracket	82	
11 2 26	Trunk Lid Budget Lock	97	HER.	612098	Rear Floor Carpet	104	
11237	Capping, 'B' Post, L.H.	103		612108	Rear Floor Carpet	104	
	(Front)			612121	Plinth, Reflector	63	
11238	Capping, 'B' Post, R.H.	103		612129	Sun Visor Retainer, L.H.	90	
	(Front)			612130	Sun Visor Retainer, R.H.	90	
11 2 57	Capping, 'B' Post, L.H.	103		612158	Plate, Cover, Facia Lamp	64	
11258	(Rear) Capping, 'B' Post, R.H.	103		612159	Hose, Heater Connection Outlet	94	
	(Rear)			612160	Hose, Heater Connection	93	
11312	Tie Bracket	76	HER.		Inlet		
11353	Grommet, fitted in Floor 24			612161	Revolving Ash Tray Assy.	107	
11364	Steering Column Cowl Assembly		HER.	612162	Interior Mirror and Sun Visor Mounting	90	
11365	Dipswitch Escutcheon	91	HER.	612165	•	103	
11366	Trafficator Escutcheon		HER., TR.4.	612166		103	
11367	Clamp, Steering Column Lower Half		HER.	612167		107	
11368	Clamp, Steering Column Upper Half	91	HER.	612168		107	
11369	Cover, Harness Assembly, Steering Column	91	HER., TR.4.	612174 612183		10 4 105	
11371	Pull, Handle	89	HER.		Mats to Sill	_	
11437				412105		00	
	Cover, Joint, Finisher		HER., TR.4.	612185	Name Plate, "Vitesse"	89	
11439	Weatherstrip, Finisher	96	LIED	612190	Name Plate, "Vitesse"	97	
11504	Clip		HER.	612211		102	
11565	Cubby Box Lid Hinge Assembly		HER.		Rear Lamp Surround to Body		
11584	Cubby Box Lock Assy.	89	HER.	612238	Blower Seal 93	, 94	
116 4 6	Plate, Stiffening	78		612245	Plate, Tapping, Grille Fixing	g 63	

Part No.	Description Page	Also Used on Models	Part No.	Description	Page	Also Used on Mode
612251	Diaphragm Assembly, 108		615707	Clip	42	HER., T.2000.
	Seat Base		616045	Washer	68	
612260	Glass, Top Door Seal 55		616046	Washer	68	
612263	Push/Pull Control Assy., 83		616048	Washer	95	
	Water Valve		616049	Washer	68, 69	
612273	Spring, Tension, Cushion 108		616050	Washer	69, 93	HER.
612277	Panel Closing Assy., L.H. 78		616054	Bracket	91	
612295	Bracket, Support, Rear 73 Seat Pan		616059	Push/Pull Control Assy. Water Valve R.H.S.	93	
312310	Facia Ash Tray Assembly 89		616206	Drainflap	93	
612470	Clip, Moulding to Bonnet 81		620632	Wing Mirror, 'O' Type	91	
612538	Link, Front Cantrail to 77		650261	Escutcheon	85, 86	TR.4.
	Intermediate Stick, L.H.		701384	Clip	111	STB.
312539	Link, Front Cantrail to 77 Intermediate Stick, R.H.		703569	Gusset Panel, Dash Side Upper—L.H.—L.H.S.	, 75	
312540	Link, Front Cantrail 77		703570	Gusset Panel Assy.—R.H	ł. 75	
612546	Screw, Set, Shouldered 77		703591	Panel, Side Rear Seat,	73	
612601	'T' Piece 95			Pan-L.H.		
612628	Clip, Moulding, Upper 102		703592	Panel, Side Rear Seat,	73	
	Rear Lamp Surround		702/25	Pan—R.H.	72	
(420/2	to Body		703625	Bracket Mounting,	73	
612962	Pin, Bonnet Locator 75, 80		703/3/	'B' Post—L.H.	73	
612988	Bracket, Buffer, Cubby Box 89		703626	Bracket Mounting,	73	
613017 613074	Window Regulator Handle 85 Clip, Trunk Lid Seal 97		703627	'B' Post—R.H. Panel, Filler, Bottom,	80	HER.
443075	Attachment		703/30	Front Wheelarch—L.		ПЕВ
613075 613141	Screw, Set, Special 94 Moulding, Waist, Tonneau 102		703628	Panel, Filler, Bottom, Front Wheelarch—R.		HER.
	Side, L.H. (Rear)		703685	Bracket—L.H.S.	76	
313158	Bracket, Wiper Switch, 89		703686	Bracket—R.H.S.	76	
	L.H.S. only		703696	Weatherstrip	78	HER.
613159	Bracket, Ignition Switch, 89		703708	Rear Overider Assy.—L.		HER.
	R.H.S. only		703709	Rear Overider Assy.—R.		HER.
613176	Nut 94		703733	Moulding, Door Waist	102	
613178	Packing, Aluminium 72		705-55	—L.H.		
613292	Name Plate, "Sports" 96		703735	Support Channel Assy.	88	
613293	Cover Plate, 'Triumph', 103 Roof Joint—L.H.		703741	Door Restraint Device Assembly	85	
613294	Cover Plate, 'Triumph', 103 Roof Joint—R.H.		703747	Steering Column Suppo R.H.S.	rt, 91	HER.
613314 613343	Bezel 94 Finisher, Waist, Forward 84	SP.4, HER.	703748	Steering Column Suppo L.H.S.	rt, 91	HER.
	Inner		703764	Demister Outlet Cover	89	HER.
613863	Buffer, Rubber 88		703795	Droplight Glass—R.H.	84	HER.
613956	Finisher 90	HER.		and L.H.		
613957	Finisher 78	HER.	703805	Bracket Mounting Assy.	, 73	
614006	Friction Bush 81	T.2000, SP.4.		Rear Luggage Floor—		
614041	Moulding 102	HER.	703806	Bracket Mounting Assy.		
614122	Steering Column Cowi 91 Assembly—R.H.S.	HER., SP.4.	703807	Rear Luggage Floor—Panel Assembly, 'B' Pos	R.H.	
614146	Remote Control Mech. 86	HER.		Outer—L.H.		
514147	Assy. Cam Lock L.H. Remote Control Mech. 86	HER.	703808	Panel Assembly, 'B' Pos Outer—R.H.	t, 77	
11101	Assy. Cam Lock R.H.	LIED	703809	Panel, Filler, Upper	77	
614406		HER.		Tonneau to Rear Deck		
614556	Washer 93, 94		703810	Panel, Filler, Upper	77	
614575	Push/Pull Control 93	HER.	703010	Tonneau to Rear Deck		
614579	Push/Pull Control Assy. 93		702020			LIED
	Water Valve		703829	Rear Number Plate		HER.
(14/00	L.H.S./R.H.S.	LIED	703862	Letter 'T'		HER., ACV., TR.2,3
614690	Clip 67	HER.	703863	Letter 'R'	dU, 76	ACV., HER., TR.2,

ı

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
703864	Letter 'l'	80. 96	ACV., HER., TR.2,3,4.	70 44 18	Retainer	100	HER.
703865	Letter 'U'		ACV., HER., TR.2,3,4.	704427	Reinforcement, Channel	78	
703866	Letter 'M'		ACV., HER., TR.2,3,4.	, , , , , ,	Assembly, Rear Deck	. •	
703867	Letter 'P'		ACV., HER., TR.2,3,4.	704428	Reinforcement, Channel	78	
703868	Letter 'H'		ACV., HER., TR.2,3,4.	701123	Side, Rear Deck, R.H.	, 0	
703867	Bracket, Stay Mounting		HER.	704429	Reinforcement, Channel	78	
		84	HER.	704427	Side, Rear Deck, L.H.	/0	
703956	Droplight Glass—R.H. and L.H.	07	HEN.	704451	Link, L.H.	99	HER.
703971	Channel Assy., Window	84	HER.	704452	Link, R.H.		HER.
/037/1	•	07	HEN.	704457	Cantrail, L.H.		HER.
702072	Regulator—L.H.	84	HER.	704458			HER.
703972	Channel Assy., Window	04	TIEK.	704463	Cantrail, R.H. Retainer		HER.
702007	Regulator—R.H.	105	LIED	704464			HER.
703987	Millboard Dash, Lower,	105	HER.		Retainer		HEK.
707000	R.H.S.	404	LIED	704478	Pillar, Quarter Light and	78	
703988	Listing Rail, No. 1		HER.		Reinforcement Brackets		
703989	Listing Rail, No. 2	104	HER.	704470	Assembly, L.H.	70	
703990	Listing Rail, No. 3		HER.	704479	Pillar, Quarter Light and	78	
703991	Listing Rail, No. 4	104	HER.		Reinforcement Brackets		
704008	Listing Rail, No. 5	104	HER.	701100	Assembly, R.H.		
704026	Capping, Rear, Upper	103	HER.	704480	'B' Post Trim Details	106	HER.
704031	Millboard Dash, Upper,	105	HER.		(Matador Red) L.H.		
	L.H.S.			704481	'B' Post Trim Details	106	HER.
704032	Millboard Dash, Upper,	105	HER.		(Matador Red) R.H.		
	R.H.S.			704482	'B' Post Trim Details	106	HER.
704033	Rear Seal		HER.		(Phantom Grey) L.H.		
704039	Pocket Rear Quarter Ass	sy. 106	HER.	704483	'B' Post Trim Details	106	HER.
	(Matador Red), L.H.				(Phantom Grey) R.H.		
704040	Pocket Rear Quarter As:	sy. 106	HER.	704490	'B' Post Trim Details	106	HER.
	(Matado r Red), R.H.				(Black) L.H.		
704041	Pocket, Rear Qtr. Assy.	106	HER.	704491	'B' Post Trim Details	106	HER.
	(Phantom Grey), L.H.				(Black) R.H.		
704042	Pocket, Rear Qtr. Assy.	106	HER.	704492	Cover	106	HER.
	(Phantom Grey), R.H.			704493	Cover	106	HER.
704049	Pocket, Rear Qtr. Assy.		HER.	704494	Cover	106	HER.
	(Black), L.H.			704495	Cover	106	HER.
704050	Pocket, Rear Qtr. Assy.	106	HER.	704563	Channel, Glass Assembly,	84	HER.
	(Black), R.H.				L.H.		
704051	Pocket	106	HER.	704564	Channel, Glass Assembly,	84	HER.
704052	Pocket	106	HER.		R.H.		
704053	Pocket		HER.	704643	Tie Rod, Glass Channel,	84	HER.
704054	Pocket		HER.		Bottom		
704282	Gusset, Heelboard,	74		704683	Finisher, Squab Rail	103	
701202	'B' Post—L.H.	, ,			(Pink Wistaria), L.H.		
704202		74		704684	Finisher, Squab Rail	103	
704283	Gusset, Heelboard,	/4		701001	(Pink Wistaria), R.H.	103	
	'B' Post—R.H.			704724	Moulding, Rear Lamp	102	HER.
704288	Centre Plate Assembly,	89	HER.	701721	Surround, Upper	102	TIEN,
	Reinforcement—L.H.S	5.		704743	Rear Corner Capping,	103	HER.
704289	Centre Plate Assembly,	89	HER.	70773	L.H.	103	HEIX.
	Reinforcement—R.H.S						
704300	Cover, Panel, Spare Whe			704744	Rear Corner Capping,	103	HER.
704300	Glass Vent, Front Door	84			R.H.		
704324	Glass Vent, Front Door	07		704782	Moulding, Rear Lamp	102	HER.
704202		00	LIED		Surround, Lower		
704393	Bracket—L.H.		HER.		Lamp		
704394	Bracket—R.H.		HER.	704789	Cowl, Rear Number Plate	63	
704401	Link—L.H.		HER.	707/07	Lamp	0,	
704402	Link—R.H.		HER.	70.107	•		
704406	Cantrail—L.H.		HER.	704873	Knob	69	
704407	Cantrail—R.H.		HER.	704875	Knob	68	
704412	Front Intermediate Stick	c 98	HER.	704877	Knob	69	
	Assembly			704879	Knob	68	

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
704880	Knob	94	HER.	706116	Door Handle, Outside,	86	
704881	Heater Switch Knob	93	ACV., HER., TR.4.		L.H., L.H.S.		
704884	Knob, 'Heat'	93	HER., TR.4.	706117	Door Handle, Outside,	86	
704975	Sun Visor Assembly	90	HER.		R.H., R.H.S.		
, 0 (), 3	(without mirror)	,,	TIEN.	706118	Cam Lock Assy., L.H.	85	
704976	Sun Visor Assembly	90	HER.	706119	Cam Lock Assy., R.H.	85	
704770	(with mirror)	70	TIEK.	706121	•		
704977	•	90	HER.	1	Cover, Gearbox Assembly		
/U 1 7//	Sun Visor Assembly	70	HEN.	706122	Outlet Duct Assembly	93	
704070	(without mirror)	00	LIER	706147	Facia Panel, Trim and	88	
704978	Sun Visor Assembly	90	HER.	704440	Channel Support Assy.		
70 4007	(with mirror)	405	1150	706148	Facia Panel Trim and	88	
704987	Retainer	105	HER.		Channel Support Assy.		
705026	Headlining Assembly	104	HER.		R.H.S.		
705045	Anti-Drum Stiffener Assy			706149	Bonnet Front Moulding	81	
7050 4 6	Anti-Drum Stiffener Assy		HER.	706150	Facia Outer Finisher, L.H.	89	
705211	Rubber Seal	63		706151	Facia Outer Finisher	89	
705450	Cubby Box Lid, L.H.S.	88	HER.	706154	Front Overider Assy., L.H.	102	
705451	Cubby Box Lid, R.H.S.	88	HER.	706155	Front Overider Assy., R.H.	102	
705464	Dash Side Millboard 10:	, 106	HER.	706161	Moulding, Corner, Bonnet	81	
	Assy. (Matador Red), L.	Н.			Front, L.H.		
705465	Dash Side Millboard 10.	5, 106	HER.	706162	Moulding, Corner, Bonnet	81	
	Assy. (Matador Red), R.	H.			Front, R.H.		
705 4 66	Dash Side Millboard Ass		HER.	706164	Moulding, Bonnet Waist,	102	
	(Phantom Grey), L.H.				L.H.	••-	
705467	Dash Side Millboard Assy	105	HER	706165	Moulding, Bonnet Waist,	102	
703107	(Phantom Grey), R.H.	. 103	TIER.	700103	R.H.	102	
705474	Dash Side Millboard 10.	5 104	LIED	706176		. 07	
705777		5, 100	nen.	700176	Front Door Trim Pad Assy	. 67	
705475	Assy. (Black), L.H.	104	LIED	70/177	(Matador Red), L.H.	. 07	
705475		5, 106	HER.	706177	Front Door Trim Pad Assy	/. 8/	
	Assy. (Black), R.H.			704470	(Matador Red), R.H.		
705476	Millboard 10	5, 106	HER.	706178	Front Door Trim Pad Assy	7. 87	
705 4 77	Millboard 10	5, 106	HER.	1	(Phantom Grey), L.H.		
705478	Millboard 10	5, 106	HER.	706179	Front Door Trim Pad Assy	ı. 87	
705479	Millboard 10.	5, 106	HER.		(Phantom Grey), R.H.		
705666	Finishing Strip	101		706180	Front Door Trim Pad Assy	ı. 87	
705732	Weather Curtain, Lock	87	HER.		(Black), L.H.		
705737	Hood Assembly (Black)	101		706181	Front Door Trim Pad Assy	r. 87	
705738	Hood Assembly	101			(Black), R.H.		
	(Sebring White)			706182	Door Trim Pad	07	
705784		70		i .		87	
/U3/0 1	Reinforcement, Waist to	78		706183	Door Trim Pad	87	
	Wheelarch, L.H.			706184	Door Trim Pad	87	
705785	Reinforcement, Waist to	78		706185	Door Trim Pad	87	
	Wheelarch, R.H.			706220	Centre Front Bumper	102	
705786	Reinforcement, Front Ed	ge 78		706221	Door Outside Handle,	86	
	Rear Deck	.			L.H., R.H.S.		
705787	Panel, Wheelarch, Inner,	72		706222	Door Outside Handle,	86	
/03/6/		73			R.H., L.H.S.		
	L,H.			70/220		105	
705788	Panel, Wheelarch, Inner,	73		706230	Sound Insulation Pad,	105	
	R.H.				L.H., R.H.S.		
705789	Grommet 7	3, 116		706231	Pad, Sound Insulation,	105	
705803	Finisher, Seal, Roof to De				R.H., R.H.S.		
705881	Reinforcement, Regulato		HER.	706232	Sound Insulation Pad,	105	
	Pivot				L.H., R.H.S.		
705004			LIED	704222		10F	
705921	•	9, 110	HEK.	706233	Sound Insulation Pad,	105	
705982	Weather Curtain	84			R.H., R.H.S.		
706028	Panel Assembly, R.H.S.	75		706234	Pad, Sound Insulation,	106	
	L.H. Dash Side, Front				Dash Side		
	Panel Assembly, L.H.S.	75		706235	Sound Insulation Pad,	105	
706029	Tanci Assembly, E.T.S.	/					

Lit. Lit. Signature 116 Solidar So	Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
R.H. L.H.S. 708237 Support 73	704234	Sound Insulation Pad	105		708507	Duct	93	
Total Tota	700230		103		1			
L.H. L.H.S. 71 73 73 74 75 75 75 75 75 75 75	704227		105		i .	• •		
2704328 Sound Insulation Pad, 105 R.H., L.H.S. Panel, Jide, Trunk 77 Aperture, L.H. Aperture, R.H. Aperture	/0023/		103		i	• •		
R.H., L.H. S.	70/220		10E		i i			
L.H.S.	/06238	R.H., L.H.S.	103					
Assembly, L.H. Assembly, R.H. 7064279 Remote Control Hechanism 86 Assembly, R.H. 706424 Hader Panel Assembly 78 R.H. 706432 Cantrail Assy, Front, L.H. 77 706433 Cantrail Assy, Front, E.H. 77 706434 Cantrail Assy, Rear, R.H. 78 706435 Cantrail Assy, Rear, R.H. 78 706436 Cantrail Assy, Rear, L.H. 78 706436 Cantrail Assy, Rear, L.H. 78 706437 Cantrail Assy, Rear, L.H. 78 706437 Cantrail Assy, Rear, L.H. 78 706438 Cantrail Assy, Rear, L.H. 78 706439 Cantrail Assy, Rear, L.H. 78 706550 Place, Guide, Bonnet 75 Locator, L.H. 706550 Place, Guide, Bonnet 75 Locator, R.H. 706550 Place, Guide, Bonnet 75 Locator, R.H. 706568 Pareket, Bonnet Locator, 80 Pin Mounting, L.H. 706568 Pareket, Bonnet Locator, 90 Pin Mounting, R.H. 706569 Place, Lonneu Side, 77 Uppen, Convertible, L.H. 706669 Panel, Tonneu Side, 77 Upper, Convertible, L.H. 706659 Panel, Tonneu Side, 77 Upper, Convertible, R.H. 706659 Panel, Tonneu Side, 77 Upper, Convertible, R.H. 706669 Panel, Tonneu Side, 77 Upper, Convertible, R.H. 706690 Facia, Ash Tray Assembly 89 Facia Panel, Trimmed, and 88 Channel Support Assy. L.H.S. 706730 Place Plate 80 HER. 7072790 Plate 80 HER. 7072790 Plate 80 HER. 7072791 Plate 80 HER. 707330 Duct 93, 94 HER. 707430 Plate and Trimmed & 88 Channel Support Assy. L.H. 804091 Eac	706244		105		802815		77	
Name	706278		n 86		802845		73	
Mean	706279		n 8 6		802846		73	
706432 Cantrail Assyn, Front, E.H. 77 Ref. 177	706424	•	78		802967		80	HER.
Toping								
1706413 Cantrail Assy., Rar, L.H. 78 1706413 Cantrail Assy., Rar, L.H. 78 L.H.					i	•		
Top-15						•		
1706554		•]		J	
No. Parker Guide Bonnet 75		Plate, Guide, Bonnet			803077	Window Regulator Assy.,	85	HER.
Panel Assembly, "A' Post, 75 HER, R.H.	706555	Plate, Guide, Bonnet	75		803200	Panel Assembly, 'A' Post,	75	HER.
Panel Assy., R.H., L.H.S. 75 HER.	706567	Bracket, Bonnet Locator,	80		803201	Panel Assembly, 'A' Post,	75	HER.
Moulding, Waist, Tonneau 102 803328 Door Ventilator Assy., L.H. 88 HER.	706568	Bracket, Bonnet Locator,	80		1	Panel Assy., R.H., L.H.S.		
Side, L.H. 803329 Door Ventilator Assy., R.H. 88 HER.	704453		400		1	•		
	706652	•	102		:			
Upper, Convertible, L.H. 706659 Panel, Tonneau Side, Upper, Convertible, R.H. 706896 Seal, Door, Inner Saloon 706908 Facia Ash Tray Assembly 706902 Facia Panel, Trimmed, and Channel Support Assy. L.H.S. 706963 Facia Panel, Trimmed, and Channel Support Assy. R.H.S. 7070289 Plate 80 HER. 803659 Weatherstrip 80 HER. 803659 Weatherstrip 80 HER. 803659 Weatherstrip 80 HER. 803659 Weatherstrip 80 HER. 803664 Outer Frame, L.H. 80 HER. 803665 Outer Frame, R.H. 80 HER. 803665 Outer Frame, R.H. 80 HER. 803665 Outer Frame, R.H. 80 HER. 803665 Panel Assembly 76 HER. 803702 Intermediate Stick and 98 HER. 18 Post Upper Assy. 18 Post Upper Assy. 18 Post Upper Assy. 18 Post Upper Assy. 19 Post Opper Assy. 10 Post Opper Assy. 10 Post Opper Assy. 10 Post Opper Assy. 10 Post Opper Assy. 11 Post Opper Assy. 11 Post Opper Assy. 12 Post Opper Assy. 13 Post Opper Assy. 14 Per. 803790 Rear Deck Assembly 78 Convertible 803791 Trunk Centre Closing 80 Pad, Rear Squab 80 HER. 803791 Trunk Centre Closing 80 Pad, Rear Squab 80 HER. 803791 Trunk Centre Closing 80 Pad, Rear Squab 80 HER. 803791 Trunk Centre Closing 80 Pad, Rear Squab 80 HER. 803791 Trunk Centre Closing 80 Pad, Rear Squab 80 HER. 803791 Trunk Centre Closing 80 Pad, Rear Squab 80 HER. 803791 Trunk Centre Closing 80 Pad, Rear Squab 80 HER. 803790 Rear Deck Assembly. 80 Post Upper Assy. 80					803329	Door Ventilator Assy., R.H	. 88	HER.
Note	706658				803355	Backlight Glass	96	HER.
Upper, Convertible, R.H. 803404 Reinforcement, Rear Lower 78 706896 Seal, Door, Inner Saloon 87					803357	Weatherstrip	96	HER.
Topic	706659				i			HER.
Note	706896	Seal, Door, Inner Saloon	87		1	Assembly		
No.	706908	Facia Ash Tray Assembly	89		803558	•	83	HER
Channel Support Assy L.H.S. 706963 Facia Panel, Trimmed, and 88 Channel Support Assy R.H.S. 707289 Plate 80 HER. 707290 Plate 80 HER. 707291 Bracket 75 HER. 707292 Bracket 75 HER. 707330 Seal 87 707330 Duct 93, 94 HER. 708041 Pad 110 804066 Diaphragm 110 HER. 804090 Diaphragm 110 HER. 804090 Diaphragm 110 L.H.S. 804090 Support, Steering Column, 91 L.H.S. 708098 Support, Steering Column, 91 R.H.S. 708101 Facia Panel Trimmed & 88 Channel Support Assy. L.H.S. 708102 Facia Panel Trimmed & 88 Channel Support Assy. R.H.S. 708479 Escutcheon 91 R03664 Outer Frame, L.H. 803665 Outer Frame, R.H. 804666 Outer Frame, R.H. 81 HER. 803665 Outer Frame, R.H. 804666 Panel Assembly 76 HER. 803669 Panel Assembly 76 HER. 803790 Rear Deck Assembly, 78 Convertible 803791 Trunk Centre Closing 69 HER. 803791 Trunk Centre Closing 69 HER. 804090 Channel Stick Finisher 101 Channel, Trim 115 Pade Agent Pade A	706962	Facia Panel, Trimmed, and	88		i	•		
L.H.S. 803665 Outer Frame, R.H. 83 HER. 803663 Facia Panel, Trimmed, and Channel Support Assy., R.H.S. 803680 Panel Assembly 76 HER. 803680 Panel Assembly 78 HER. 803702 Intermediate Stick and 98 HER. Post Upper Assy. Panel Assembly 78 Convertible Panel Assembly 78 Panel Assembly Panel Assembly 78 Panel Assembly Panel Assembly 78 Panel Assembly Panel Assembly 78 Panel Assembly 78 Panel Assembly		Channel Support Assy.,			l .	•		
Racia Panel, Trimmed, and Channel Support Assy., R.H.S. 803680 Panel Assembly 76 HER.		L.H.S.			ļ			
Channel Support Assy., R.H.S. R.H.S. Plate 80 HER. 707299 Plate 80 HER. 707291 Bracket 75 HER. 7073292 Bracket 75 HER. 707350 Duct 93, 94 HER. 708060 Diaphragm 110 HER. 708097 Support, Steering Column, 91 L.H.S. 708098 Support, Steering Column, 91 R.H.S. 708101 Facia Panel Trimmed & 88 Channel Support Assy. L.H.S. 708102 Facia Panel Trimmed & 88 Channel Support Assy. R.H.S. 708479 Escutcheon 91 708479 Escutcheon 91 708407 Plate 80 HER. 803790 Rear Deck Assembly, 78 Convertible 803791 Trunk Centre Closing 69 HER. 803791 Trunk Centre Closing 69 HER. 803791 Trunk Centre Closing 69 HER. 804090 Channel, Trim 115 804091 Pad, Hair, Rear Squab 115 804091 Pad, Hair, Rear Squab 115 804092 Squab Board 115 804612 Panel, Luggage, Floor Side, 73 L.H. 804613 Closing Panel, Tonneau 77 End, Lower R.H.S. 805047 Front Floor Carpet Assy., 104 Moulded, L.H., R.H.S.	706963	Facia Panel, Trimmed, and	88		ì			
R.H.S. 803782 Intermediate Stick and 98 HER. 803782 Intermediate Stick and 98 HER. 803790 Plate 80 HER. 803790 Rear Deck Assembly, 78 Convertible 707291 Bracket 75 HER. 803791 Trunk Centre Closing 69 HER. 804091 Pad, Hair, Rear Squab 115 Rear					1	•		
Plate					1	•		
Plate	707289		80	HER	803782		98	HER.
707291 Bracket 75 HER. 803790 Rear Deck Assembly, 78 Convertible 707292 Bracket 75 HER. 803791 Trunk Centre Closing 69 HER. 707339 Seal 87 803791 Trunk Centre Closing 69 HER. 708050 Duct 93, 94 HER. 804066 Rear Hood Stick Finisher 101 708060 Diaphragm 110 HER. 804090 Channel, Trim 115 708097 Support, Steering Column, 91 L.H.S. 804091 Pad, Hair, Rear Squab 115 804092 Squab Board 115 708098 Support, Steering Column, 91 R.H.S. 804613 Pad, Rear Seat Cushion 88 88 804611 Panel, Luggage, Floor Side, 73 L.H. 804612 Panel, Luggage, Floor Side, 73 R.H. 708102 Facia Panel Trimmed & 88 Channel Support Assy. R.H.S. 804613 Closing Panel, Tonneau 77 End, Lower 708479 Escutcheon 91 Moulded, L.H., R.H.S. 708499 Deflector Plate 74 805055 Front Floor Carpet Assy., 104						'B' Post Upper Assy.		
707292 Bracket 75 HER. Convertible 707339 Seal 87 803791 Trunk Centre Closing 69 HER. 707350 Duct 93, 94 HER. Board Board 708041 Pad 110 804066 Rear Hood Stick Finisher 101 708090 Diaphragm 110 HER. 804090 Channel, Trim 115 708097 Support, Steering Column, 91 804091 Pad, Hair, Rear Squab 115 708098 Support, Steering Column, 91 804092 Squab Board 115 708101 Facia Panel Trimmed & 88 88 Rod4611 Panel, Luggage, Floor Side, 73 708102 Facia Panel Trimmed & 88 88 804612 Panel, Luggage, Floor Side, 73 708102 Facia Panel Trimmed & 88 88 804613 Closing Panel, Tonneau 77 708479 Escutcheon 91 Moulded, L.H., R.H.S. 708499 Deflector Plate 74 805055 Front Floor Carpet Assy., 104					803790	Rear Deck Assembly,	78	
707339 Seal 87 707350 Duct 93, 94 HER. 708041 Pad 110 804066 Rear Hood Stick Finisher 101 708060 Diaphragm 110 HER. 804090 Channel, Trim 115 708097 Support, Steering Column, 91 804091 Pad, Hair, Rear Squab 115 804092 Squab Board 115 804092 Squab Board 115 804092 Squab Board 115 804092 Squab Board 115 804093 Pad, Rear Seat Cushion 88 804611 Panel, Luggage, Floor Side, 73 L.H. L.H. 804611 Panel, Luggage, Floor Side, 73 L.H.S. 804612 Panel, Luggage, Floor Side, 73 R.H. 708102 Facia Panel Trimmed & 88 804613 Closing Panel, Tonneau 77 Fond, Lower R.H.S. 805057 Front Floor Carpet Assy., 104 708479 Escutcheon 91 805055 Front Floor Carpet Assy., 104 </td <td></td> <td></td> <td></td> <td></td> <td></td> <td>Convertible</td> <td></td> <td></td>						Convertible		
Board Board Facia Panel Trimmed & 88				LICK.	803791	Trunk Centre Closing	69	HER.
10				HED	003//1	•	.,	1 (1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
708060 Diaphragm 110 HER. 804090 Channel, Trim 115 708097 Support, Steering Column, 91 804091 Pad, Hair, Rear Squab 115 804092 Squab Board 115 804093 Support, Steering Column, 91 804092 Squab Board 115 804094 Pad, Rear Seat Cushion 88 804611 Panel, Luggage, Floor Side, 73 L.H. 804612 Panel, Luggage, Floor Side, 73 R.H. 804612 Panel, Luggage, Floor Side, 73 R.H. 804613 Closing Panel, Tonneau 77 805047 Front Floor Carpet Assy., 104 805049 Deflector Plate 74 805055 Front Floor Carpet Assy., 104				חבא.	004044		101	
708097 Support, Steering Column, 91 804091 Pad, Hair, Rear Squab 115 708098 Support, Steering Column, 91 804092 Squab Board 115 708098 Support, Steering Column, 91 804136 Pad, Rear Seat Cushion 88 708101 Facia Panel Trimmed & 88 804611 Panel, Luggage, Floor Side, 73 1.H. 708102 Facia Panel Trimmed & 88 804612 Panel, Luggage, Floor Side, 73 7.H. 708102 Facia Panel Trimmed & 88 804613 Closing Panel, Tonneau 77 Channel Support Assy. R.H.S. 805047 Front Floor Carpet Assy., 104 708479 Escutcheon 91 Moulded, L.H., R.H.S. 708499 Deflector Plate 74 805055 Front Floor Carpet Assy., 104				LIED	i			
L.H.S. 804092 Squab Board 115 804136 Pad, Rear Seat Cushion 88 804611 Panel, Luggage, Floor Side, 73 L.H. 804612 Panel, Luggage, Floor Side, 73 L.H. 804612 Panel, Luggage, Floor Side, 73 R.H. 804612 Panel, Luggage, Floor Side, 73 R.H. 804613 Closing Panel, Tonneau 77 End, Lower R.H.S. 805047 Front Floor Carpet Assy., 104 Moulded, L.H., R.H.S. 805055 Front Floor Carpet Assy., 104				HER.	5			
708098 Support, Steering Column, R.H.S. 804136 Pad, Rear Seat Cushion Panel, Luggage, Floor Side, Panel, H.S. 708102 Facia Panel Trimmed & 88 Channel Support Assy, R.H.S. 804613 Closing Panel, Tonneau Panel, Tonneau Panel, Lower Find, Lower Find	708097		, 91		i	•		
R.H.S. 708101 Facia Panel Trimmed & 88 Channel Support Assy. L.H.S. 708102 Facia Panel Trimmed & 88 Channel Support Assy. R.H.S. 70810479 Escutcheon 708479 Deflector Plate 804611 Panel, Luggage, Floor Side, 73 L.H. 804612 Panel, Luggage, Floor Side, 73 R.H. 804613 Closing Panel, Tonneau 77 End, Lower 805047 Front Floor Carpet Assy., 104 Moulded, L.H., R.H.S.		L.H.S.			j.	•		
Channel Support Assy. L.H.S. 708102 Facia Panel Trimmed & 88 Channel Support Assy. R.H.S. 708479 Escutcheon 708499 Deflector Plate 804612 Panel, Luggage, Floor Side, 73 R.H. 804613 Closing Panel, Tonneau 77 End, Lower Roulded, L.H., R.H.S. 805047 Front Floor Carpet Assy., 104 Moulded, L.H., R.H.S.	708098	• • •	, 91		1	Panel, Luggage, Floor Side		
708102 Facia Panel Trimmed & 88 Channel Support Assy. R.H.S. 805047 Front Floor Carpet Assy., 104 Moulded, L.H., R.H.S. 708499 Deflector Plate 74 805055 Front Floor Carpet Assy., 104	708101	Channel Support Assy.	88		804612	Panel, Luggage, Floor Side	, 73	
R.H.S. 805047 Front Floor Carpet Assy., 104 708479 Escutcheon 91 Moulded, L.H., R.H.S. 708499 Deflector Plate 74 805055 Front Floor Carpet Assy., 104	708102	Facia Panel Trimmed &	88		804613		77	
708499 Deflector Plate 74 805055 Front Floor Carpet Assy., 104	708479	R.H.S.	91		805047		104	
TORSUS LOVER 14 MOULDER RH KHY					805055		104	

Part No.	Description P	age	Also Used on Models	Part No.	Description	Page	Also Used on Model
805063	Front Floor Carpet Assy., 1	04		806269	Front Floor Assembly,	73	
	Moulded, L.H., L.H.S.				R.H., R.H.S.		
305071	Front Floor Carpet Assy., 1 Moulded, R.H., L.H.S.	04		806270	Front Floor Assembly, R.H., L.H.S.	73	
305079		04		806271	Dash Shelf Panel Assy.,	75	
305080	Carpet, Gearbox Cover, 1	04			R.H.S.		
	Smoke Grey and Black Mottle, R.H.S.			806272	Dash Shelf Panel Assy., L.H.S.	75	
305437	Panel, Inner Assembly, 'B' Post, L.H.	73		806293	Panel, Cover, Headlamp Housing	82	
805438		73		806354	Frontal Grille Assembly	82	
	'B' Post, R.H.			806357	Sound Insulation Pad	74	
305581	, ,		HER.	806359	Heater Assembly	93	
805762	,	96		806402	Bonnet Top Moulding	81	
05763	•	96		806491	Mat	102	
05764		78		806493	Mat	102	
05765	· ·	78		806501	Rear Centre Bumper	102	
05799	•	78		806502	Rear Side Bumper, L.H.	102	
	Saloon			806503	Rear Side Bumper, R.H.	102	
05812	Millboard Assy., Handbrake			806527	Front Outer Bumper, L.H.		
05815	•	96		806528	Front Outer Bumper, R.H.		
805856	Weatherstrip, Windscreen			806533	Sun Visor Assembly, L.H.,	90	
05858			HER.		R.H.S. (with mirror)		
05859			HER.	806537	Sun Visor Assembly, R.H.,	90	
06025	Rear Quarter Trim Assy. 1	07	HER.		L.H.S. (with mirror)		
	(Matador Red), L.H.			806541	Sun Visor Assembly, L.H.,	90	
06026	Rear Quarter Trim Assy. 1	07	HER.		L.H.S. (without mirror)		
	(Matador Red), R.H.			806545	Sun Visor Assembly, R.H.,	90	
06027	Rear Quarter Trim Assy. 1	07	HER.		R.H.S. (without mirror)		
	(Phantom Grey), L.H.			806549	Channel, Stiffening Assy.	82	
06028	Rear Quarter Trim Assy. 1 (Phantom Grey), R.H.	07	HER.	806551	Stiffener, Front Panel to Wheelarch Assembly	80	
806033	Rear Quarter Trim Assy. 1 (Black), L.H.	07	HER.	806552	Stiffener, Front Panel to Wheelarch Assembly	80	
306034	Rear Quarter Trim Assy. 1 (Black), R.H.	07	HER.	806553	Rear Squab Trimmed Assy. (Matador Red)	113	
306037	, ,	07	HER.	806554	Rear Squab Trimmed Assy.	113	
06038			HER.		(Phantom Grey)		
06039			HER.	806555	Rear Squab Trimmed Assy.	113	
06040			HER.		(Black)		
306050	Rear Qtr. Trim Pad Details 1 (Matador Red), L.H.			806556	Rear Seat Squab Trimmed Assembly	113	
306051	Rear Qtr. Trim Pad Details 1	07	HER.	806557	Rear Seat Squab Trimmed Assembly	113	
	(Matador Red), R.H.			806560	Rear Squab Assy., Leather	114	
306052	Rear Qtr. Trim Pad Details 1	07	HER.	000300	Trim (Matador Red)	117	
	(Phantom Grey), L.H.			806561	Rear Squab Assy., Leather	114	
806053	Rear Qtr. Trim Pad Details 1 (Phantom Grey), R.H.	07	HER.		Trim (Phantom Grey)		
004050		07	LIED	806562	Rear Squab Assy., Leather	114	
06058	Rear Qtr. Trim Pad Details 1	0/	HEK.		Trim (Black)		
06059	(Black), L.H. Rear Qtr. Trim Pad Details 1	07	HED	806563	Rear Seat Squab Trimmed	114	
	(Black), R.H.		HEN.	806564	Assembly Rear Seat Squab Trimmed	114	
06064		07			Assembly		
06065		07		806567	Rear Qtr. Boot Millboard	107	
06132	Board 109, 1		HER.		(R.H. only)		
306262	Front Floor Assembly 73, 1	07		806598	Plate, Tread, Sill	105	
	L.H., R.H.S.			806600		1,82	
306263	Front Floor Assembly, 73, 1	07		806606	Valance Panel Assembly,	81	
_	L.H., L.H.S.				Engine Bay, L.H.		


Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Mode
306607	Valance Panel Assembly,	82		808206	Millboard	106	
	Engine Bay, R.H.			808207	Millboard	105	
306640	Front Seat Frame Assy.	108		808208	Millboard	106	
306641	Case, Spring, Front Seat	109		808209	Millboard	105	
	Squab			808275	Case		HER.
306643	Pad, Cushion, Front Seat	108		808279	Front Seat Trimmed Assy.		HEK.
306644	Front Seat, Assy. P.V.C.	108		808280	Front Seat Trimmed Assy.		
	Trim (Matador Red)	, , ,		808281	Front Seat Trimmed Assy.		
306645	Front Seat Assy., P.V.C.	108		808282	Front Seat Trimmed Assy.		
	Trim (Phantom Grey)			808289	Front Seat Trimmed Assy.		
306646	Front Seat Assy., P.V.C. Trim (Black)	108		808290	Front Seat Trimmed Assy. (Less slides) Leather		
306647	Front Seat Trimmed Assy.	108			Trim, (Midnight Blue)		
306648	Front Seat Trimmed Assy.			808291	Front Seat Trimmed Assy.	110	
806650	Front Seat Assy., Leather Trim (Matador Red)			000271	(Less slides) Leather Trim, (Cactus)	110	
306651	Front Seat Assy., Leather Trim (Phantom Grey)	108		808293	Front Seat Trimmed Assy.	110	
806652	Front Seat Assy., Leather	108		000054	(Less slides) Leather Trim (Black)		
06653	Trim (Black) Front Seat Trimmed Assy.	100		808954	Valance Panel Assy., R.H.	82	
306654	Front Seat Trimmed Assy.			809043	Heater Assembly	93	
306656	Rear Squab Assy., P.V.C.			809309	Fresh Air Unit	94	
00000	_ '. '.	114		901338	Outer Door Panel, L.H.	83	
06657	Trim (Matador Red) Rear Squab Assy., P.V.C.	111		901339	Outer Door Panel, R.H.	83	
00037	Trim (Phantom Grey)	114		901397	Outer Wheelarch, L.H.		HER.
06658	Rear Squab Assy., P.V.C. Trim (Black)	115		901398 901432	Outer Wheelarch, R.H. Windscreen Glass		HER. HER.
06659	Rear Seat Squab Trimmed	113		901433	(Toughened) Windscreen Glass	90	HER.
06660	Assembly Rear Seat Squab Trimmed	115		901493	(Laminated) Cantrail Assembly, L.H.		HER.
04443	Assembly	445		901494	Cantrail Assembly, R.H.		HER.
06662	Rear Squab Assy., Leather Trim (Matador Red)			901986	Spring Case, Rear Seat Cushion	113	
06663	Rear Squab Assy., Leather	115		901979	Panel	76	HER.
	Trim (Phantom Grey)			901980	Panel	76	HER.
06664	Rear Squab Assy., Leather	115		902256	Door Assembly, L.H.	83	HER.
	Trim (Black)			902257	Door Assembly, R.H.	83	HER.
06665	Rear Seat Squab Trimmed	115		902258	Door Assembly, L.H.	64	
06666	Assembly Rear Seat Squab Trimmed	115		902260	Folding Hood Assembly, Complete (Trimmed Bla	98 ck)	
06692	Assembly Seat Pan Assembly	73	HER.	902261	Folding Hood Assembly, Complete (Trimmed Wi	98 nite)	
06694	Seat Pan Assy., Convertible			902268	Panel, Rear Valance	7 4	
06846	Air Distribution Box	94			Assembly, Centre		
06934	Angle, Trim, L.H.	89		902270	Panel, Tonneau Side,	77	
06935	Angle, Trim, R.H.	89			Lower, L.H.		
06952	Slide		HER.	902271	Panel, Tonneau Side,	77	
06953	Slide		HER.		Lower, R.H.		
06970	Seat Slide, L.H.	111		902273	Panel, Rear Valance Side,	77	
06971	Seat Slide, R.H.	111			L.H.		
06995	Moulding, Waist, Tonneau Side, R.H.			902274	Panel, Rear Valance Side, R.H.	77	
07312	Board Assembly, Trunk	103		902289	Roof Panel Assembly	78	
	Closing			902301	Panel Screen and Front Deck Assembly, L.H.S.	76	
08162	Frame	110		003303			
08201	Millboard		HER.	902302	Panel Screen and Front	76	
08202	Millboard		HER.		Deck Assembly, R.H.S.		
08203	Millboard	105		902318	Panel, Tonneau Side,	77	
08205	Millboard	105			Upper, Saloon, L.H.		

art No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Mode
02319	Panel, Tonneau Side,	77		903110	Rear Seat Cushion	111	
	Upper, Saloon, R.H.				Trimmed Assembly		
02328	Tonneau Side Assembly,	76			(Matador Red)		
	Saloon, L.H.	٠,		903111	Rear Seat Cushion	111	
02329	Tonneau Side Assembly,	76			Trimmed Assembly (Phantom Grey)		
02663	Saloon, R.H. Veneered Facia Panel	88	HER.	903112	Rear Seat Cushion	111	
	Assembly, R.H.S.			703112	Trimmed Assembly		
02679	Spring Case, Rear Seat Cushion	112	HER.	903113	(Black) Rear Seat Cushion	111	
02698	Rear Cushion Assembly, Leather Trim	111		903114	Trimmed Assembly Rear Seat Cushion	111	
	(Matador Red)				Trimmed Assembly		
02699	Rear Cushion Assembly, Leather Trim	111		903171	Rear Seat Cushion Assy., P.V.C. Trimmed	112	
	(Phantom Grey)				(Matador Red)		
02702	Rear Cushion Assembly, Leather Trim (Black)	112		903172	Rear Cushion Assembly, P.V.C. Trimmed	112	
02703	Rear Seat Cushion	112	HER.		(Phantom Grey)		
02704	Trimmed Assembly Rear Seat Cushion	112	HER.	903173	Rear Seat Cushion Assy., P.V.C. Trimmed (Black)		
	Trimmed Assembly			903174	Rear Seat Cushion	112	
02714	Rail, Tonneau Support	78			Trimmed Assembly		
	Assembly			903175	Rear Seat Cushion	112	
02748	Spring Case		HER.	000101	Trimmed Assembly	72	
)2892	Rear Cushion Assembly,	113		903181	Luggage Floor Assembly	73 72	
	Leather Trim			903187	Rear Floor Assembly	73 73	
02893	(Matador Red) Rear Cushion Assy., 112	, 113		903189	Rear Floor Assembly Rear End Complete Assy.	73 71	
	Leather Trim				(Less Trunk Lid)		
02004	(Phantom Grey)	112		903195	Rear End Complete Assy.	71	
02896	Rear Cushion Assembly, Leather Trim	113		903313	(Less Trunk Lid) Dash and Windscreen 7	1, 76	
02898	(Black) Rear Seat Cushion	113		903314		1, 76	
02899	Trimmed Assembly Rear Seat Cushion	113		903315	Assy., R.H.S. (Saloon) Dash and Windscreen 7	1, 76	
	Trimmed Assembly				Assy., (Conv.), L.H.S.		
02938	Panel	88		903316	Dash and Windscreen 7	1, 76	
02947	Top Panel, Bonnet	80			Assy., R.H.S. (Conv)		
02973		0, 76		903319	Bonnet Assembly	70	
02974	Assembly, R.H.S. Dash and Windscreen 7	0, 76		903352	Tonneau Side Assembly, Convertible, L.H.	76	
	Assembly, L.H.S.	3, 70		903353	Tonneau Side Assembly,	76	
02981	•	5, 70		903365	Convertible, R.H. Panel, Veneered Assembly		
02982		75, 70		703303	Facia, R.H.S., Normal	, 00	
03066	Gearbox Cover Panel	44		903370	Panel, Veneered Assembly	, 8 8	
03075	Panel, Wheelarch, Front Inner, L.H.	80			Facia, R.H.S., Tempera- ture Gauge Condition	, 55	
03076	Panel, Wheelarch, Front Inner, R.H.	80		903387	Folding Head Assembly Complete (Trimmed Bl	77 ack)	
03083	Roof Panel Assembly	71		903388	Folding Head Assembly	77	
03104	Bonnet Assembly	70			Complete (Trimmed W		
03101	Front Panel Assembly	82		903899	Panel	88	
03107	Front Wing Side Assemb			903999	Panel Panel	88	
	L.H.			903945	Windscreen Glass		HER.
03108	Front Wing Side Assemb	ly, 80			(Zone Toughened) L.H.S.		

Part No.	Description	Page	Also Used on Models	Part No.	Description	Page	Also Used on Models
903946	Windscreen Glass	90	HER.	CD31641	Pale Yellow—Pencil	117	
	(Zone Toughened)			CD31642	Powder Blue—Pencil	117	
	R.H.S.			CS4009	Clip, Bellows	36	
907398	Panel, Veneered Assemb Facia, R.H.S., Temper	, .		CS4011	Clip, Suregrip, Inlet Hose Attachment	93, 94	
	ture Gauge Condition	ı		CS4012	Clip	17	TR.2,3, 10 EST. Car,
CD13515	Washer, Cup	106					PNT., ACV., 7 CWT
CD15685/B	Washer	75					VAN, BRIG., ENDL.
CD22869	Rubber Buffer	80	SC.10,10-1,PNT.,HER.,				T.2000.
			7 CWT. VAN, BRIG.	CS4020	Clip, Hose to Tank	36, 46	
CD24152	Washer Cup 89, 19	04, 107			and Radiator		
CD25340	Rubber Buffer	99	HER.	CS4023	Clip, Bottom Hose	46, 47	
CD26326	Mounting Pad	72	TR.2,3.		Attachment		
CD26337	Stud	104		CS4025	Clip, Hose Attachment	47	
CD31433	Black—Pencil	117		CS4033	Clip	17	
CD31445	Signal Red-Pencil	117		CS4040	Clip	17	
CD31597	Lichfield Green-Pencil			CS4042	Clip	17	


ENGINE

Part No.	Description	Plate No.	No. per Unit	Remarks
511126	†ENGINE UNIT (8-75 to 1 Ratio) (For countries using high octane fuel)		1	
511127	†ENGINE UNIT (7 to 1 Ratio) (For countries using low octane fuel)		1	
	NOTE:—The above units are supplied less Water Pump, Distributor, Dynamo, Petrol Pump, Oil Filter, Thermostat, Exhaust and Inlet Manifolds, Carburettors and Sparking Plugs			
511370	DECARBONISING SET		1	
511125	ENGINE GASKET SET		1	
511124 129889 500463 HB1024 WL0210 PS1103 44473 46549 46172 56712 118632 PU1404 118686	CYLINDER BLOCK ASSEMBLY Adaptor Fitted into block Washer, copper Oil pressure switch Caps to Washer, lock Dil gallery front Rear of camshaft Front face and R.H. side of block Front face of cylinder block Rear face and L.H. side of block Plug, dryseal, oil gallery, rear Plug, \(\frac{3}{4}''' \) oil gallery Plug, \(\frac{1}{8}''' \) oil gallery	A1 A2 A3 A4 A5 A6 A7 A8	1 1 1 8 8 1 1 5 1 3 1 1 6	Fitted from Engine No. and future
HU1004 500463 126787 133804 133805	Setscrew Oil Washer, copper gallery Bush, oil pump shaft Stud, short Cylinder head Stud, long attachment	A13 A14 A15	1 1 1 7 7	High Compression Engine only
133803 119758 DP0514 100433 100433	Stud, short Cylinder head Stud, long attachment Dowel, timing cover attachment Petrol pump attachment Breather pipe attachment	A16 A17 A18 A19 A20	7 7 2 2 2	Low Compression Engine only
101962 132873	Distributor pedestal attachment Stud Gearbox and rear engine plate	A21 A22	2 3	Fitted up to
139836	Gearbox and rear engine plate		3	Engine No. only Fitted from Engine No. and future
DP0610	Rear engine plate attachment	A23	1	Fitted up to Engine No. HB9814E only
DP0612	Dowel Rear engine plate attachment		1	Fitted from Engine No. HB9815E and future
DP0616	Rear engine plate attachment	A23	1	

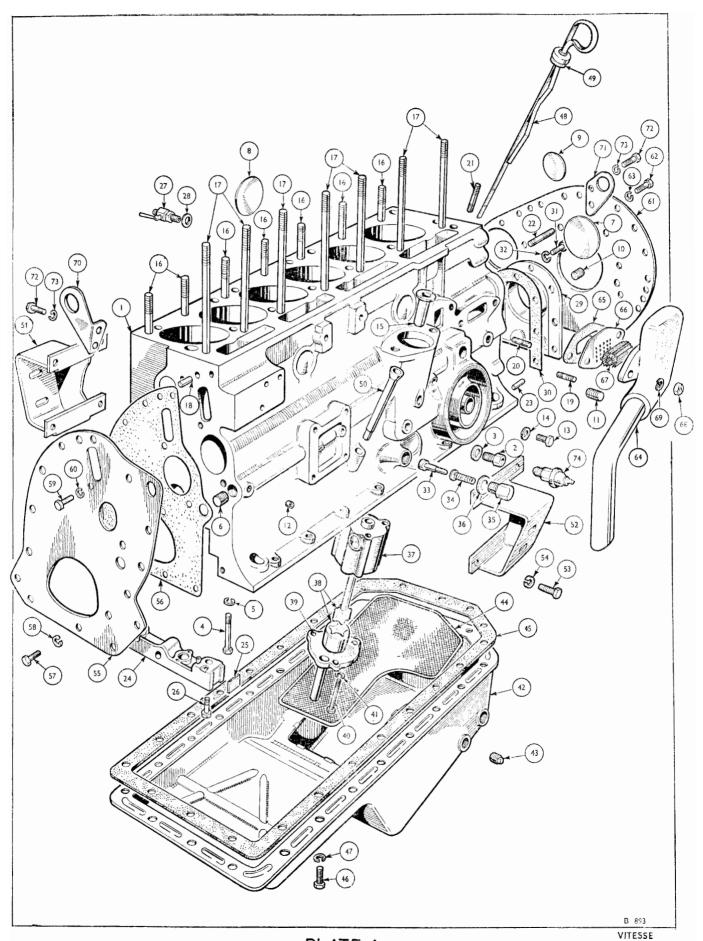

ENGINE

Part No.	Description	Plate No.	No. per Unit	Remarks
	CYLINDER BLOCK ASSEMBLY—cont.			
100433	Stud \ Timing cover and engine		2	Fitted from Engine No.
4N2008	Nut plate attachment		2	HB9933 and future
04863	Block, sealing, front	A24	1	
16234	Piece, filling \ Sealing block to	A25	2	
00501	Screw cylinder block	A26	2	
1478	Tap, drain Fitted in	A27	1	
№ F0511	Washer, fibre ∫ cylinder block	A28	A/R	
33996	Liner, cylinder		6	
0 482 2	OIL RETAINING COVER—REAR	A29	1	Alternative to 137374
37374	OIL RETAINING COVER—REAR		1	Alternative to 104822
05321	Washer, oil retaining Cover to	A30	1	
1B0809	Bolt > cylinder	A31	7	
VL0208	Washer, lock block	A32	7	
	OIL PRESSURE ADJUSTMENT DETAILS			
32107	Piston, relief valve	A33	1	
31535	Spring	A34	1	
07246	Plug, relief valve	A35	1	
01258	Washer	A36	1	
27400	†OIL PUMP ASSEMBLY			
27732	Body assembly	A37	1	
04963	Plug, core, oil pump body		1	
08975	Rotor and spindle assembly	A38	1	e i e i N
27401	Cover assembly, body	A39	1	Fitted up to Engine No. HB20877E only
39288	Cover assembly, body		1	Fitted from Engine No. HB20878E and future
∃B0724	Bolt \ Oil pump to	A40	3	
VL0207	Washer, lock \int cylinder block	A41	3	
304932	OIL SUMP ASSEMBLY	A42	1	Fitted up to Engine No. HB23006E only
107039	OIL SUMP ASSEMBLY		1	Fitted from Engine No. HB23007E and future
14774	Plug, oil drain	A43	1	
29795	Gauze, strainer	A44	1	
.04 7 3 1	Washer Setween sump	A45	1	Alternative to 211125
11125	and block		1	Alternative to 204731
HU0805	Setscrew Oil sump	A46	23	
VL0208	Washer, lock ∫ to block	A47	23	
27653	Dipstick assembly	A48	1	
2307	Washer, felt, on dipstick	A49	1	
27652	Tube, dipstick, support	A50	1	
133284	MOUNTING BRACKET—R.H.	A51	1	
33285	MOUNTING BRACKET—L.H.	A52	1	
1U0906	Setscrew \ Mounting bracket	A53	8	
√L0209	Washer, lock to cylinder block	A54	8	

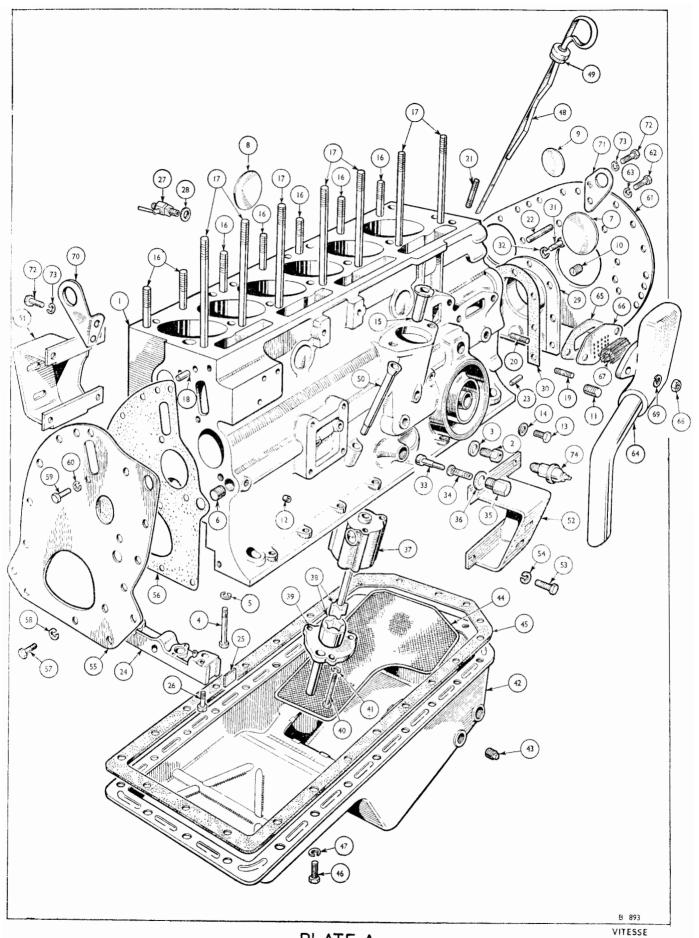

ENGINE

Part No.	Description	Plate No.	No. per Unit	Remarks
205456	FRONT ENGINE PLATE	A55	1	
20 54 57	Joint, front engine plate	A56	1	
HU0806	Setscrew Front engine plate	A57	3	
WL0208	Washer, lock to cylinder block	A58	3	
HU0807	Setscrew Front engine plate and camshaft	A59	2	
WL0208	Washer, lock locating plate to cylinder block	A60	2	
208833	REAR ENGINE PLATE	A61	1	Fitted up to Engine No. only
211514	REAR ENGINE PLATE		1	Fitted from Engine No. and future
HU0806	Screw, set	A62	7	Fitted up to Engine No. only
HU0807	Screw, set Rear engine plate cylinder block		7	Fitted from Engine No. and future
WL0208	Washer, lock	A63	7	
130907	BREATHER PIPE AND BODY ASSEMBLY	A64	1)
124954	Gasket, breather pipe	A65	2	Not required when closed
128870	Baffle, breather pipe	A66	1	circuit breather fitted
129101	Mesh, wire, inserted in flange of breather pipe body	A67	1	J
138126	Plate Blanking breather		1	Only required when closed circuit
124954	Gasket ∫ pipe outlet		1	∫ breather fitted
HN2008	Nut Breather pipe or blanking	A68	2	
WL0208	Washer, lock ∫ plate to cylinder block	A69	2	
	ENGINE LIFTING EYES			
123716	Eye, lifting, front	A70	1	
123715	Eye, lifting, rear	A71	1	
HU0805	Screw, set \ \ Lifting eye	A72	4	
WL0208	Washer, lock ∫ to block	A73	4	
121398	†OIL PRESSURE SWITCH	A74	1	



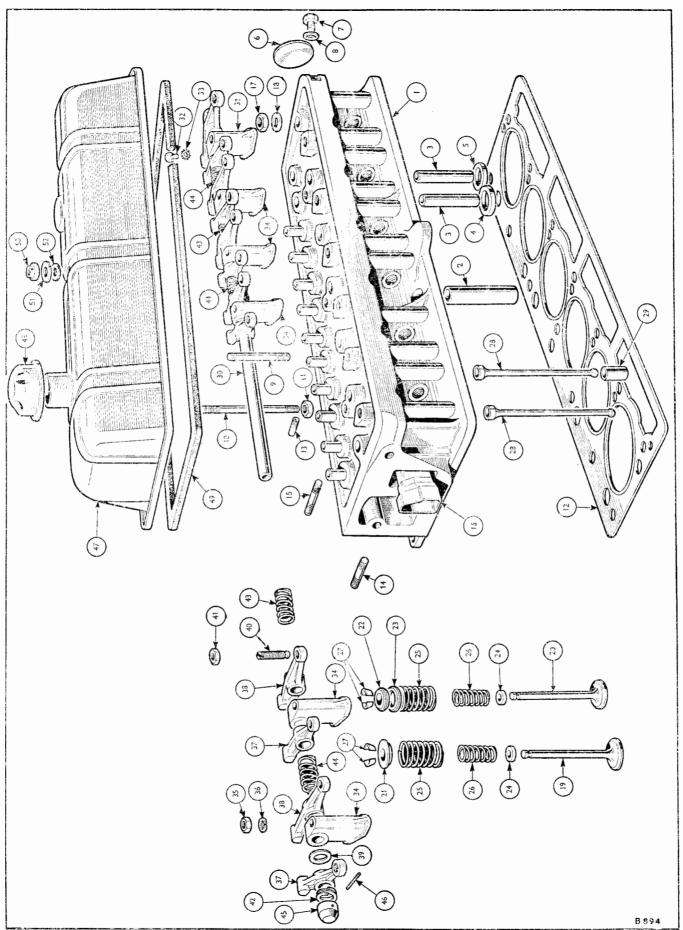


PLATE B


Part No.	Description	Plate No.	No. per Unit	Rema	ırks
511122	CYLINDER HEAD ASSEMBLY (8-75 TO 1 RATIO) with valves and springs		1	For countries	
208925	CYLINDER HEAD ASSEMBLY (8-75 TO 1 RATIO) less valves and springs	В1	1	high octane fuel	Fitted up to
511123	CYLINDER HEAD ASSEMBLY (7 TO 1 RATIO) with valves and springs		1	For countries	Engine No. HB16301E only
209049	CYLINDER HEAD ASSEMBLY (7 TO 1 RATIO) less valves and springs	В1	1	low octane fuel	
512837	CYLINDER HEAD ASSEMBLY (8-75 TO 1 RATIO) with valves and springs		1	For countries	
210860	CYLINDER HEAD ASSEMBLY (8-75 TO 1 RATIO) less valves and springs		1	high octane fuel	Fitted from Engine No.
512838	CYLINDER HEAD ASSEMBLY (7 TO 1 RATIO) with valves and springs		1	For countries	HB16302E and future
210976	CYLINDER HEAD ASSEMBLY (7 TO 1 RATIO) less valves and springs		1	low octane fuel	
	NOTE:—The above assemblies do not include Socker details or Inlet and Exhaust Manifold studs				
111872	Tube, sealing push rod	B2	12		
119622	Guide, valve	B3	12		
130814	Insert, inlet valve seat	B4	6		
130813	Insert, exhaust valve seat	B5	6		
27378	$ Plug, core \begin{cases} In rear \\ face of head \end{cases} $	B6	1		
116511	face of head		1	Fitted from Engin	
HU0803	Setscrew \ \ Rocker	В7	4	HB16302E and fut	ure
500469	Washer conner (oil feed	B8	1 1		
132495	Rocker pedestal	B9	6		
105123	Washer, copper oil feed Stud Rocker pedestal Rocker cover	B10	3		
HN2008	Nut Rocker cover	B11	3		
30123	Linger, lead studs to head		A/R		
208652	Gasket, cylinder head	B12	1		
127398	Dowel (Special), inlet manifold attachment	B13	1		
100419	Stud, inlet manifold	B14	2		
105124 204878	Stud, exhaust manifold, outer	B15	2	Fished	. NI.
	Tube assembly delivery	B16	1	Fitted up to Engin	
210829			1	Fitted from Engine HB16302E and fut	
110748	Nut	B17	14		
WP0009	Washer, plain > Cylinder head to block	B18	14		
30123	Linger, lead		A/R		

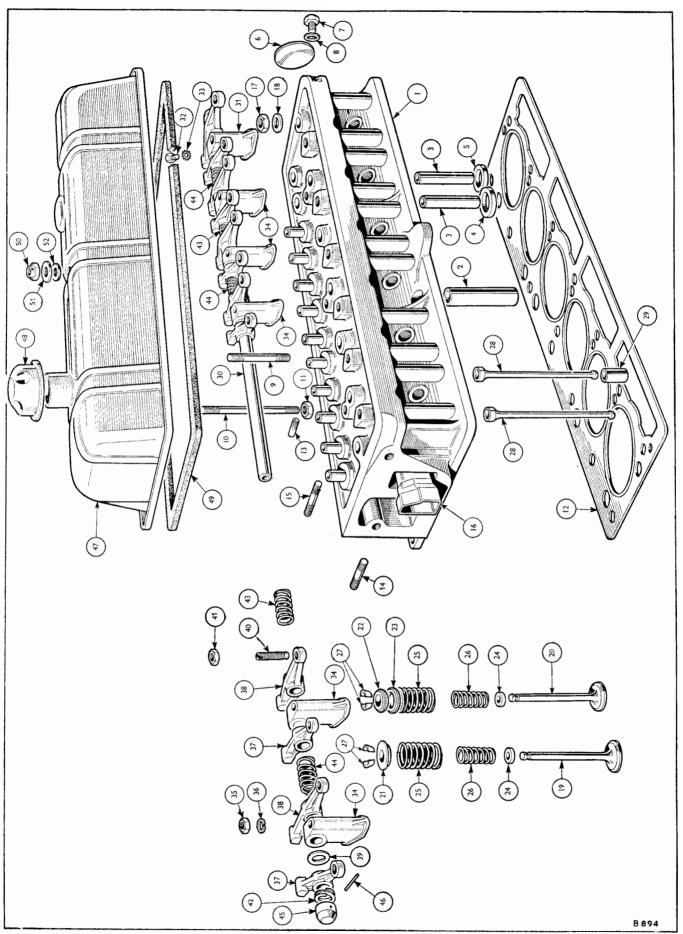

Part No.	Description	Plate No.	No. per Unit	Remarks
	VALVES			
22257	Valve, inlet	B19	6	
22258	Valve, iniet Valve, exhaust	B20	6	Fitted up to Engine No.
22236	valve, extraust	520	·	HB16301E only
37841	Valve, exhaust		6	Fitted from Engine No. HB16302E and future
11870	Collar, spring, upper (inlet valve only)	B21	6	
28334	Collar, valve (exhaust only)-inner	B22	6	
28335	Collar, valve (exhaust only)—outer	B23	6	
11871	Collar, spring, lower	B24	12	Alternatives
21251	Spring, valve (outer)	B25	12	in sets to
02564	Spring, valve (inner)	B26	12	136487 and 105118
36487	Spring, valve		12	Alternatives in sets to
05118	Collar, spring, lower		12	111871, 121251 and 102564
06663	Cotter, split cone	B27	12 prs.	
19811	PUSH ROD	B28	12	Low Compression Engines only
29058	PUSH ROD		12	High Compression Engines only
14823	Tappet, push rod	B29	12	
)4736	ROCKER SHAFT	B30	1	•
28425	Pedestal, rocker, drilled	B31	1	
)4859	Screw, locating \cap Shaft to	B32	1	
0995	Washer, shakeproof ∫ drilled pedestal	B33	1	
28424	Pedestal, rocker, plain	B34	1	
N2009	Nut \(\) Rocker pedestal to	B35	6	
/P0184	Washer, plain ∫ cylinder head	B36	6	
9023	Rocker, No. 1	B37	6	
9024	Rocker, No. 2	B38	6	
9759	Washer, spacing	B39	12	
7109	Pin, adjusting \(\) Fitted to	B40	12	
1110	Nut, lock \(\int \text{rockers} \)	B41	12	
05322	Outer	B42	2	
19312	Spring, rocker { Intermediate	B43	2	
19313	Intermediate	B44	3	
04838	Collar, on ends of shaft	B45	2	
00975	Pin, mills, securing collar	B46	2	
08923	ROCKER COVER ASSEMBLY	B47	1	Not required when closed
13569	Oil Filler and Breather Cap Assembly	B48	1	circuit breather fitted
10908	ROCKER COVER ASSEMBLY		1	Only required when closed
38176	Cap, oil filler		1	\int circuit breather fitted
19322	Washer, cover	B49	1	
N3208	Nut, nyloc Rocker cover to	B50	3	
VP0008	Washer, plain studs in	B51	3	
VF0508	Washer, fibre combustion head	B52	3	

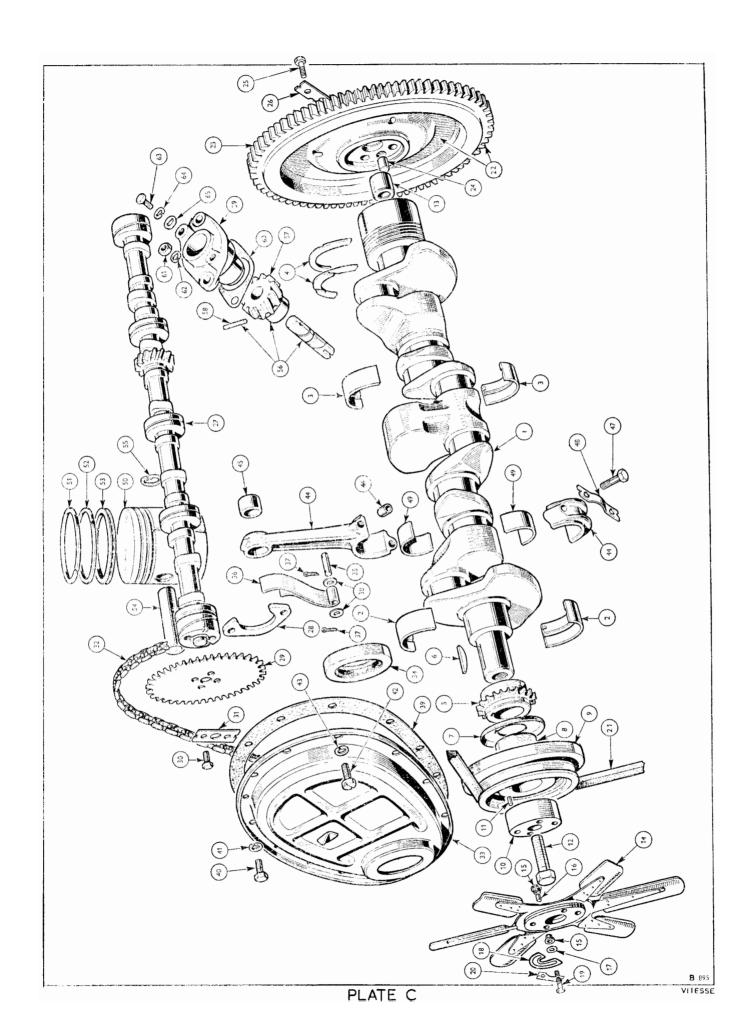

Part No.	Description	Plate No.	No. per Unit	Remarks
22.052	CDANIVOLATT			
304950	CRANKSHAFT	C1	1	
104819	Bearing, main, front and rear	C2	2 prs.	
126938	Bearing, intermediate	C3	2 prs.	
104820	Washer, thrust (obtainable ·0005" O/S)	C4	2	
119389	Wheel, chain	C5	1	
133234	Key, locating chain wheel on crankshaft	C6	1	
119390	Deflector, oil	C7	1	
133235	Sleeve, oil seal	C8	1	
1332 44	Pulley and damper assembly	C9	1	
133238	Adaptor, fan	C10	1	
DP0508	Dowel, fan adaptor	C11	2	
HB1316	Bolt	C12	1	
105143	Bush, constant pinion, fitted in end of crankshaft MAIN BEARINGS are obtainable in the following undersizes:—	C13	1	
209244	FAN ASSEMBLY	C14	1	Fitted up to Engine No. HB17376E only
211529	FAN ASSEMBLY		1	Fitted from Engine No. HB17377
211986	FAN ASSEMBLY		1	up to Engine No. HB20505E only Fitted from Engine No. HB20506E and future
108496	Bush	C15	8	
108499	Sleeve	C16	4	
108495	Washer	C17	4	
107858	Piece, balance	C18	1	
HB0810	Bolt	C19	4	
107857	Washer, tab	C20	2	
201403	Belt, fan	C21	1	
211138	Belt, fan	021	1	Special orders only
132321	FLYWHEEL ASSEMBLY	C22	1	Fitted up to Engine No.
139978	FLYWHEEL ASSEMBLY		1	HB17719E only Fitted from Engine No.
204250	m.	-		HB17720E and future
201350	Ring, gear	C23	1	
127883	Dowel	C24	2	5 m
105116	Bolt Flywheel to crankshaft	C25	4	Fitted up to Engine No.
102076	wasner, tab	C26	2	∫ HB17719E only
138526	Bolt		4	Fitted from Engine No. HB17720E and future
306785	CAMSHAFT	C27	1	
105114	Plate, locating NOTE:—For locating plate attachment details see Front Engine Plate	C28	1	
35960	Wheel, chain	C29	1	
100500	Screw, set Chainwheel to	C30	2	
36411	Plate, locking camshaft	C31	1	
			•	

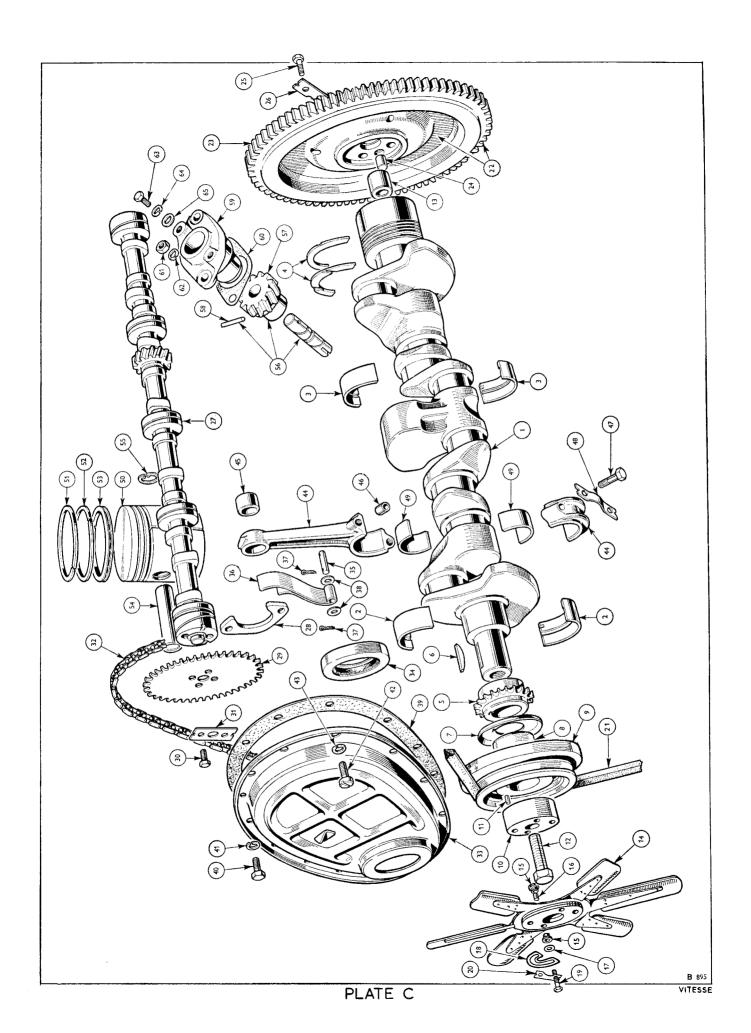


Part No.	Description	Plate No.	No. per Unit	Remarks
	TIMING COVER ASSEMBLY			
207492	TIMING COVER ASSEMBLY	C33	1	
125631	Seal, oil, in timing cover	C34	1	
33214	Pin, anchor, chain tensioner	C35	1 1	
42425	Tensioner, chain	C36 C37	2	
PC0007	Pin, cotter Chain tensioner	C37	2	
WP0018	Washer, plain \int attachment	C38	1	Alternative to 211126
201312	Washer, joint, timing cover	C39	1	Alternative to 211126 Alternative to 201312
211126	Washer, joint, timing cover	C40	7	
HU0807 WL0208	Screw, set Washan lock Timing seven and front	C40 C41	7	Fitted up to Engine No. HB9932E only
	Washer, lock Timing cover, and front	CHI	5	Fitted from
HU0807 WL0208	Screw, set > engine plate		5	Engine No. HB9933E
HN2008	Washer, lock to cylinder block		5	and future
PT0803	3	C42	5	and lucure
WL0208	Screw, set Timing cover to	C42	5	
VV LU208	Washer, lock \int front engine plate	C43	3	
119812	CONNECTING ROD ASSEMBLY	C44	6)
119813	Bush, small end	C45	6	
107401	Dowel, hollow, connecting rod bolt	C46	12	Fitted up to Engine No.
119729	Bolt, connecting rod attachment	C47	12	← HB18615E only
119730	Washer, tab, locking bolts	C48	6	
117730	vvasier, tab, rocking boits	C 10	Ū)
138548	CONNECTING ROD ASSEMBLY		6	1
119813	Bush, small end		6	Fitted from Engine No.
107401	Dowel, hollow, connecting rod bolt		12	HB18616E and future
138529	Bolt, connecting rod attachment		12	
128391	Bearing, big end	C49	12	J
			halves	
	SMALL END BUSHES are obtainable in the following oversize:— $+\cdot 010''$			
	BIG END BEARINGS are obtainable in the following undersizes:—			
	010", 020 ", 030 ". When ordering please quote part number and size required			
129059	PISTON ASSEMBLY (Graded F-G-H)	C50	6	
129060	Ring, compression (plated)	C51	6	
129061	Ring, compression	C52	6	
129062	Ring, scraper	C53	6	
129063	Pin, gudgeon	C54	6	
127003			•	

PISTONS are obtainable $+\cdot020"$ oversize


PISTON RINGS are obtainable in the following oversizes:—

 $+\cdot010\text{''},\ +\cdot020\text{''},\ +\cdot030\text{''}.$ Please quote part number and size required when ordering

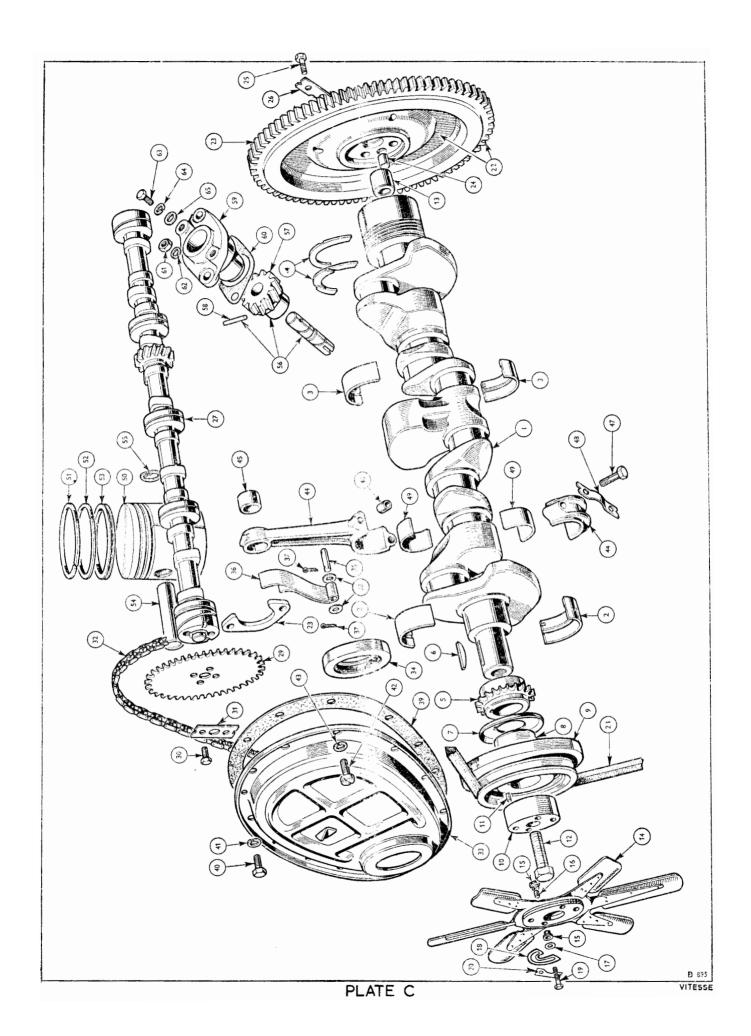


Part No.	Description	Plate No.	No. per Unit	Remarks
126786	DRIVE SHAFT ASSEMBLY, DISTRIBUTOR AND OIL PUMP	C56	1	
126785	Gear, driving distributor and oil pump	C57	1	
500974	Pin, mills, in driving gear	C58	1	
126784	Pedestal, distributor	C59	1	
104939	Washer, joint, pedestal	C60	A/R	
HN2008	Nut \ \ Pedestal to	C61	2	
WL0208	Washer, lock cylinder block	C62	2	
HU0704	Screw, set	C63	2	
WL0207	Washer, lock > Distributor to Pedestal	C64	1	
WP0035	Washer, plain	C65	2	

NOTE:—For details of Distributor, see Electrical Section

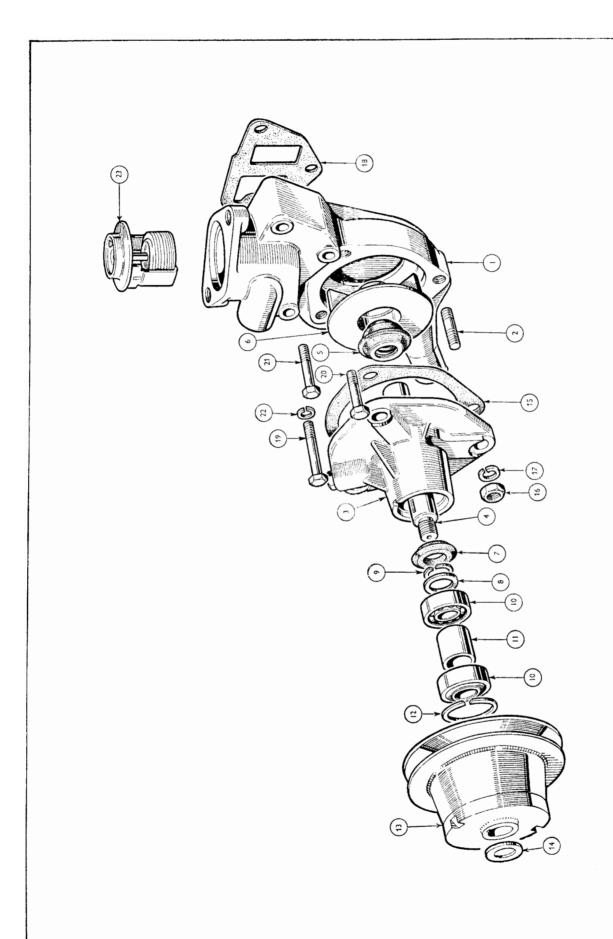


8 896

Part No.	Description	Plate No.	No. per Unit	Remarks
511117	†WATER PUMP ASSEMBLY		1	Alternative to 514397
303163	Body, water pump	D1	1	Alternative to 142276
514397	†WATER PUMP ASSEMBLY		1	Alternative to 511117
	complete with plug and fibre washer,			
	(Less temperature transmitter)			
42276	Body assembly, water pump		1	Alternative to 303163
122132	Plug		1	For use with 142276
∕VF0513	Washer, fibre		1	only
22132	Plug, planking, water pump body		1	
14774	Plug, taper, water pump body		1	(Fitted up to Engine No.
	(Not required when heater is fitted)			only)
01962	Stud, bearing, housing attachment	D2	3	
33258	† Housing, bearing, assembly		1	
.01316	Housing, bearing	D3	1	
04839	Spindle	D4	1	
00858	Seal, between bearing housing and impellor	D5	1	
04840	Impellor	D6	1	
0313	Seal, bearing	D7	1	
01092	Washer, abutment	D8	1	
00921	Circlip	D9	1	
00764	Bearing	D10	2	
04841 00851	Piece, distance, between bearings	D11	1 1	
33239	Circlip, retaining, bearing in housing	D12 D13	1	
33237 (W0420	Pulley, water pump Key, Woodruff	DI3	1	
VP0181	Washer, retaining pulley on spindle	D14	1	
N3208	Nut, pulley retaining	רוס	1	
00847	Gasket	D15	1	Alternative to 138701
38701	Gasket	D13	1	Alternative to 19847
1N2008	Nut Bearing housing to pump body	D16	3	
VL0208	Washer, lock	D17	3	
19542	Gasket	D18	1	Alternative to 138792
38792	Gasket	2.0	1	Alternative to 119542
1B0825	Bolt	D19	1	
IB0818	Bolt Water pump to cylinder head	D20	1	
B0819	Bolt	D21	1	
VL0208	Washer, lock	D22	3	
27745	†THERMOSTAT UNIT (71°C. opening)	D23	1	Fitted up to Engine No. HB23299E
40970	†THERMOSTAT UNIT (82°C. opening)		1	Fitted from Engine No. HB23300E and future

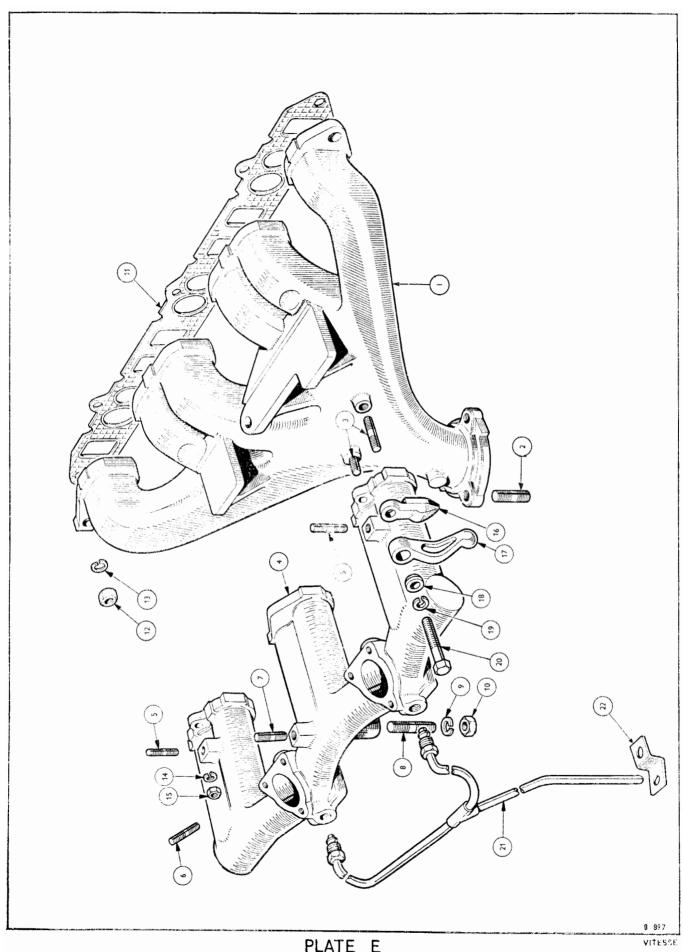

Part No.	Description	Plate No.	No. per Unit	Remarks
	MANIFOLDS			
305273	Manifold, exhaust	E1	1)
101962	Stud, exhaust outlet attachment	E2	3	
118557	Stud, air box retaining bracket attachment	E3	2	
305294	Manifold, inlet	E4	1	
118557	Stud, mounting feet to manifold	E5	2	Fitted up to Engine No.
1208 44	Stud, carburettor attachment	E6	6	only
118557	Stud, accelerator abutment bracket attachment	E7	1	
129619	Stud	E8	1	
WP0036	Washer, plain > Inlet to exhaust manifold	E9	1	
HN2009	Nut	E10	1	}
207857	Washer, joint, inlet and exhaust manifold	E11	1	Fitted up to Engine No. HB24246
	•			only
211555	Washer, joint, inlet and exhaust manifold		1	Fitted from Engine No. HB24247
	•			up to only
100498	Nut	E12	2	
WP0036	Washer, plain ∫ cylinder head	E13	2	
WL0208	Washer, lock \(\) Inlet manifold to	E14	2	
HN2008	Nut cylinder head	E15	2	
123761	Plate, clamp	E16	6	
123760	Clamp Exhaust and inlet	E17	6	Fire days as Francisco No.
119324	Washer, spherical > manifolds to	E18	6	Fitted up to Engine No.
WP0036	Washer, plain cylinder head	E19	6	only
HB0913	Bolt	E20	6	
13230 4	INLET MANIFOLD DRAIN PIPE ASSEMBLY	E21	1	
101436	Clip, drain pipe attachment	E22	1	

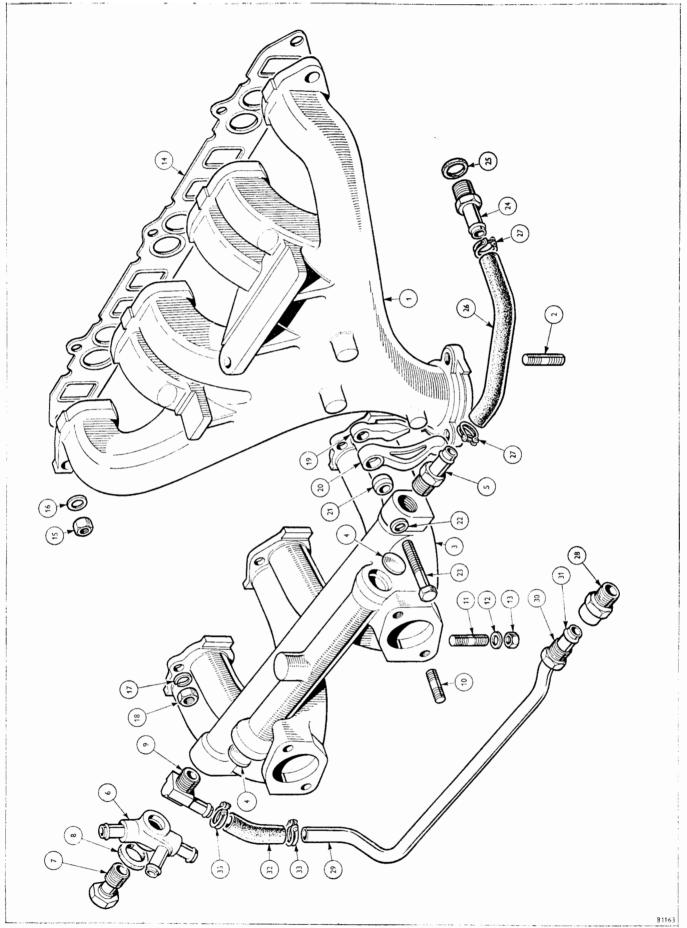

Part No.	Description	Plate No.	No. per Unit	Remarks
	MANIFOLDS			
306483	Manifold, exhaust	ES1	1)
101962	Stud, exhaust outlet attachment	ES2	3	
307390	Manifold, inlet	ES3	1	
46172	Plug, core	ES4	2	
138810	Adaptor, feed to manifold	ES5	1	
140947	Adaptor assembly, feed from Only manifold and heater required	ES6	1	
140950	Bolt, banjo Adaptor to when heater	ES7	1	
WF0550	Washer, fibre manifold is fitted	ES8	1	
138822	Elbow (only required when heater is not fitted)	ES9	1	1
129383	Stud, carburettor attachment	ES10	4	
129619	Stud Inlet manifold	ES11	1	Fitted from Engine No.
WP0036	Washer, plain by to	ES12	1	and future
JN2109	Nut exhaust manifold	ES13	1	
211555	Washer, joint, inlet and exhaust manifold	ES14	1	Í
100498	Nut \ Exhaust manifold	ES15	2	
WP0036	Washer, plain ∫ to cylinder head	ES16	2	
WL0208	Washer, lock & Inlet manifold to	ES17	2	
HN2008	Nut ∫ cylinder head	ES18	2	
123761	Plate, clamp	ES19	6	
123760	Clamp Exhaust and inlet	ES20	6	
119324	Washer, spherical → manifolds to	ES21	6	
WP0036	Washer, plain cylinder head	ES22	6	1
HB0913	Bolt	ES23	6	J
	MANIFOLD HEATER PIPES			
138350	Adaptor, water pump body	ES24	1)
WF0524	Washer, fibre, between adaptor and water pump body	ES25	1	
137876	Hose, adaptor to inlet manifold	ES26	1	
CS4012	Clip, hose attachment	ES27	2	
101343	Adaptor, water pump body	ES28	1	Fitted from Engine No.
210834	Pipe, water return	ES29	1	and future
101302	Nut, tubing \rightarrow Pipe to	ES30	1	
TL0011	Sleeve, tubing \int adaptor	ES31	1	
140986	Hose, pipe to elbow or adaptor in inlet manifold	ES32	1	
CS4013	Clip, hose attachment	ES33	2	


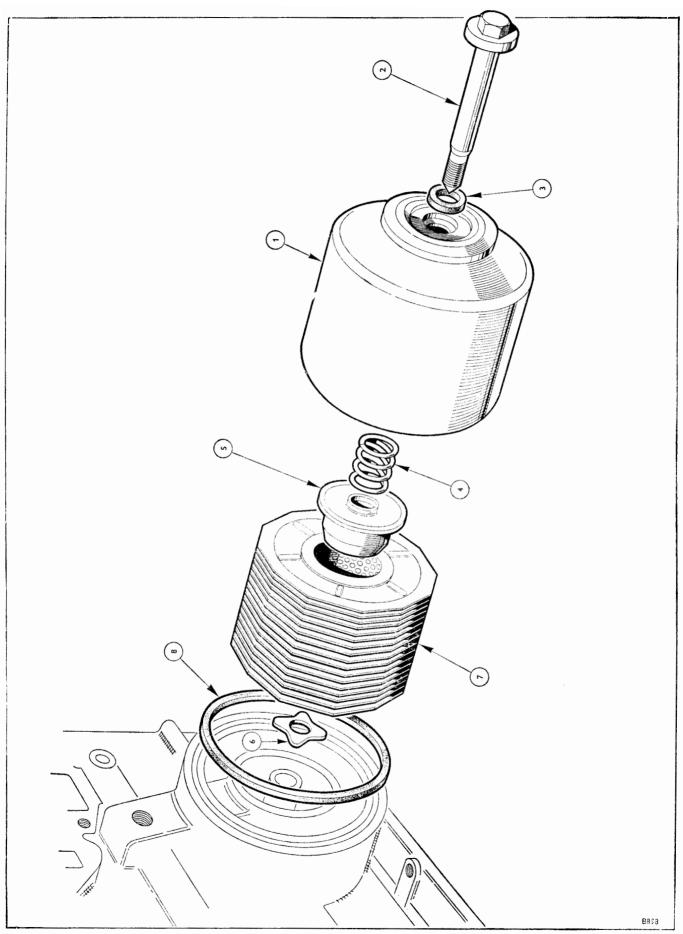



PLATE F

VITESSE

Part No.	Description	Plate No.	No. per Unit	Remarks
129917	OIL FILTER ASSEMBLY (Full Flow)		1	
510107	Shell assembly	F1	1	
510108	Bolt, centre	F2	1	
510109	Gasket, bolt head	F3	1	
510110	Spring, element retaining	F4	1	
510111	Valve assembly	F5	1	
509883	Centraliser, element	F6	1	
129925	Element, filter	F7	1	
125531	Ring, sealing	F8	1	

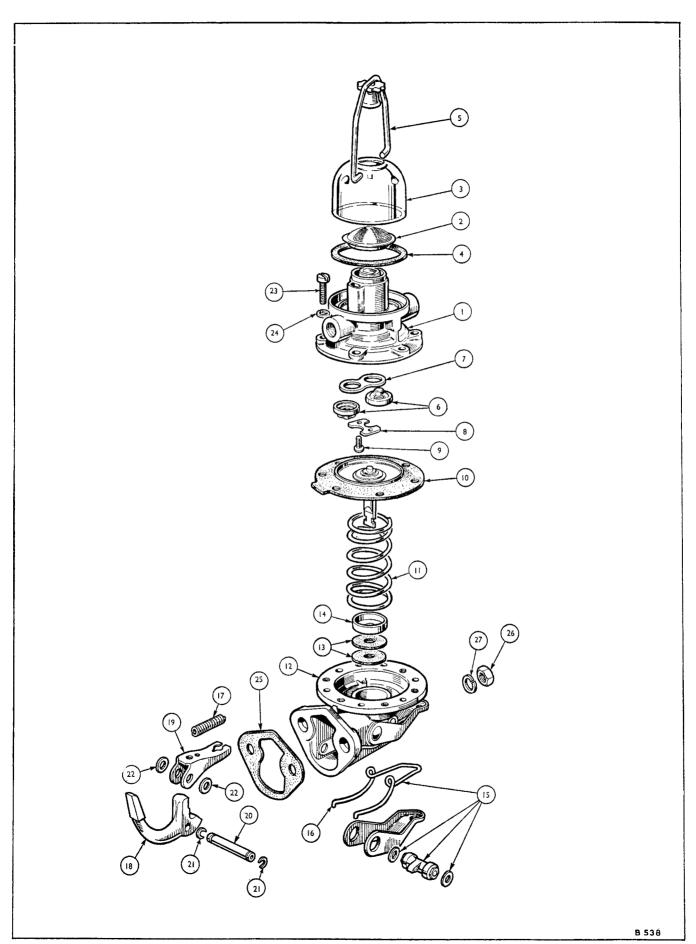

Part No.	Description	Plate No.	No. per Unit	Remarks
206623	†PETROL PUMP ASSEMBLY		1	
509928	Casting, upper	G1	1	
509924	Screen assembly	G2	1	
509923	Bowl, glass	G3	1	
509930	Gasket, between bowl and upper casting	G4	1	
09929	Bail assembly, bowl attachment	G5	1	
505239	Valve and seat assembly	G6	2	
05241	Gasket, valve	G7	1	
05240	Retainer, valve	G8	1	
9660	Screw, valve retainer to upper casting	G9	2	
01005	Diaphragm assembly	G10	1	
09925	Spring, diaphragm	G11	1	
09926	Body and primer assembly	G12	1	
08981	Washer, oil seal	G13	2	
08980	Retainer, oil seal	G14	1	
509927	Primer parts, set	G15	1	
2498	Spring, primer	G16	1	
2494	Spring, rocker arm	G17	1	
08983	Arm, rocker	G18	1	
2479	Link, rocker arm	G19	1	
2483	Pin, rocker arm and link to body	G20	1	
52484	Clip, securing pin	G21	2	
2486	Washer, between link and body	G22	2	
52 4 09	Screw \ Upper casting	G23	6	
57361	Washer, spring to body	G24	6	
122707	Yeshan isias \ Pump to	G25	1	Alternative to 138791
138791	Washer, joint cylinder block		1	Alternative to 122707
HN2008	Nut \ Pump	G26	2	
WL0208	Washer, spring of attachment	G27	2	
305454	PIPE ASSEMBLY—PUMP TO CARBURETTOR		1]
306769	PIPE ASSEMBLY—PUMP TO CARBURETTOR		1	Alternatives
51917	Grommet, petrol pipe		1	
133823	Clip, petrol pipe to water pump body		1	

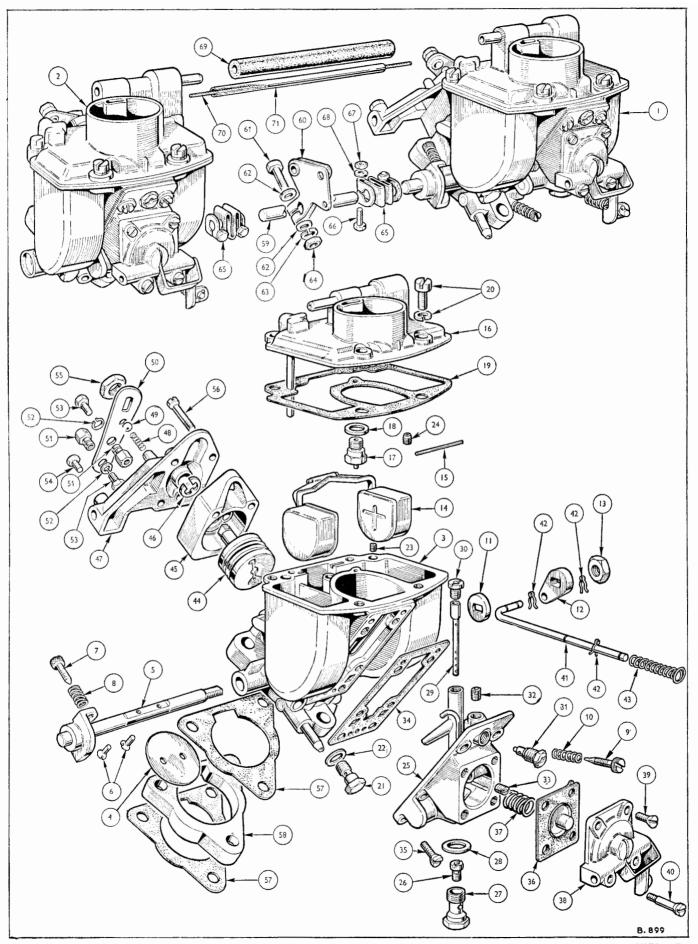

Part No.	Description	Plate No.	No. per Unit	Remarks
208938	†CARBURETTOR ASSEMBLY—FRONT	H1	1	Fitted up to Engine No. HB67988
208939	†CARBURETTOR ASSEMBLY—REAR	H2	1	only
210957	†CARBURETTOR ASSEMBLY—FRONT		1	Fitted from Engine No. HB6799
210958	†CARBURETTOR ASSEMBLY—REAR		1	up to only Fitted from Engine No. HB6799
21173 7	†CARBURETTOR ASSEMBLY—REAR		1	up to HB22116E only Fitted from Engine No. HB22117
51 3 757	GASKET SET—CARBURETTOR		1	up to only Fitted up to Engine No. only
511814	BODY ASSEMBLY—FRONT	Н3	1	Fitted up to Engine No. HB6798E
511827	BODY ASSEMBLY—REAR		1	only
512655	BODY ASSEMBLY—FRONT		1	Fitted from Engine No. HB6799E
511827	BODY ASSEMBLY—REAR		1	Fitted from Engine No. HB67998 up to HB22116E only
514782	BODY ASSEMBLY—REAR		1	Fitted from Engine No. HB22117
59669	Disc, throttle	H4	2	up to only Fitted up to Engine No. only
509944	Spindle, throttle, assembly, front carburettor	H5	1	Fitted up to Engine No. HB6798
511828	Spindle, throttle, assembly, rear carburettor		1	only
5126 56	Spindle, throttle, assembly, front carburettor		1	Fitted from Engine No. HB67991
511828	Spindle, throttle, assembly, rear carburettor		1	up to HB22116E only
51 47 81	Spindle, throttle, assembly, rear carburettor		1	Fitted from Engine No. HB22117
57409	Screw, throttle disc to spindle	H6	4	Fitted up to Engine No.
58330	Abutment, throttle stop, rear carburettor		1	Fitted from
58 33 1	Screw, throttle stop		1	Engine No. HB22117E up to
58329	Nut, securing throttle stop screw		1	only
511415	Screw, slow running	H7	2	Fitted up to Engine No.
57413/1	Spring, slow running screw	H8	2	Fitted up to Engine No. HB6798 only
57413	Spring, slow running screw		2	Fitted from Engine No. HB6799 up to only
140104	Lever, carburettor operating		1	Fitted from Engine No. HB2211
502619	Screw, volume control	Н9	2	up to only Fitted up to Engine No.
57413	Spring, volume control screw	H10	2	only Fitted up to Engine No. HB6798
574 13/1	Spring, volume control screw		2	only Fitted from Engine No. HB6799i up to only

Catalogue No. 511408. 2nd Issue

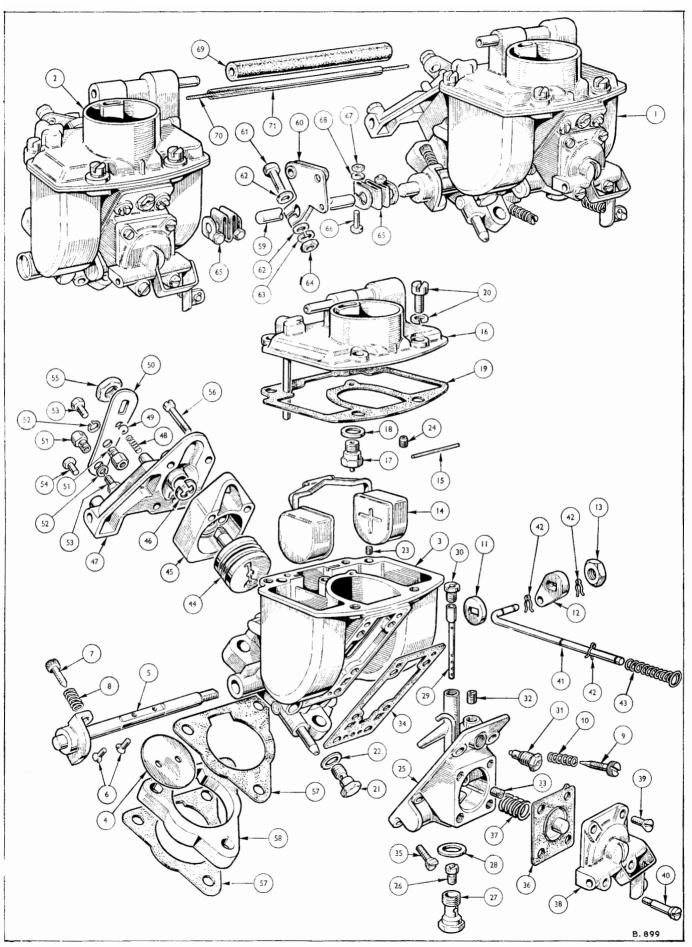


PLATE H

VITESSE

Part No.	Description	Plate No.	No. per Unit	Remarks
	CARBURETTOR ASSEMBLY (continued) BODY ASSEMBLY (continued)			
510716	Washer, distance, fitted on spindle, front carburettor	H11	1	Fitted up to
5099 4 5	Lever, intermediate, front carburettor	H12	1	Engine No. HB6798E
57 41 9	Nut, lever to spindle end, front carburettor	H13	1	only
509947	Float, carburettor	H14	2	i
5099 4 8	Spindle, float	H15	2	Fished up to Factor No.
5 118 17	Cover, float chamber, front carburettor	H16	1	Fitted up to Engine No.
511829	Cover, float chamber, rear carburettor		1	only
509956	Valve, needle	H17	2	j
509957	Washer, needle valve	H18	2	Fitted up to Engine No. HB6798
512658	Washer, needle valve		2	only Fitted from Engine No. HB6799E up to only
509958	Gasket \ Float chamber cover	H19	2) '
509959	Screw attachment	H20	8	1
59717/90	Jet, starter petrol	H21	2	Fitted up to Engine No.
509950	Washer, starter petrol jet	H22	2	only
511815	Jet, econostat	H23	2	1
511818	Bleed, air, econostat	H24	2	
511816	EMULSION BLOCK	H25	2	Fitted up to Engine No. HB6798
512567	EMULSION BLOCK		2	only Fitted from Engine No. HB6799E up to only
59719/110	Jet, main	H26	2	Fitted up to Engine No. HB679
59719/105	Jet, main		2	Fitted from Engine No. HB679 up to only
57430	Holder, main jet	H27	2	Fitted up to Engine No.
57431	Washer, main jet holder	H28	2	only
510533	Tube, emulsion	H29	2	Fitted up to Engine No. HB679 only
512086	Tube, emulsion		2	Fitted from Engine No. HB679 up to only
59718/160	Jet, air correction	H30	2)
59720/35	Jet, pilot	H31	2	Fitted up to Engine No.
501997	Screw, bleed, pilot jet	H32	2	only
509953	Jet, pump	H33	2	Fitted up to Engine No. HB679 only
509954	Gasket, emulsion block	H34	2	Fitted up to Engine No.
59682	Screw, emulsion block to main body	H35	12	only
509956	Membrane assembly, pump	H36	2	1 '
509967	Spring, pump	H37	2	
509968	Cover assembly, pump	H38	2	
57556	Screw (short) \ Pump cover to	H39	4	Fitted up to Engine No. HB679
5 74 17	Screw (long) femulsion block	H40	4	only
511825	Rod, pump control	H41	2	
511826	Circlip Fitted on pump	H42	8	
509971	Spring control rod	H43	2	

Catalogue No. 511408. 2nd Issue


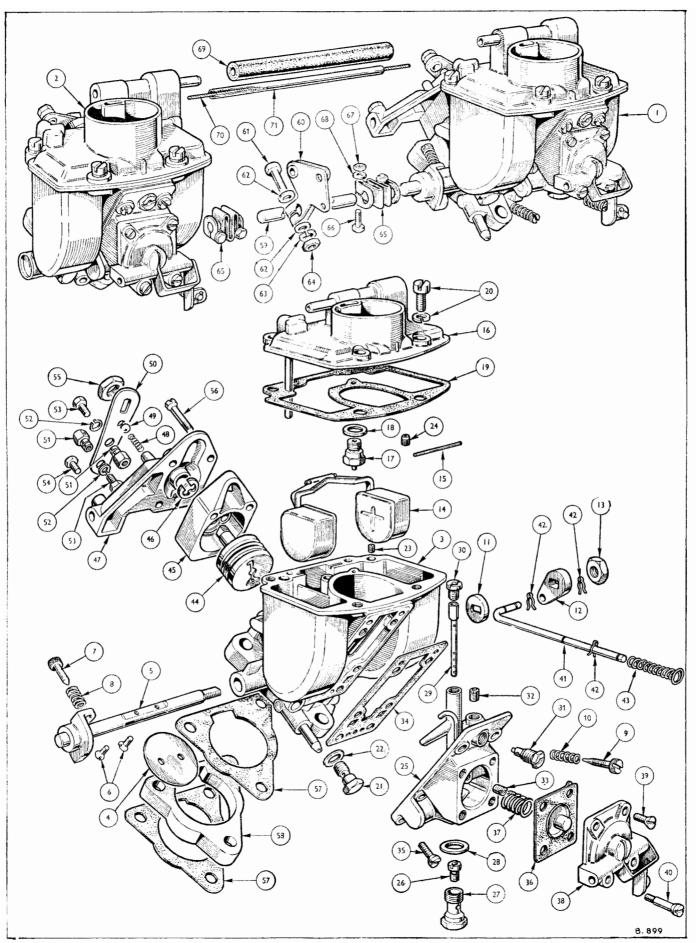


PLATE H

VITESSE

Part No.	Description	Plate No.	No. per Unit	Remarks
	CARBURETTOR ASSEMBLY (continued)			
511819	STARTER ASSEMBLY—FRONT		1)
511830	STARTER ASSEMBLY—REAR		1	
510616	Valve, starter, assembly	H44	2	Fitted up to Engine No.
509962	Body, starter	H45	2	Fitted up to Engine No.
509963	Circlip, starter valve to body	H46	2	only
509964	Cover, starter, front	H47	1	
509978	Cover, starter, rear		1	J
510424	Spring, locating ball	H48	2	Fitted up to Engine No. HB6798
57416	Spring, locating ball		2	only Fitted from Engine No. HB6799E t
				to only
57 4 15	Ball, locating starter lever	H49	2)
511821	Lever, starter, assembly, front	∺50	1	
511831	Lever, starter, assembly, rear		1	
510102	Swiyel	H51	3	
510101	Circlip, swivel	H52	2	
511824	Screw, locking	H53	3	
59678	Screw, cable locking, front carburettor	H54	1	Fitted up to Engine No.
57419	Nut, spindle end	H55	2	only
509373	Screw, starter cover to emulsion block	H56	8	,
126902	Washer, joint, both sides of insulating block	H57	4	
126901	Washer, insulating, between carburettor and	H58	2	
120701	manifold		-	1
HN2007	Nut Carburettor to		6	
WL0207	Washer, lock manifold		6	J
	CARBURETTOR LINKAGE			
127689	Link, connecting front and rear carburettors	H59	1	}
134578	Lever, carburettor throttle, fitted on link	H60	1	į
HB0708	Bolt Carburettor	H61	1	Fitted up to Engine No. HB1630
WP0023	Washer, plain throttle	H62	1	only
WL0207	Washer, lock lever to	H63	1	1
HN2007	Nut	H64	1	
134882	Link and Lever assembly		1	Fitted from Engine No. HB16302
509946	Connection, flexible, assembly, link attachment		2	up to only
	(comprising items H65 to H68 inclusive)			
128217	Connection, flexible link attachment	H65	2	
509540	Bolt Flexible connections	H66	4	-
509541	Nut to links and	H67	4	Fitted up to Engine No.
509970	Washer, lock carburettors	H68	4	only
122695	Pipe, petrol connection Front	H69	1	
128919	Wire, link, choke control to rear	H70	1	
128918	Tubing, fitted on link wire carburettor	H71	1	
305452	Pipe, suction, carburettor to distributor		1	
128262	Sleeve, connecting pipe to carburettor and distributor		2	
38303	Clip, securing suction pipe to petrol pipe		4	Fitted up to Engine No. HB15000

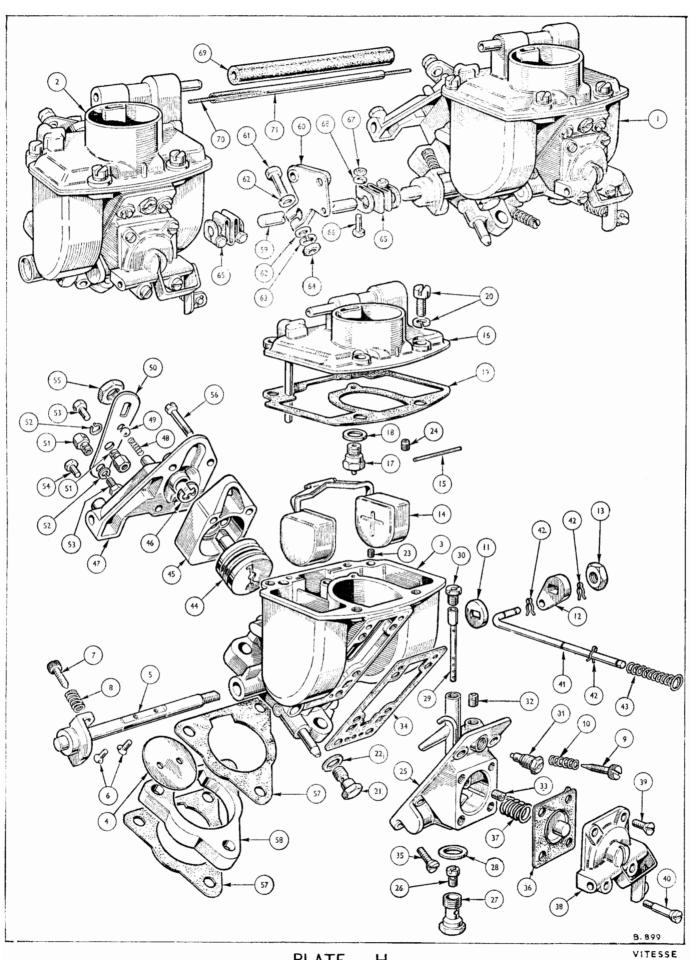

Part No.	Description	Plate No.	No. per Unit	Remarks
	CARBURETTOR LINKAGE (continued)			
138892	Clip, securing suction pipe to petrol pipe		4	Fitted from Engine No. HB15001E
E40074	OW CREED ELEVIROUTY			up to only
512371	LOW SPEED FLEXIBILITY IMPROVEMENT KIT		1	
512087	Plug, blanking		2	-
59719/105	Jet, main		2	For use with Carburettor
59720/35	Jet, pilot		2	assemblies 208938/9 only
512086	Tube, emulsion		2	
512542	Tube, choke		2	J
512372	LOW SPEED FLEXIBILITY		1	For use with Carburettor
	IMPROVEMENT KIT			assemblies 210957/8
512542	Tube, choke		2	only
59719/105	Jet, main		2) om,


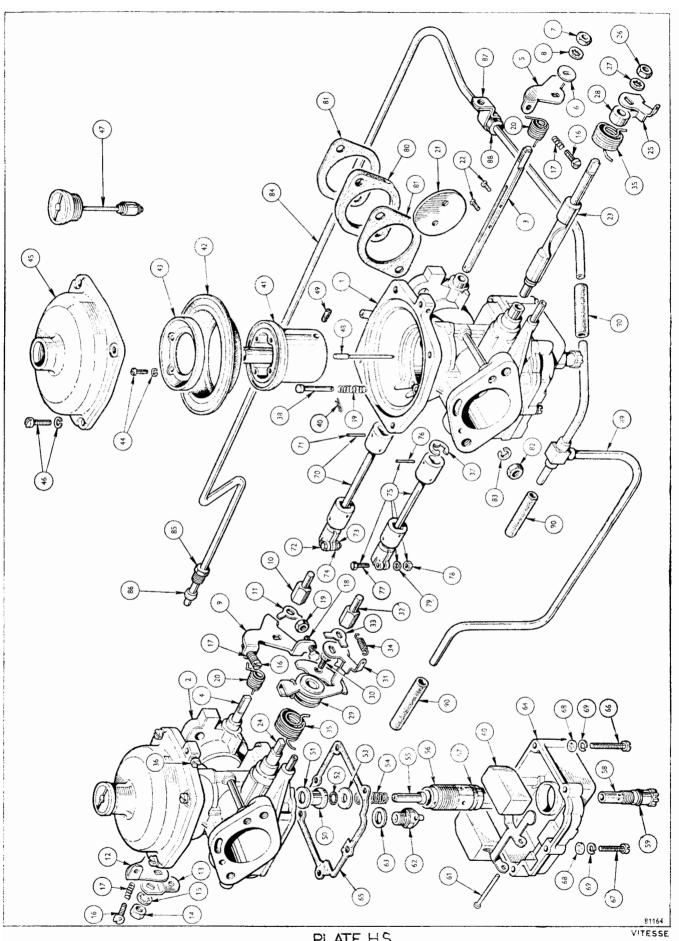


PLATE HS

Part No.	Description	Plate No.	No. per Unit	Remarks
212104	†CARBURETTOR ASSEMBLY—FRONT		1	7
212105	†CARBURETTOR ASSEMBLY—REAR		1	
5 13683	Body assembly, main, front carburettor	HS1	1	
513716	Body assembly, main, rear carburettor	HS2	1	
513684	Spindle, throttle, front carburettor	HS3	1	• •
514964	Spindle, throttle, rear carburettor	HS4	1	
513685	Stop, throttle, front carburettor	H\$5	1	
514977	Washer, replacement, between throttle stop and nut, front carburettor	HS6	1	
51 3687	Nut, securing throttle stop, front carburettor	HS7	1	
513688	Washer, shakeproof, under nut	HS8	1	
513718	Stop, throttle and fast idle lever, rear carburettor	HS9	1	1
513719	Nut, spindle extension, rear carburettor	HS10	1	
513720	Washer, tab, under nut	HS11	1	
51 496 5	Stop, throttle, rear carburettor	HS12	1	
141987	Lever, throttle, rear carburettor	HS13	1	1
513687	Nut Throttle stop and throttle	HS14	1	
5136 88	Washer lever to rear carburettor	HS15	1	
513697	Screw, throttle stop	HS16	3	
5 12282	Spring, throttle stop screw	HS17	3	
512288	Screw, fast idle	HS18	1	
512287	Nut, lock, fast idle screw	HS19	1	Fitted from Engine No.
513691	Spring, throttle return	HS20	2	and future
513689	Throttle	HS21	2	
51 3690	Screw, securing throttle	H\$22	4	
513692	Bar, starter, front carburettor	H\$23	1	
513721	Bar, starter, rear carburettor	HS24	1	
513693	Lever, choke, front carburettor	HS25	1	1
513687	Nut, securing choke lever	HS26	1	
513688	Washer, shakeproof, under nut	HS27	1	
51 369 6	Bush, spring retaining, front carburettor	H\$28	1	
514968	Lever, loose, choke and cam lever assembly, rear carburettor	HS 29	1	
51 4 967	Screw, for swivel	HS30	1	
5 1369 3	Lever, choke, rear carburettor	HS31	1	
513724	Nut, spindle extension, rear carburettor	HS32	1	
513720	Washer, tab, under nut	HS33	1	
513726	Spring, choke lever, rear carburettor	HS34	1	
512296	Spring, starter bar	H\$35	2	
513723	Screw, clamping control cable, rear carburettor	HS36	1	
512 29 8	Ring, retaining starter bar	HS37	2	

Catalogue No. 511408. 1st Issue

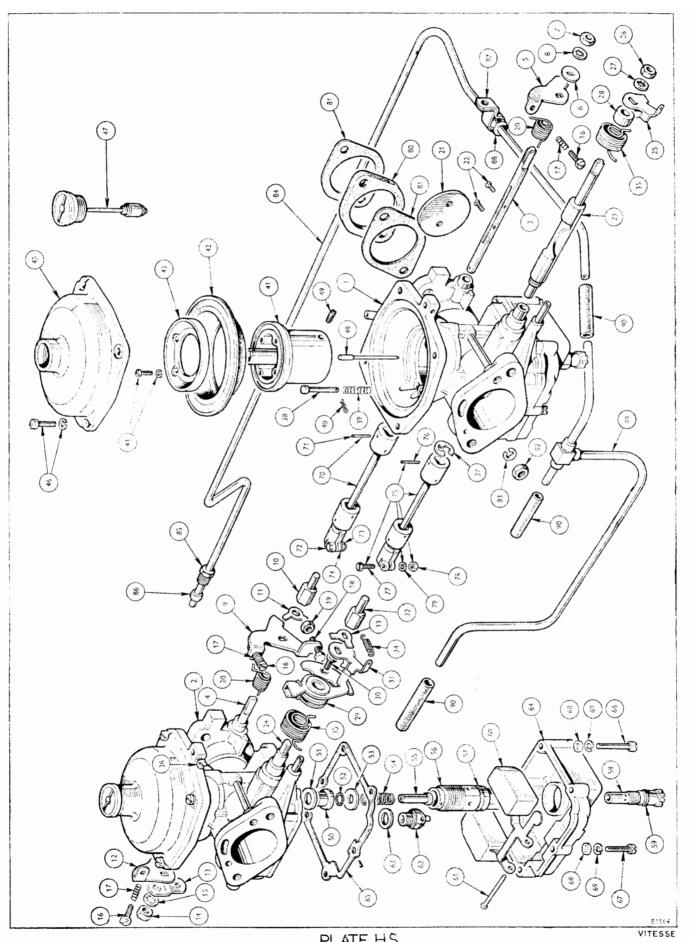

Part No.	Description	Plate No.	No. per Unit	Remarks
	CARBURETTOR ASSEMBLY (continued)			
514969	Pin, air valve lifting	HS38	2	
514970	Spring, air valve lifting pin	HS39	2	
512324	Clip, air valve lifting pin	HS40	2	
514 9 74	AIR VALVE SHAFT	HS41	2	
5 1 3694	Diaphragm, air valve	HS42	2	
514975	Washer, retaining diaphragm	HS43	2	
512276	Screw, complete with spring washer, securing retaining ring	HS44	8	•
513711	Cover, suction chamber	HS45	2	
512274	Screw, complete with spring washer, securing cover to body	H\$46	8	
513712	Damper assembly	HS47	2	
	JET DETAILS			
514976	Needle, metering	H\$48	2	
512280	Screw, locating metering needle in air valve	HS49	2	
512318	Bushing, jet orifice	HS50	2	
512319	Washer, bushing	HS51	2	
512317	"O" Ring, fitted in bushing	HS52	2	
512316	Washer, "O" ring	HS53	2	
512315	Spring, jet orifice	H\$54	2	
513700	Orifice, jet	HS55	2	
512312	Screw, bushing retaining	HS56	2	
512311	"O" Ring, bushing retaining screw	H\$57	2	Fitted from Engine No.
51 23 07	Screw, orifice adjusting	HS58	2	and future
512308	"O" Ring, orifice adjusting screw	HS59	2	
513703	FLOAT AND ARM	H\$60	2	
514971	Pin, float fulcrum	HS61	2	
513702	Needle seating, float chamber	HS62 🤻		₹ S1745
512301	Washer, needle seating	HS63	2	
513706	Chamber, float	HS64	2	
513705	Gasket, float chamber	H\$65	2	
514972	Screw, long	HS66	6	
514973	Screw, short Float chamber to	HS67	6	
512304	Washer, plain main body	H\$68	12	
514980	Washer, spring	HS69	12	
	COUPLING DETAILS			
513714	Coupling assembly, complete, throttle	HS70	1	İ
512713	Roll Pin	HS71	1	
512340	Bolt, clamping	HS72	1	
512334	Nut	H\$73	1	
512339	Washer	HS74	1	
513715	Coupling assembly, complete, starter bar	HS75	1	İ
512713	Roll Pin	HS76	1	İ
512340	Bolt, clamping	H\$77	1	İ
512334	Nut	HS78	1	
512339	Washer	HS79	1	1


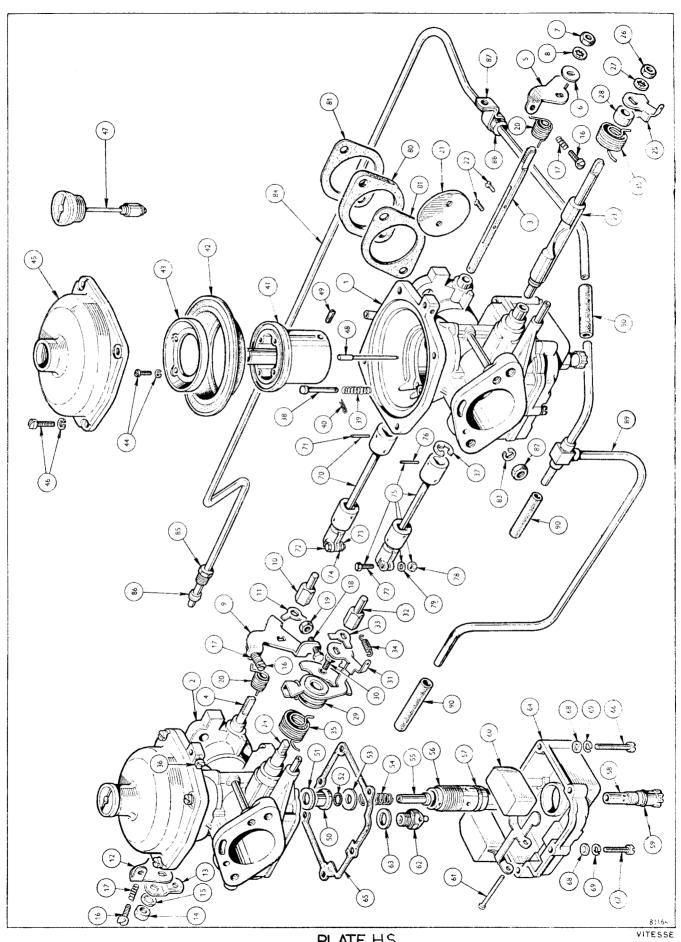


PLATE HS

Part No.	Description	Plate No.	No. per Unit	Remarks
	CARBURETTOR ATTACHMENT DETAILS			
137887	Washer, insulating	H\$80	2	
137881	Washer, joint	HS81	4	
HN2008	Nut Carburettors to	H\$82	4	
WL0208	Washer, lock f manifold	HS83	4	
306769	PETROL PIPE ASSEMBLY—PUMP TO CARBURETTOR	HS84	1	
60176	Nut , tubing Pipe assembly	H\$85	1	
102729	Sleeve to pump	H\$86	1	Fired form Forms No.
138516	Bracket, support, pipe assembly to water pump body	H\$ 8 7	1	Fitted from Engine No.
11 4 178	Grommet, fitted in support bracket	HS88	1	and future
138386	PETROL PIPE ASSEMBLY—CARBURETTOR TO CARBURETTOR	H\$89	1	
12 0331	Connection, flexible, between pipes	H\$90	3	
13 8887	SUCTION PIPE—CARBURETTOR TO DISTRIBUTOR		1	
128262	Sleeve, pipe to carburettor and distributor		2	1
138892	Clip, suction pipe to petrol pipe		5	

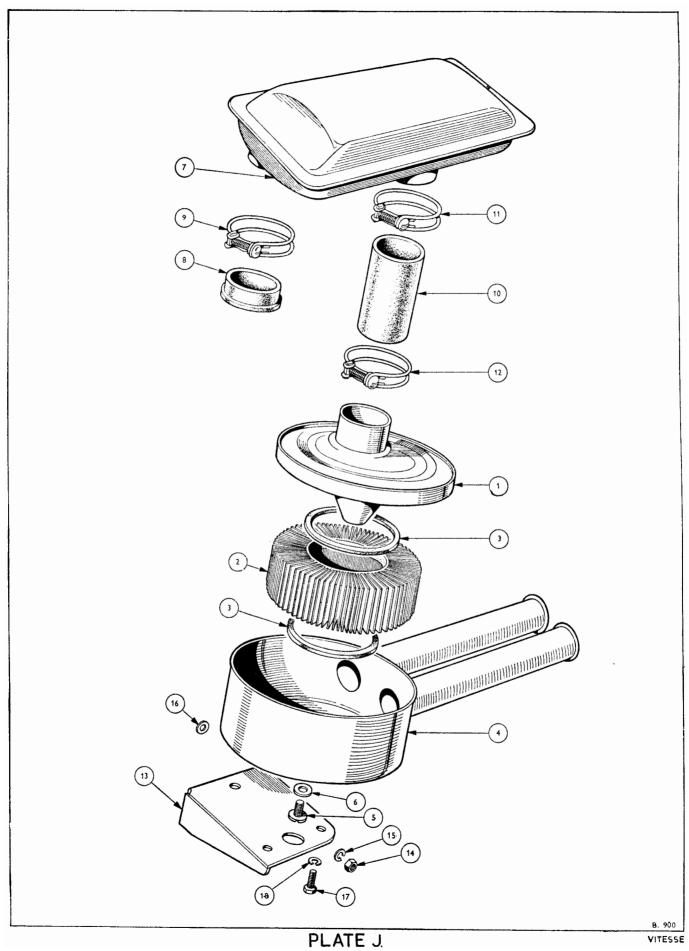

Catalogue No. 511408. 2nd Issue

Part No.	Description	Plate No.	No. per Unit	Remarks
305506	AIR CLEANER ASSEMBLY		1)
Not Serviced	Plate assembly	J1	1	
511835	Element, paper	J2	1	
511833	Gasket, rubber, filter element	J3	2	Fitted up to Engine No.
Not Serviced	Cover assembly	J4	1	only
510497	Screw Cover assembly	15	1	
510498	Gasket sto plate	16	1	J
207939	AIR BOX ASSEMBLY (Not required when closed circuit breather is fitted)	J7	1)
210907	AIR BOX ASSEMBLY		1	
138100	Hose, air box to rocker cover \ Only required when closed		1	
C54012	Clip, hose attachment circuit breather is fitted		2	
119331	Grommet Air box to	18	2	
C54033	Clip carburettor	19	2	
132360	Tube, air box to air cleaner	J10	1	
CS4040	Clip, tube to air box	J11	1	Fitted up to Engine No.
CS4042	Clip, tube to air cleaner	J12	1	only
132359	Bracket, support, air cleaner	J13	1	
HN2008	Nut \ \ Support bracket to	J14	2	
WL0208	Washer, lock inlet manifold	J15	2	
WP0129	Washer, plain, between bracket and manifold	J16	2	
HU0808	Screw, set Air cleaner to	J17	2	
WL0208	Washer, lock ∫ support bracket	J18	2	
133289	Seal, mounting, between air cleaner and bracket		1	


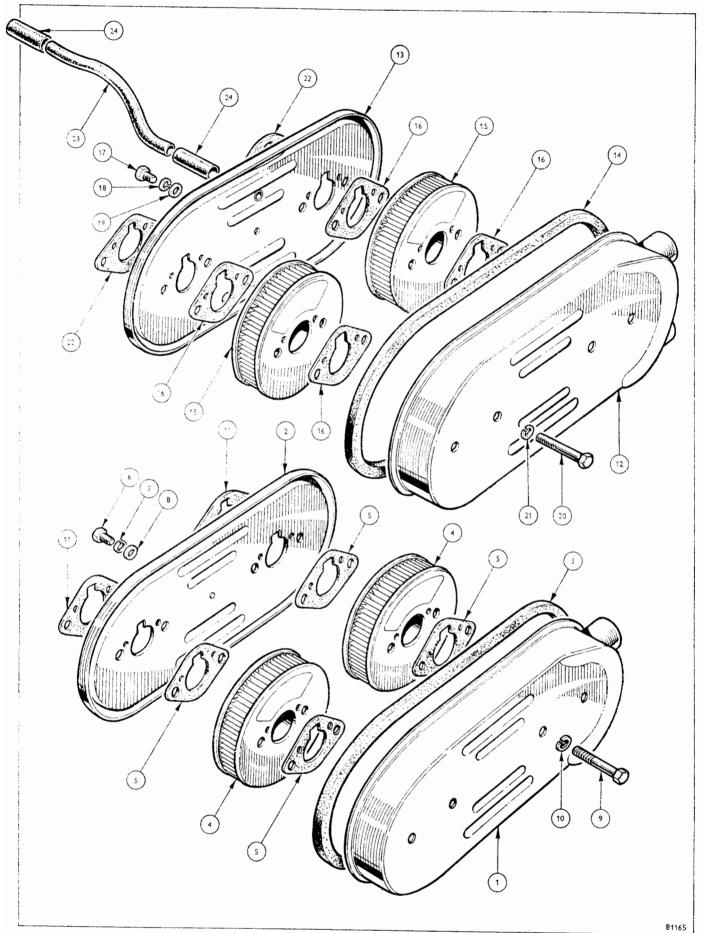


PLATE JS

VITESSE

Part No.		Description	Plate No.	No. per Unit	Remarks
210945		AND SILENCER (Not required when closed fitted)		1	
210943	Cover, front, an	d silencer assembly	JS1	1	
210939	Plate, back Strip, sealing		JS2	1	
138311			183	1	
210986	Element, filter		JS4	2	
137883	Gasket, element	:	JSS	4	Fitted from Engine No.
HU0704	Screw, set	Front cover	126	1	and future
WL0207	Washer, lock	} to	JS7	1	
₩ P0 0 07	Washer, plain	back plate	128	1	
HB0817	Bolt	Air cleaner	JS9	4	
WL0208	Washer, lock	to	JS10	4	
137883	Gasket	carburettor	JS11	2)
211 45 3	•==:	AND SILENCER Only required when closed fitted)		1	
210943		d silencer assembly	JS12	1	
211451	Plate, back, asse	,	JS13	1	
138311	Strip, sealing	•	JS14	1	
210986	Element, filter		JS15	2	
137883	Gasket, element	t .	JS16	4	Firmed Comm. Family 31
HU0704	Screw, set	Front cover	JS17	1	Fitted from Engine No.
WL0207	Washer, lock	> to	JS18	1	and luture
₩P0007	Washer, plain	back plate	JS19	1	
HB0817	Bolt	Air cleaner	JS20	4	
WL0208	Washer, lock	to	JS21	4	
137883	Gasket	carburettor	JS22	2	
143559	Pipe, breather, air cl	eaner to rocker cover	JS23	1	
138099	Hose, connecting br	eather pipe to air cleaner and	JS24	2	
	rocker cover)

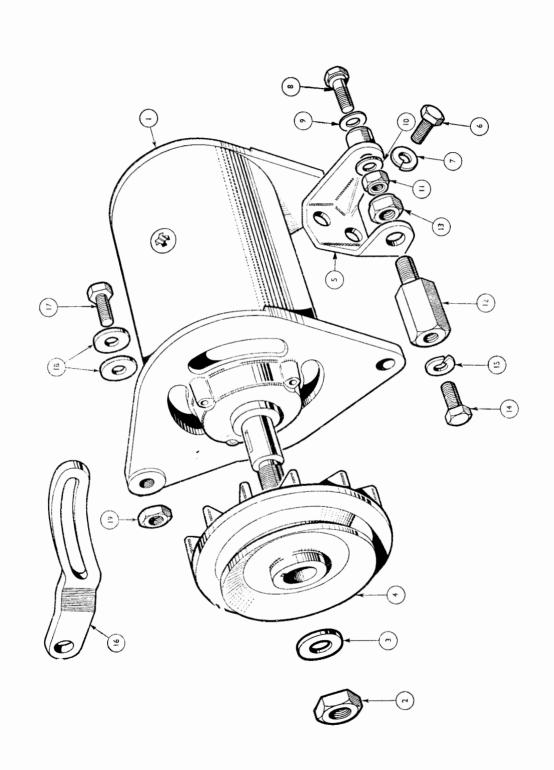


8 901.

ENGINE

Part No.	Description	Plate No.	No. per Unit	Remarks
	DYNAMO MOUNTING			
	Dynamo (comprising items K1, K2, K3)			
	For Dynamo details see Electrical Section			
126322	Pulley, dynamo	K4	1	
133241	Bracket, dynamo support, assembly	K5	1	
-1U0806	Bolt Bracket to	K6	2	
WL0208	Washer, spring cylinder block	K7	2	
HB0814	Bolt	K8	1	
WP0008	Washer, plain Dynamo to	K9	1	
WP0133	Washer, plain bracket, rear	K10	A/R	
N3208	Nut, nyloc, thin	K11	1	
33240	Pedestal, dynamo	K12	1	Alternative to 59015
59015	Pedestal, dynamo		1	Alternative to 133240
ΓN3211	Nut, pedestal to bracket	K13	1	7 11 10 1 11 11 11 11 11 11 11 11 11 11 1
59115	Bolt Dynamo	K14	1	
WL0208	Washer pedestal	K15	1	
133243	Link, dynamo adjusting	K16	1	
HU0857	Bolt	K17	1	
WP0017	Washer, plain > Link to dynamo	K18	2	
IN2158	Nut	K19	1	
	,			
	IGNITION			
128404	Plug, sparking		6	
30449	Plug, sparking		6	Export Holland only
	H. T. LEADS			
28738	Engine Lead Complete No. 1		1	Ì
28739	Engine Lead Complete No. 2		1	
128739	Engine Lead Complete No. 3		1	Fitted up to Engine
28741	Engine Lead Complete No. 4	i,	1	No. HB15000E only
128742	Engine Lead Complete No. 5		1	
128740	Engine Lead Complete No. 6		1	
28774	Engine Lead—Coil to Distributor H. T.		1	J
	H. T. LEADS			
139538	Engine Lead Complete No. 1		1)
139500	Engine Lead Complete No. 2		1	
139539	Engine Lead Complete No. 3		1	Sisted from Engine No
134887	Engine Lead Complete No. 4		1	Fitted from Engine No.
139540	Engine Lead Complete No. 5		1	HB15001E and future
139540	Engine Lead Complete No. 6		1	
139541	Engine Lead—Coil to Distributor H. T.		1	

CLUTCH

Part No.	Description	Plate No.	No. per Unit	Remarks
136824	†CLUTCH COVER ASSEMBLY		1	
507003	Cover	L1	1	
507004	Plate, pressure	L2	1	
512970	Spring, thrust, yellow and black	L3	9	
507002	Eyebolt	L4	3	
42537	Pin, release lever	L5	3	
501133	Lever, release	L6	3	
41326	Strut, release lever	L7	3	
504968	Spring, anti-rattle	L8	3	
511498	Nut, eyebolt	L9	3	
511947	Plate, release lever	-/	1	
38788	Retainer, release lever plate		3	
	,			
116535	DRIVEN PLATE ASSEMBLY	L10	1	
507005	Facing package		1	
DP0407	Dowel		2	
HU0856	Screw, set > Clutch to flywheel assembly		6	
WL0208	Washer, spring		6	
112527	CLUTCH THROW-OUT BEARING	L11	1	
116298	Sleeve, throw-out bearing	L12	1	
132080	CLUTCH OPERATING LEVER ASSEMBLY	L13	1	
132297	CLUTCH SLAVE CYLINDER ASSEMBLY		1	For all replacements use 514356
514356	CLUTCH SLAVE CYLINDER ASSEMBLY (Less push rod)		1	
Not serviced	Body, slave cylinder	L14		
510528	Spring, between body and piston	L15	1	
514293	Seal	L16	1	
510526	Piston	L17	1	
510529	Circlip, retaining piston in body	L18	1	
514292	Boot, rubber, over end of body	L19	1	
132239	Rod, push	L20	1	
108756	Screw, bleed, in slave cylinder body	L21	1	
HU0806	Screw, set Slave cylinder		2	
WL0208	Washer, spring to mounting bracket		2	

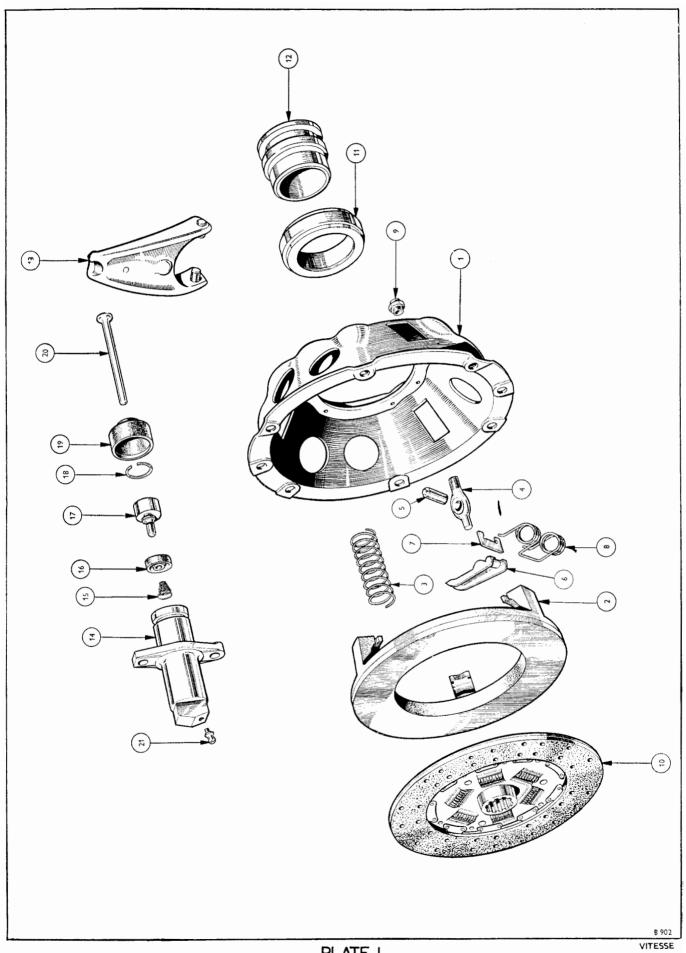

Part No.	Description	Plate No.	No. per Unit	Remarks
511388	†GEARBOX ASSEMBLY (Less Top Cover Extension and Hand Lever Assembly)		1	Alternative to 512390
512390	†GEARBOX ASSEMBLY (Less Top Cover Extension and Hand Lever Assembly)		1	Alternative to 511388
306470	GEARBOX CASE	M1	1	
DP0411	Dowel, top cover, locating	M2	2	
114774	Plug, oil level		1	
114774	Plug, oil drain, in bottom of casing	M3	1	
132077	CLUTCH HOUSING AND FRONT END COVER ASSEMBLY	M4	1	
132078	Cover, front end	M5	1	
132079	Pin, fulcrum	M6	1	
132292	Seal, oil, front end cover	M7	1	
DP0205	Dowel, front end cover to clutch housing	M8	1	
122569	Washer, paper	M9 -	1	
WU3908	Bolt, wedglok	M10	1	
500464	Washer, copper > Clutch housing to gearbox case	M11	1	
HB0908	Bolt	M12	4	
WL0209	Washer, spring	M13	4	
209590	GEARBOX EXTENSION ASSEMBLY	M14	1	
117511	Bearing, in end of extension	M15	1	
117510	Seal, oil, extension end	M16	1	
119096	Bearing, end thrust, speedo drive shaft		1	
119100	Gear, speedo driven assembly	M17	1	
119097	Bearing, speedo assembly	M18	1	Alternative to 138092
138092	Bearing, speedo assembly		1	Alternative to 119097
108757	Seal, oil	M19	1	
119099	Seal, oil	M20	1	For use with 119097
119099	Seal, oil		2	For use with 138092
56305	Screw, locking 🚶 Speedo driven		1	
WL0208	Washer, lock ∫ gear		1	
HU0807	Screw, set, short	M21	7	
WL0208	Washer, lock Extension to gearbox	M22	7	
106437	Washer (paper), joint	M23	1	
137801	Stop rebound, assembly gearbox extension mounting		1	Heavy Duty
138086	Piece, distance		2	J,,

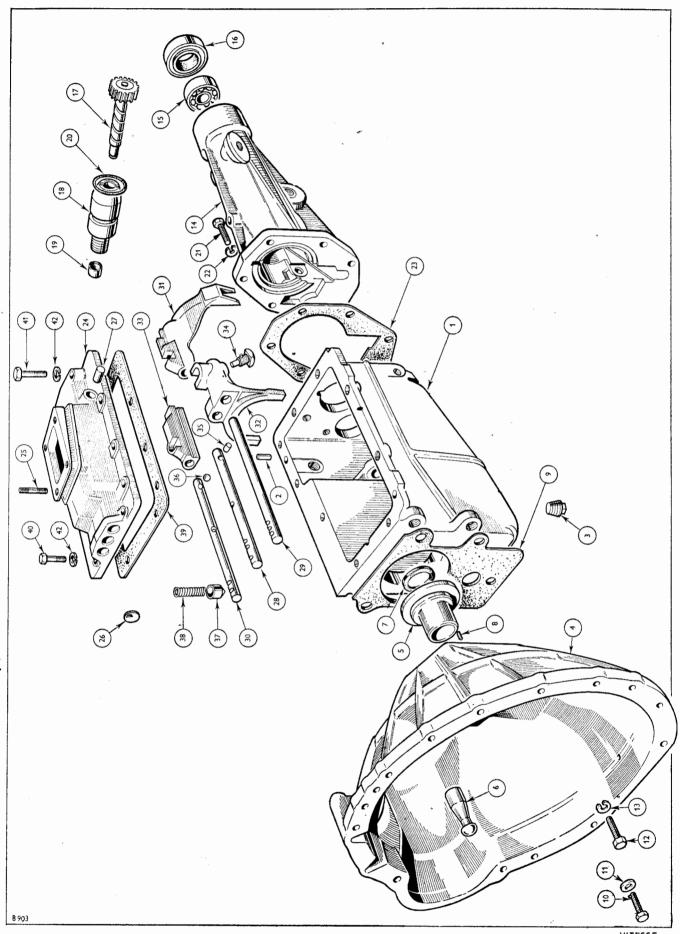


PLATE M.

Part No.	Description	Plate No.	No. per Unit	Remarks
511 4 89	TOP COVER ASSEMBLY		1	
134761	Cover, top, sub-assembly	M24	1	
106957	Stud, extension attachment	M25	4	
104449	Plug, core, selector shaft holes	M26	6	
107099	Plug, interlock hole	M27	1	
108020	Shaft, selector, 1st/2nd	M28	1	
108021	Shaft, selector, 3rd/top	M29	1	
34290	Shaft, reverse actuator	M30	1	
113868	Fork, selector, 1st/2nd	M31	1	
106268	Fork, selector, 3rd/top	M32	1	
114781	Actuator, reverse gear	M33	1	
122653	Screw, set (wedglok), selector to shafts	M34	3	
106478	Pin, interlock) Fitted in	M35	1	
BL0020	Ball, interlock \(\) top cover	M36	2	
106481	Plunger, selector shafts Fitted in	M37	2	
136990	Plunger, selector shafts, reverse > top		1	
106 4 89	Spring, plunger cover	M38	3	
1 06 269	Washer, joint	M39	1	
HB0707	Bolt, short Top cover	M40	7	
HB0 7 11	Bolt, long to casing	M41	2	
WL0207	Washer, lock ∫	M42	9	
	GEARBOX ATTACHMENT DETAILS			_
HN2008	Nut		12	
WL0208	Washer, lock		12	
HB0811	Bolt Transmission unit to		9	Fitted to Commission No. only
HB0812	Bolt rear engine plate and cylinder block		9	Fitted from Commission No. and future
HN2009	Nut		1	
WL0209	Washer, lock		1	
32872	Bolt, dowel		1	

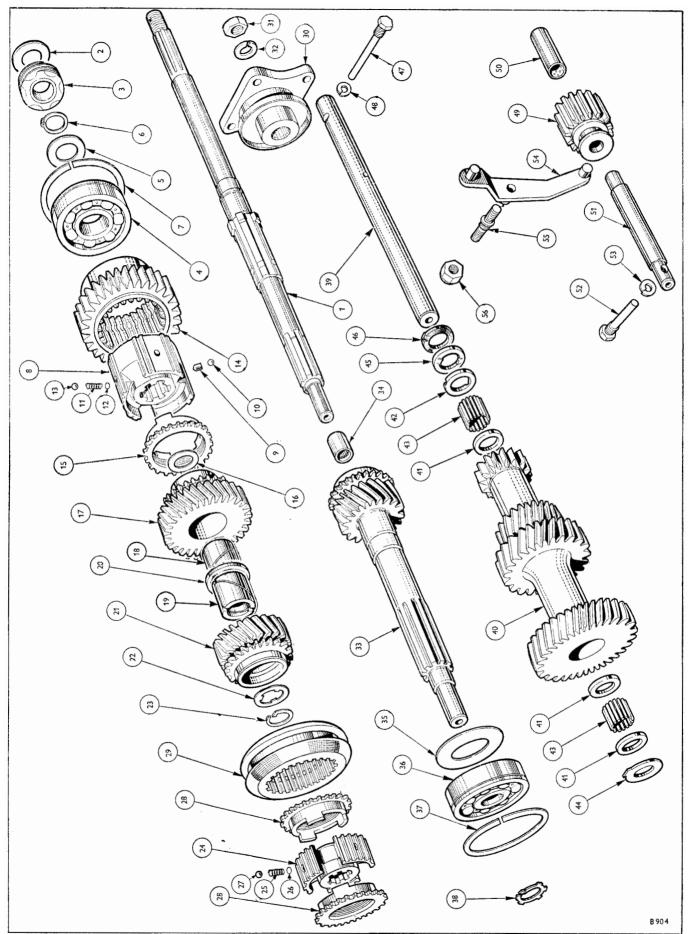


PLATE N

Part No.	Description	Plate No.	No. per Unit	Remarks
204679	MAINSHAFT	N1	1	
117509	Washer, end of mainshaft	N2	1	
119131	Gear, speedo driving	N3	1	
104433	Bearing, ball, mainshaftcentre	N4	1	
104438	Washer	N5	1	
500872	Circlip > Centre bearing to mainshaft and housing	N6	1	
112654	Ring, snap	N7	1	
132446	Gear, 1st speed, and sleeve assembly	N8	1	
106475	Pin, locking \ritted	N9	1	
BL0016	Ball, interlock on sleeve	N10	1	
106388	Spring, synchro ball	N11	3	
37948	Shim, spring Fitted in 1st gear sleeve	N12	A/R	
BL0016	Ball, synchro	N13	3	
	Gear, 1st speed (supplied only as part of Assembly 132446)	N14		
113797	Cup, synchronising, 2nd speed	N15	1	
106262	Washer, between 1st speed and 2nd gear	N16	1	
132296	Gear, 2nd speed	N17	1	
111424	Bush, 2nd speed gear	N18	1	
111423	Bush, 3rd speed gear	N19	1	
111422	Washer, thrust, between 2nd and 3rd speed gears	N20	1	
32097	Gear, 3rd speed	N21	1	
104466	Washer, between 3rd speed gear and circlip	N22	1	
112394	Circlip, retaining gears on mainshaft	N23	1	
509651	Sleeve, synchro and operating, 3rd and top assembly	N24	1	
104445	Spring, in synchro sleeve	N25	3	
37948	Shim, under spring	N26	A/R	
3L0016	Ball, synchro	N27	3	
113797	Cup, synchro, 3rd/top	N28	2	
	Sleeve, operating, 3rd/top (supplied only as part of Assembly 509651)	· N29	•	
109050	FLANGE AND STONEGUARD	N30	1	
HN2012	MAINSHAFT Nut Flange to	N31	1	
WQ0312	Washer, lock mainshaft	N32	1	
208820	CONSTANT PINION SHAFT	N33	1	
116507	Bearing, needle roller	N34	1	
106365	Thrower, oil	N35	1	
104433	Bearing, ball Fitted on	N36	1	
112654	Ring, snap constant shaft	N37	1	
129839	Circlip	N38	1	

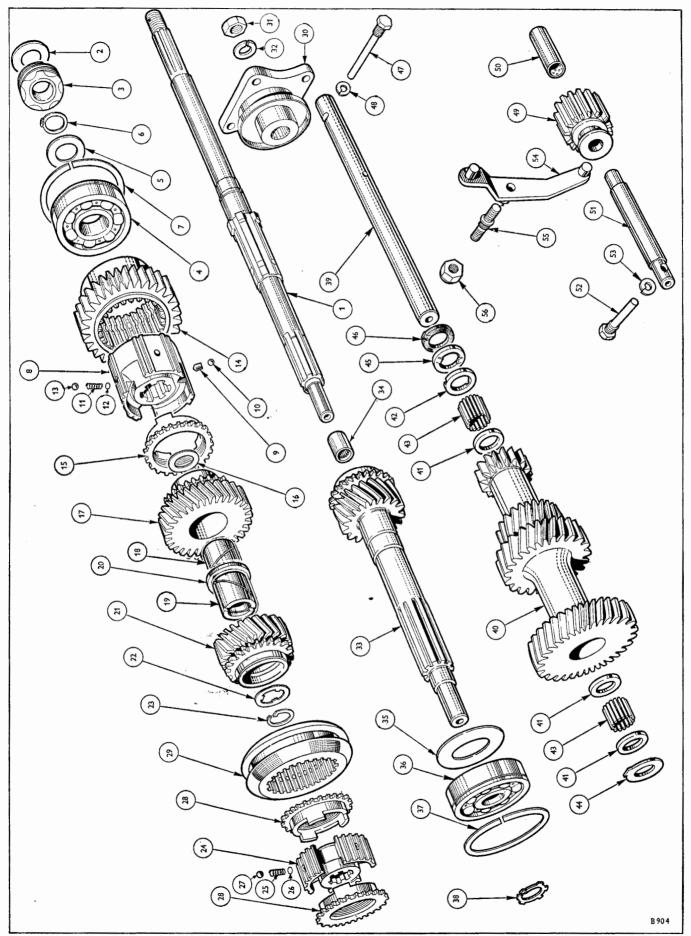


PLATE N

Part No.	Description	Plate No.	No. per Unit	Remarks
119889	COUNTERSHAFT	N39	1	
208788	Gear, cluster	N40	1	
119891	Ring, retaining Retaining needle	N41	3	
119892	Ring, retaining rollers	N42	1	
119893	Roller, needle	N43	50	
113229	Washer, thrust, front of countershaft	N44	1	
106270	Washer Rear of	N45	1	
106271	Washer, thrust countershaft	N46	1	
106476	Screw, locating countershaft in casing	N47	1	
WL0208	Washer, locking locating screw	N48	1	
137532	Spring, countershaft gear cluster		3	
132293	REVERSE IDLER GEAR ASSEMBLY	N49	1	
1 0442 0	Bush, in reverse gear	N50	1	
113071	Spindle, reverse, idler gear	N51	1	
106477	Screw, locating spindle in casing	N52	1	
WL0208	Washer, lock, on screw	N53	1	
106254	REVERSE OPERATING LEVER ASSEMBLY	N54	1	
10 644 8	Fulcrum, reverse operating lever	N55	1	
TN3209	Nut, nyloc, fulcrum to gearbox	N56	. 1	

GEAR SHIFT MECHANISM

Part No.	Description	Plate No.	No. per Unit	Remarks
510867	TOP COVER EXTENSION AND HAND LEVER ASSEMBLY		1	Alternative to 512469
512 4 69	TOP COVER EXTENSION AND HAND LEVER ASSEMBLY		1	Alternative to 510867
304570	Extension, top cover	P1	1	
120305	Washer, joint, top cover extension	P2	1	
HN2008	Nut \ Extension to	P3	4	
WL0208	Washer, lock top cover	P4	4	
120307	Plate, reverse baulk	P5	1	
TK4503	Screw, baulk plate attachment		2	
129121	GEAR LEVER	P6	1	
120570	Bush, spherical	P7	1	Alternative to 138684/5
138685	Bush, spherical		1	Alternative
138684	Insert, spherical bush		1	f to 120570
119252	Spring, reverse baulk	P8	1	
119263	Circlip, retaining spring on lever	P9	1	
119251	Spring, cap retainer	P10	1	
128373	Washer, dished (inner)	P11	1	
119573	Washer, dished (outer)	P12	1	
126607	Cap, top cover extension	P13	1	
126754	Dowel, cap to top cover extension		2	
131246	Knob, gear lever assembly	P14	1	
611353	Grommet, fitted in floor	P15	1	
611177	Washer, rubber, gear lever	P16	1	
	OPERATING SHAFT DETAILS			
129952	Shaft, operating assembly	P17	1	
119262	Bush, operating shaft	P18	1	
129118	Bush, nylon, in hand lever	P19	2	Alternative to 138686
138686	Bush, in hand lever		2	Alternative to 129118
129119	Sleeve, pinch, in hand lever	P20	1	
118053	Seal, oil		1	
12505 4	Bolt Operating shaft	P21	1	
TN3207	Nut, nyloc f to hand lever	P22	1	
118054	Screw, reverse stop, attached to hand lever	P23	1	
JN2108	Nut, lock, on screw	P24	1	
127741	Coupling, gear lever shaft	P25	1	
118041	Shaft, gear lever	P26	1	
118040	Lever, gear (internal)	P27	1	
118053	Seal, oil	P28	2	
122653	Screw, set, taper (Wedglok), gear lever to shaft	P29	1	
DS2516	Dowel, coupling to gear lever shaft	P30	1	
HB0709	Bolt	P31	1	
510596	Washer, fibre > Coupling to operating shaft	P32	2	
TN3207	Nut, nyloc	P33	1	

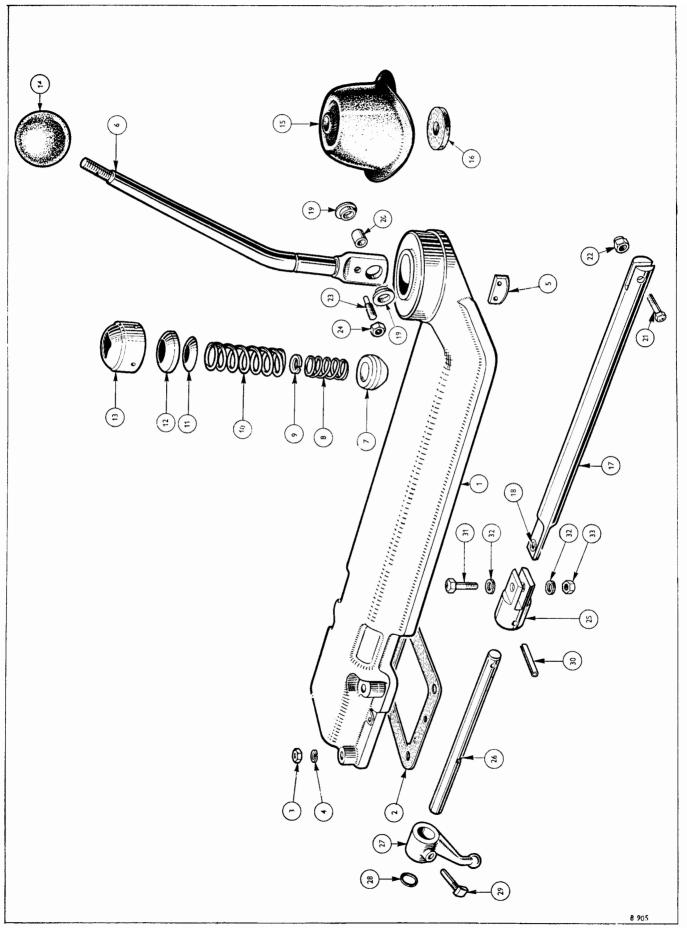


PLATE P

VITESSE

ENGINE MOUNTING

Part No.	Description	Plate No.	No. per Unit	Remarks
132669	FRONT ENGINE MOUNTING			
WP0009	FRONT ENGINE MOUNTING	Q1	2	
	Washer, plain Front engine mounting	Q2	4	
TN3209	Nut, nyloc \int to mounting bracket	Q3	4	
122689	REAR ENGINE MOUNTING	Q6	2	
HN2008	Nut	Q7	2	
WL0208	Washer, lock > Rear engine mounting to bracket	Q8	2	
WP0008	Washer, plain	Q9	2	
133134	Bracket assembly, gearbox mounting	Q10	1	
HU0805	Screw, set	Q11	2	
WL0208	Washer, lock > Mounting bracket to platform	Q12	2	
WP0008	Washer, plain	Q13	2	
209815	Platform, rear engine mounting	Q14	1	
HU0805	Screw, set	Q15	4	
WL0208	Washer, lock > Engine mounting platform to frame	Q16	4	
HN2008	Nut	Q17	4	


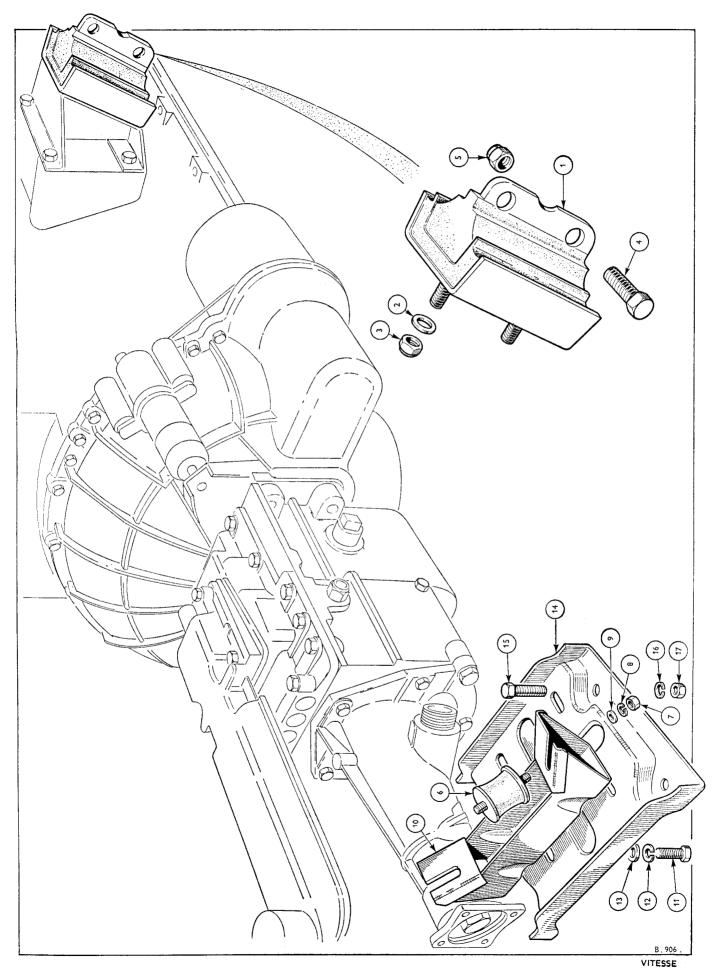


PLATE Q


CHASSIS FRAME

Part No.	Description	Plate No.	No. per Unit	Remarks
401956	CHASSIS FRAME COMPLETE (HOME)		1	Alternative to 401988
401988	CHASSIS FRAME COMPLETE (EXPORT)		1	Alternative to 401956
Not serviced	Crossmember assembly, front	R1	1	
Not serviced	Sidemember assembly—R.H.	R2	1	
Not serviced	Sidemember assembly—L.H.	R3	1	
13210 4	Bracket, suspension inner support assembly—R.H.	R4	1	
132105	Bracket, suspension inner support assembly—L.H.	R5	1	
123287	Plate, stiffener, front cross-member		2	
Not serviced	Plate, gearbox extension securing	R6	1	
305489	Extension, front frame assembly—R.H.	R7	1	
305492	Extension, front frame assembly—L.H.	R8	1	
209012	Cross tube assembly, front	R9	1	
130484	Bracket, mounting, anti-roll bar		2	
132615	Bracket, radiator mounting		2	
133035	Strut assembly, cross-tube to $\int R.H.$		1	
133034	chassis extension L.H.		1	
208893	Outrigger assembly, front—R.H.	R10	1	
208894	Outrigger assembly, front—L.H.	R11	i	
208246	Outrigger assembly (intermediate)—R.H.	R12	i	
208247	Outrigger assembly (intermediate)—L.H.	R13	1	
208750	Outrigger assembly, rear—R.H.	R14	1	
208751	Outrigger assembly, rear—L.H.	R15	i	
205053	Channel, side assembly	R16	2	
203033 133789	•		1	
133788	Bracket, mounting, steering unit rack—R.H.	R17		
208943	Bracket, mounting, steering unit rack—L.H.	R18	1	
	Mounting assembly, rear damper	R19	1	
305461	Extension, rear frame assembly—R.H.	R20	1	
305462	Extension, rear frame assembly—L.H.	R21	1	2
305825	Extension, rear frame assembly—R.H.		1	Export only
305826	Extension, rear frame assembly—L.H.		1	J , ,
Not serviced	Crossmember assembly, rear	R22	1	
209330	Bracket, support assembly, damper—R.H.	R23	1	Alternative to 208935
208935	Bracket, support, damper—R.H.		1	Alternative to 209330
209331	Bracket, support assembly, damper—L.H.	R24	1	
132435	Bracket, mounting, rear axle	R25	2	
139521	Bracket, mounting, rear $\int R.H.$		1	
139522	brake hose \(\bigcap \text{L.H.}		1	
209360	Bracket, assembly, rear axle mounting ∫ R.H.		1	
209361	and handbrake guide \(\bigcup \text{L.H.}		1	
305592	Bracket, front suspension and engine mounting assembly —R.H.		1	
305593	Bracket, front suspension and engine mounting assembly —L.H.	R26	1	
HU0908	Screw, set	R27	8	
118977	Washer, lock	R28	8	
129650	· (
	Plate, tapping Front suspension and engine	R29	4	
HU0909	Screw, set mounting bracket to frame		2	
WP0020	Washer, plain		2	
YN2909	Nut, nyloc	D 20	2	
128356	Shim, front suspension bracket to frame	R30	A/R	

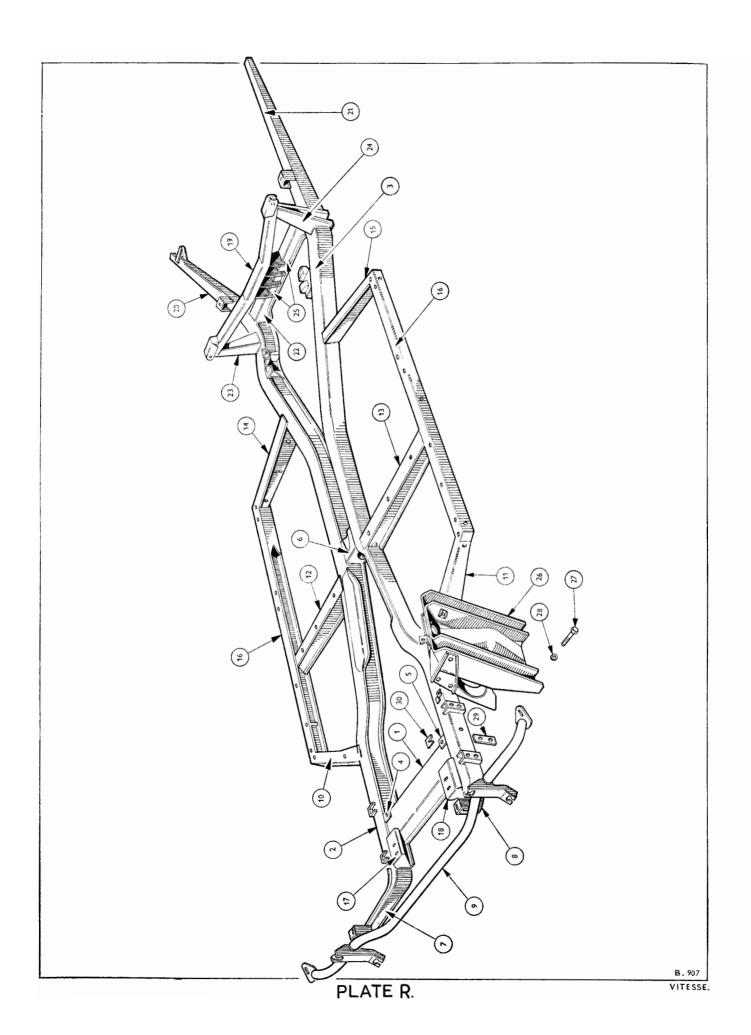


FRONT SUSPENSION

Part No.	Description	Plate No.	No. per Unit	Remarks
306480	FRONT SUSPENSION UNITR.H. (With Disc Brakes)		1	Fitted up to Commission No. HB7082 only
06512	FRONT SUSPENSION UNIT—R.H. (With Disc Brakes)		1	Fitted from Commission No. HB7083 and future
06481	FRONT SUSPENSION UNIT—L.H. (With Disc Brakes)		1	Fitted up to Commission No. HB7082 only
06513	FRONT SUSPENSION UNIT—L.H. (With Disc Brakes) The above units comprise: Lower Fulcrum, Upper and Lower Wishbones, Vertical Link, Ball Joint, Stub Axle, Hub, Brake Unit and Steering Tie Rod Levers.		1	Fitted from Commission No. HB7083 and future
19272	TOP WISHBONE ARM AND BUSH ASSEMBLY	S1	4	
19451	Bush, rubber	S2	4	
IB0918	Bolt, fulcrum \ Top wishbone	S3	4	
N2909	Nut, nyloc attachment	S4	4	
22509	BALL JOINT ASSEMBLY, UPPER WISHBONE	\$5	2	
8261	Gaiter	S6	2	
1B0818	Bolt	S7	4	
N2908	Nut, nyloc Ball assembly to upper wishbone	S8	4	
VP0107	Washer, plain	\$9	4	
09072	VERTICAL LINK-R.H.		1	
109073	VERTICAL LINK-L.H.	S10	1	
(N2910	Nut, nyloc) Ball pin to	S11	2	
VP0010	Washer, plain f vertical link	S 12	2	
32065	STUB AXLE	S13	2	
(N2912	Nut, nyloc) Stub axle	S14	2	
VP0012	Washer, plain \(\) to vertical link	S15	2	
32664	Seal, oil, assembly, between vertical link and inner bearing	S16	2	
32668	Seal, felt		2	
32667	Retainer, felt, seal		2	
32066	Bearing, inner hub	S17	2	
32881	Hub assembly, front	S18	2	
12429	Stud, wheel	S19	8	
29897	Bearing, outer, hub	S20	2	
32666	Washer, 'D'	S21	2.	
N2211	Nut, slotted > Hubs to stub axles	S22	2	
	- 1 mos to stub axies	322		
°C0020	Pin, cotter	S23	2	

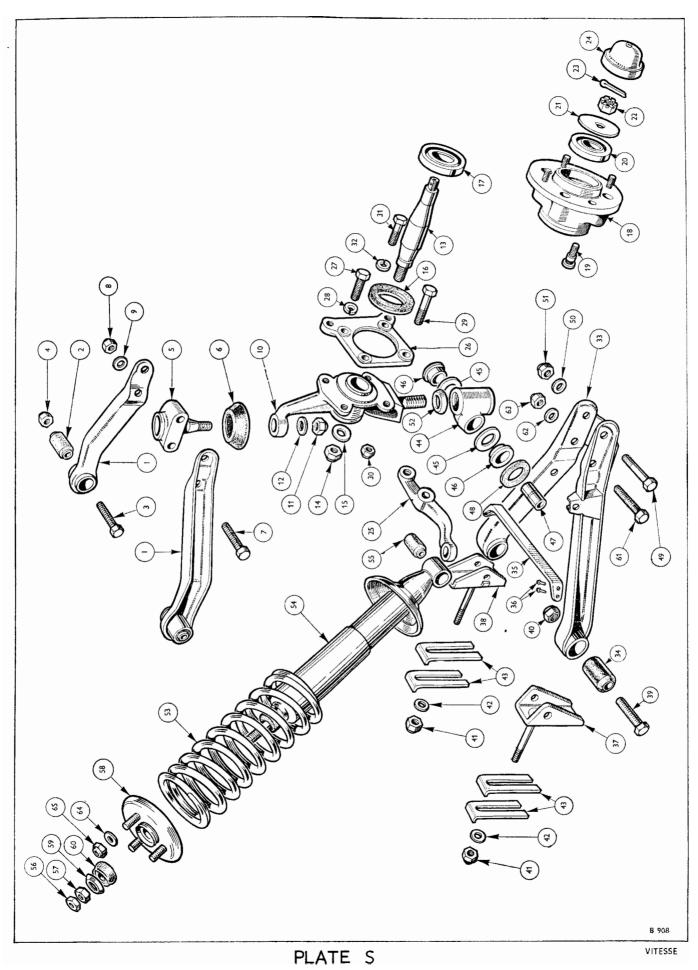

FRONT SUSPENSION

Part No.	Description	Plate No.	No. per Unit	Remarks
205504	TIE ROD LEVER-R.H.		1	
205505	TIE ROD LEVER-L.H.	S25	1	
208716	Plate, mounting, disc brake caliper—R.H.		1	Fitted up to Commission
208717	Plate, mounting, disc brake caliper—L.H.	S26	1	No. HB7082 only
210892	Plate, mounting, disc brake caliper—R.H.		1	Fitted from
210893	Plate, mounting, disc brake caliper—L.H.		1	Commission No. HB7083
38051	Ring, sealing		2	and future
HU0806	Setscrew	S27	4	
WL0208	Washer, lock	S28	4	
23312	Bolt Mounting plate and tie rod levers	S29	2	
YN2909	Nut (to vertical link	\$30	2	
HB0910	Bolt	S31	2	
WQ0309	Washer	S32	2	
		332		
206685	LOWER WISHBONE ASSEMBLY—R.H.		1	
206686	LOWER WISHBONE ASSEMBLY—L.H.	S33	1	
119451	Bush, rubber	S34	4	
125733	Strut, lower wishbone	\$35	2	
SP91D2	Rivet	S36	8	
130757	LOWER WISHBONE FULCRUM BRACKET—FRONT	S37	2	
130758	LOWER WISHBONE FULCRUM BRACKET—REAR	S38	2	
HB0919	Bolt Fulcrum brackets to	S39	4	
YN2909	Nut, nyloc lower wishbone	S40	4	
YN2909	Nut, nyloc	S41	4	
WP0009	Washer, plain > Wishbone fulcrum bracket to frame	S42	4	
122022	Shim	S43	A/R	
132064	BOTTOM TRUNNION ASSEMBLY—R.H.		1	Fitted up to Commission
132063	BOTTOM TRUNNION ASSEMBLY—L.H.	S44	1	No. HB22648 only
132063	Shim, lower trunnion	S45	4	Note: When Parts Numbers
122496	Bearing, nylon	546	4	132038, 122496, or 132039 need
132039	Tube, distance	546 S47	2	replacement, refer to sealing
	·	37/		kit on page 119
140919	BOTTOM TRUNNION ASSEMBLY—R.H.		1	
140920	BOTTOM TRUNNION ASSEMBLY-L.H.		1	
140892	Bearing		4	Fitted from Commission
140893	Piece, distance		2	No. HB22649 and future
140894	Water shield		4	
140895	Water shield		4	J
122534	Seal, dirt, lower trunnion	S48	4	
119142	Bolt	S49	2	
WP0010	Washer, plain > Trunnion to wishbone	S 5 0	2	
YN2910	Nut, nyloc	S51	2	
122126	Seal, oil (trunnion to vertical link)	S 52	2	

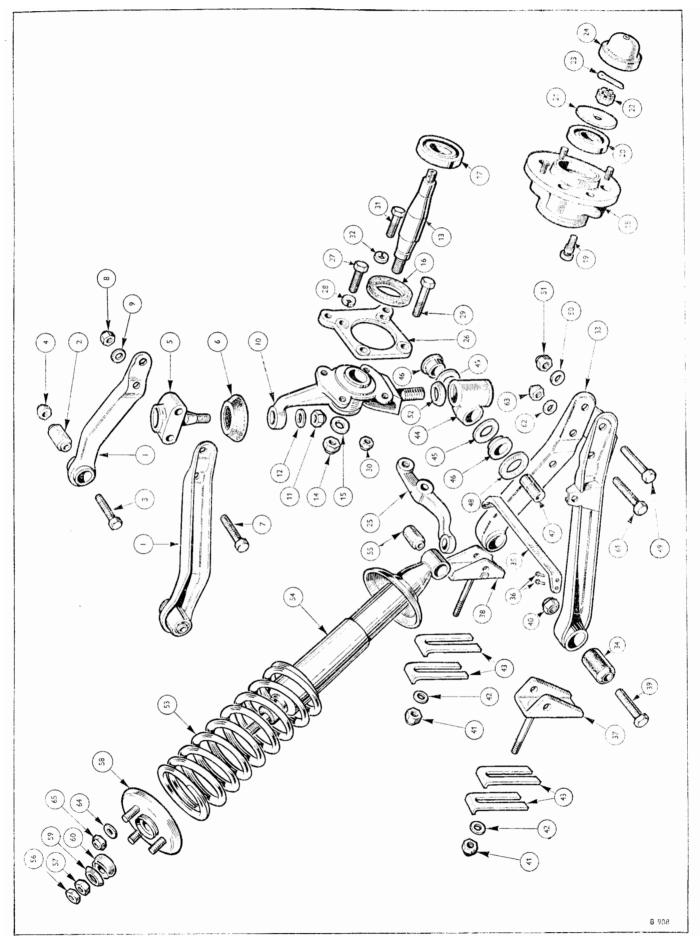

FRONT SUSPENSION

Part No.	Description	Plate No.	No. per Unit	Remarks
209402	FRONT DAMPER AND ROAD SPRING COMPLETE ASSEMBLY		2	
134811	FRONT DAMPER AND ROAD SPRING COMPLETE ASSEMBLY		2	Special Order only
209009	Spring, road, front	\$53	2	
208022	Damper, front	S54	2	
134635	Damper, front		2	Special Order only
119450	Bush, rubber	\$55	2	•
	Nut \ Front damper upper	S56		Not serviced
	Nut, lock plate attachment	S57		separately
122137	Plate, upper spring assembly	S5 8	2	
23231	Cap, spring plate	S 59	4	
09260	Bush, rubber, top	S60	4	
25441	Packing, front road spring, L.HL.H.S.		1	
125441	Packing, front road spring (heavy duty only)		2	
	FRONT DAMPER AND SPRING ATTACHMENT DETAILS			
⊣B1020	Bolt	S 61	2	
№ P0010	Washer, plain Front damper lower attachment	S62	2	
/N2910	Nut, nyloc	S63	2	
№P0035	Washer, plain \ Front damper	S64	6	
/N2907	Nut, nyloc upper attachment	S6 5	6	

ANTI-ROLL BAR

Part No.	Description	Plate No.	No. per Unit	Remarks
207093	ANTI-ROLL BAR	T1	1	
123998	Bush, rubber	T2	2	
123502	Bracket, clamp	Т3	2	
123694	Bolt, 'U'—Home Anti-roll bar	T4	2	
132614	Bracket, stowage, front—Export > mounting		2	
WP0107	Washer, plain brackets	T5	4	
YN2908	Nut, nyloc	T6	4	
125481	Link assembly—R.H.	T7	1	
125482	Link assembly—L.H.	Т8	1	
125074	Stud	Т9	2	
WP0036	Washer, plain Link assembly		2	
YN2909	Nut, nyloc attachment	T10	2	
WP0110	Washer, plain	T11	2	
WP0046	Washer, plain \ Link assembly to	T12	4	
YN2910	Nut, nyloc lower wishbone	T13	2	


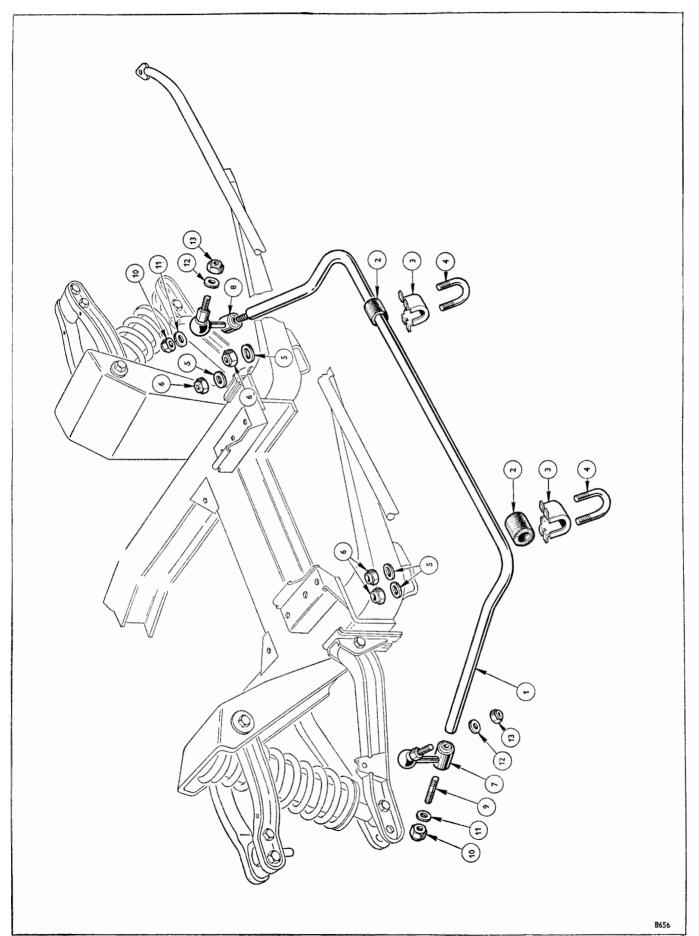


PLATE T

VITESSÉ

REAR AXLE

Part No.	Description	Plate No.	No. per Unit	Remarks
511350	ADEAD AVIE CENTRE ACCEMBLY			
208001	†REAR AXLE CENTRE ASSEMBLY Axle casing assembly	U1	1	
18826	Plug, core	01	1	
1477 4	Plug, filler	U2	1	
14774	Plug, drain	U3	1	
17578	Bush, mounting	U4	2	
31008	Stud, rear road spring	U5	6	
10408	Pin, cotter		1	
IB1019	Bolt	U6	2	
VP0110	Washer, plain Rear axle to frame	U7	2	
N2910	Nut, nyloc	U8	2	
9333	Plate, mounting, rear axle	U9	1	Fitted up to Commission No. HB16129 only
11544	Plate, mounting assembly, rear axle		1	Fitted from Commission No. HB16130 and future
VN0710	Washer, shakeproof \ Mounting plate to	U 10	4	
32856	Bolt hypoid housing	U11	4	
3568	Rubber, mounting, rear axle—Upper	U12	2	
31796	Rubber, mounting, rear axle—Lower	U13	2	
/M0810	Washer, medium	U14	2	
N3209	Nut, nyloc	U15	2	
9815	Housing assembly, hypoid	U16	1	
ot serviced	Cap, bearing	U17		
070	Bush, bearing, cap	U18	4	
14554	Bolt, bearing, cap attachment	U19	4	
/L0209	Washer, lock	U20	4	
4982	Casing, differential	U21	1	
10355	Bearing, differential, casing to hypoid housing	U22	2	
13817	020"	1.103	A/R	
13814	Shim, adjusting differential bearing 4.013"	U23	A/R	
23813	·009″	1124	A/R	
0005 9781	Crown wheel and pinion assembly	U24 U25	1 pair 8	
8977	Bolt Crown wheel to Washer, lock differential casing	U26	8	
8979	Gear, differential—16 teeth	U27	2	
4570	Washer, thrust, for differential gear	U28	2	
)4571	Pinion, differential—10 teeth	U29	2	
04572	° 036″	0 2,	A/R	
)8935	·040″		A/R	
12167	.042"		A/R	
8936	.044"	U30	A/R	
12168	Washer, thrust, pinion gear 046"		A/R	
8937	-048″		A/R	
8938	·052″		A/R	
18939	-056"		A/R	
4573	Pin, cross, differential	U31	1	
10376	Pin, locating, cross pin in differential housing	U32	1	
04556	Bearing, roller, pinion head	U33	1	
00564	(∙010″		A/R	
00563	Shim, adjusting, bearing (pinion head) { .005" .003"	U34	A/R	
00562			A/R	
10907	Spacer, between bearings	U35	1	
0 4 557	Bearing, roller, pinion nose	U36	1	

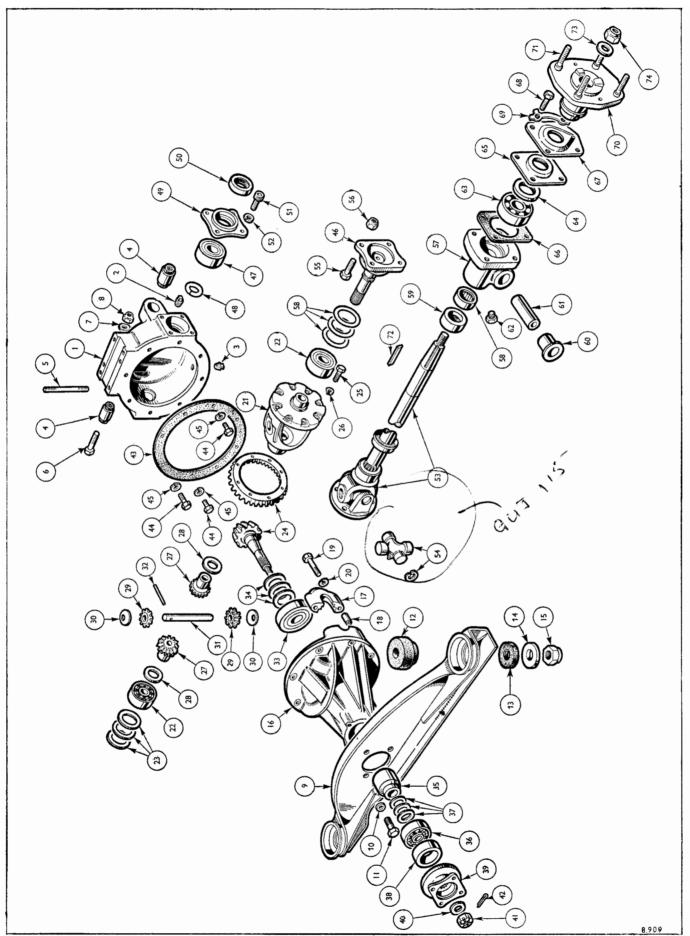


REAR AXLE

Part No.	Description	Plate No.	No. per Unit	- Remarks
	DEAD AVIE CENTRE ACCEMBLY			
104561	REAR AXLE CENTRE ASSEMBLY—cont.		A/R	
04563	Shim, adjusting, bearing (pinion nose) -005"	U37	A/R	
04562	onth, adjusting, bearing (pinion nose) - 003	03/	A/R	
		1120	,	
09054	Seal, oil, on pinion	U38	1	
21770	Flange, pinion and stoneguard, assembly	U39	1	
VP0022	Washer, plain, between pinion flange and nut	U40	1	
09049	Nut, slotted, securing flange to pinion	U41	1	
C0011	Pin, cotter, locking nut	U42	1	
14749	Washer, joint	U43	1	
1U0808	Screw, set Hypoid housing to axle housing	U44	8	
VL0208	Washer, lock	U45	8	
32299	INNER AXLE SHAFT ASSEMBLY	U46	2	
17948	Bearing, ball	U47	2	
32650	Circlip	U48	2	
17547	Cap, bearing retaining	U49	2	
17952	Seal, oil	U 5 0	2	
23803	Screw Bearing retaining	U51	8	
VL0207	Washer cap to housing	U52	8	
32300	OUTER AXLE SHAFT AND FLINGER ASSEMBLY (B.R.D.)	U53	2	
28135	Shaft yoke, assembly		2	
32328	Flange yoke		2	
28133	Unit package	U54	2	w a
28469	Flinger		2	all s
32023	Bolt Shaft joint to	U55	8	Comment of the Commen
11506	Nut, nyloc inner axle shaft	U56	8	1
17852	REAR HUB (INNER) ASSEMBLY	U57	2	
17853	Bearing, needle roller	U58	2	
28978	Seal, oil	U59	2	
19571	Bearing, nylon, inner hub	U60	4	Fitted up to Commission
19572	Piece, distance	U61	. 2	No. only
14370	Rear Bearing and Sealing Kit		1	May be used for replacement
	(comprising items listed below)			purposes on vehicles up to Commission No. only
41218	Bearing, rear hub, inner		4)
41221	Piece, distance		2	
41443	Shim, rear inner hub (outer)		4	Fitted from Commission No.
41444	Shim, rear inner hub (inner)		4	and future
41435	Dirt seal		4	J
09539	Plug, screwed	U62	2	-
04585	Bearing, ball, rear hub	U63	2	
07193	Seal, oil	U64	2	
04773	Housing, oil seal	U65	2	
06664	Washer, joint, oil seal housing	U66	2	
04582	Catcher, oil	U67	2	
21862	Bolt Oil seal housing and	U68	8	
21860	Washer, tab back plate attachment	U69	4	
31567	REAR HUB AND STUD ASSEMBLY	U70	2	
12429	Stud, wheel	U71	8	
04581	Key, axle shaft	U72	2	
	Washer, plain > Rear hub to axle shaft	U73	2	
VV PUUT 3	· · · · · · · · · · · · · · · · · · ·	3.0	-	
₩P0013 510618	Nut, nyloc	U74	2	

REAR SUSPENSION


Part No.	Description	Plate No.	No. per Unit	Remarks
303727	REAR TRANSVERSE ROAD SPRING ASSEMBLY (SALOON ONLY)	V1	1	
305945	REAR TRANSVERSE ROAD SPRING ASSEMBLY (CONVERTIBLE ONLY)		1	
305288	REAR TRANSVERSE ROAD SPRING ASSEMBLY		1	Heavy Duty
	(SALOON AND CONVERTIBLE)			
303727M	Leaf, main (Saloon only)		1	
305945M	Leaf, main (Convertible only)		1	
117575	Bush, rubber	V2	2	
14006	Button, thrust		8	
31102	Blade, spring For use when converting		1	
31118	Pin, centre > normal spring		1	
TN3209	Nut, nyloc, thin to heavy duty		6	
28352	Plate, spring	V3	1	
№P0045	Washer, plain \ Spring and plate	V4	6	
YN2909	Nut, nyloc to axle housing	V5	6	Alternative to AN3509
AN3509	Nut, Philidas		6	Alternative to YN2909
HB1027	Bolt, rear, spring end Rear spring ends	V7	2	
√P0010	Washer, plain > to	V8	2	
N2910	Nut, nyloc vertical link plates	V9	2	
20045	Pivot bracket—R.H.		1	
120044	Pivot bracket—L.H.	V10	1	
HB0926	Bolt, pivot bracket attachment	V11	4	
132912	Radius arm assembly	V12	2	
119451	Bush, rubber	V13	4	
-IB0918	Bolt, radius arm	V14	4	
WP0009	Washer, plain > Radius arms to bracket	V15	4	
YN2909	Nut, nyloc	V16	4	
118825	Shim	V17	A/R	
502661	Washer, plain Pivot brackets	V18	4	
WP0009	Washer, plain to frame	V19	4	
YN2909	Nut, nyloc	V20	4	
132763	REAR VERTICAL LINK ASSEMBLY-R.H.		1	
132764	REAR VERTICAL LINE ASSEMBLY. I LI	V21	4	
HB1027	REAR VERTICAL LINK ASSEMBLY—L.H. Bolt, link plates	V21 V22	1 2	
WP0010	Washer, plain Vertical link plates to rear hub inner	V22 V23	2	
YN2910	Nut, nyloc	V23 V24	2	
122536	Seal, dirt	V2 4 V25	4	Fitted up to Commission
	seeing dire	+ 23	7	No. only
123100	REAR DAMPER	V26	2	
	REAR DAMPER-HEAVY DUTY		2	
134634		V27	8	
	Bush, rubber, damper eve		0	
102987	Bush, rubber, damper eye Pin, fulcrum			
102987 118599	Pin, fulcrum	V28	2	
102987 118599 WP0119	Pin, fulcrum Washer, plain Rear damper upper attachment	V28 V29	2 2	
134634 102987 118599 WP0119 TN3211 WM0069	Pin, fulcrum	V28	2	

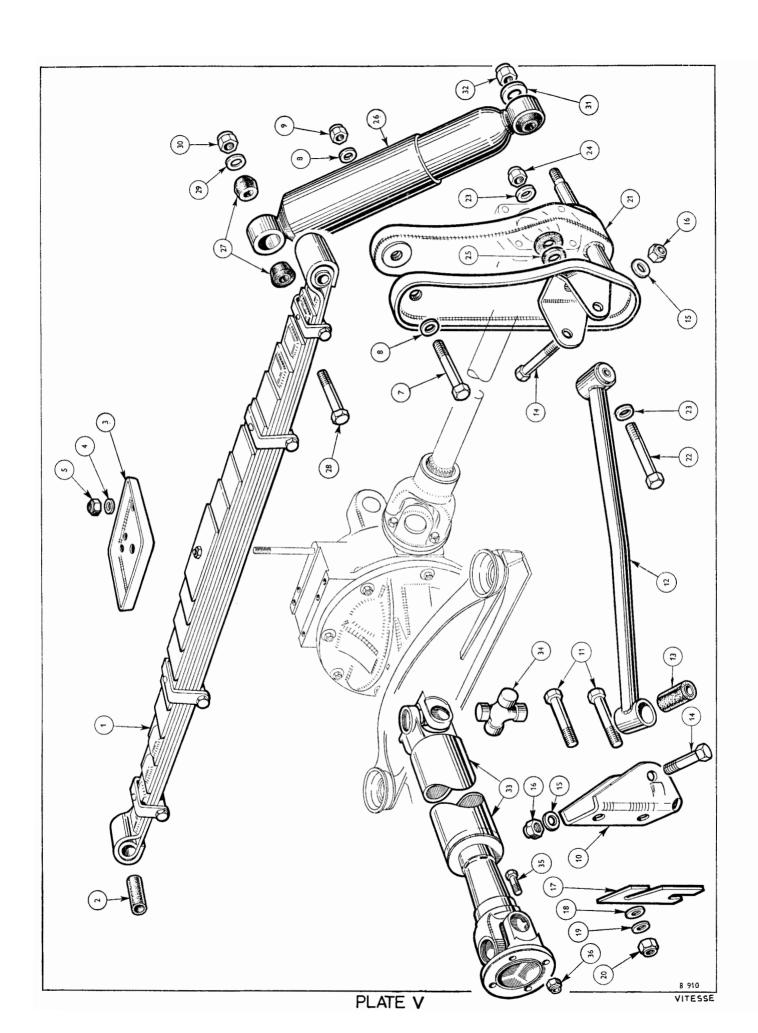

PROPELLOR SHAFT AND ROAD WHEELS

Part No.	Description	Plate No.	No. per Unit	Remarks
208942	†PROPELLOR SHAFT (B.R.D.)	V33	1	
128133	Unit package (B.R.D.)	V34	2	
129361	Bolt Shaft to	V35	4	
TN3208	Nut, nyloc main shaft	V36	4	
100996	Bolt Shaft to	, 50	4	
TN3208	Nut, nyloc hypoid flange		4	
304259	ROAD WHEEL		5	Fitted up to Commission No. HB891 only
303804	ROAD WHEEL		5	Fitted from Commission No. HB892 and future
113087	Nut, road wheel		16	
122806	Plate, nave		4	
113256	Medallion		4	
128348	Bolt \(\)\) Medallion to		4	
WL0209	Washer, lock ∫ nave plate		4	
305789	Wheel trim		4	Fitted from Commission No. HB892 up to HB22493 only
307134	Wheel trim		4	Fitted from Commission No. HB22494 and future
514517	WIRE WHEEL KIT		1)
142597	Adaptor, hub—R.H.		2	
142598	Adaptor, hub—L.H.		2	Special Orders for all countrie
142701	Nut, adaptor attachment		16	> except Germany and
212344	Wheel, wire		5	Switzerland
107 94 8	Nut, wheel—R.H.		2	
107949	Nut, wheel—L.H.		2	
108450	Mallet, wheel nut		1	J
514518	WIRE WHEEL KIT		1)
142597	Adaptor, hub—R.H.		2	
142598	Adaptor, hub—L.H.		2	Special Orders for Germany
142701	Nut, adaptor attachment		16	> and
212344	Wheel, wire		5	Switzerland only
121295	Nut, wheel—R.H.		2	
121296	Nut, whee!—L.H.		2	
121297	Spanner, wheel nut		1	

NOTE:—Tubeless Tyres must not be fitted to the above Wire Wheels.

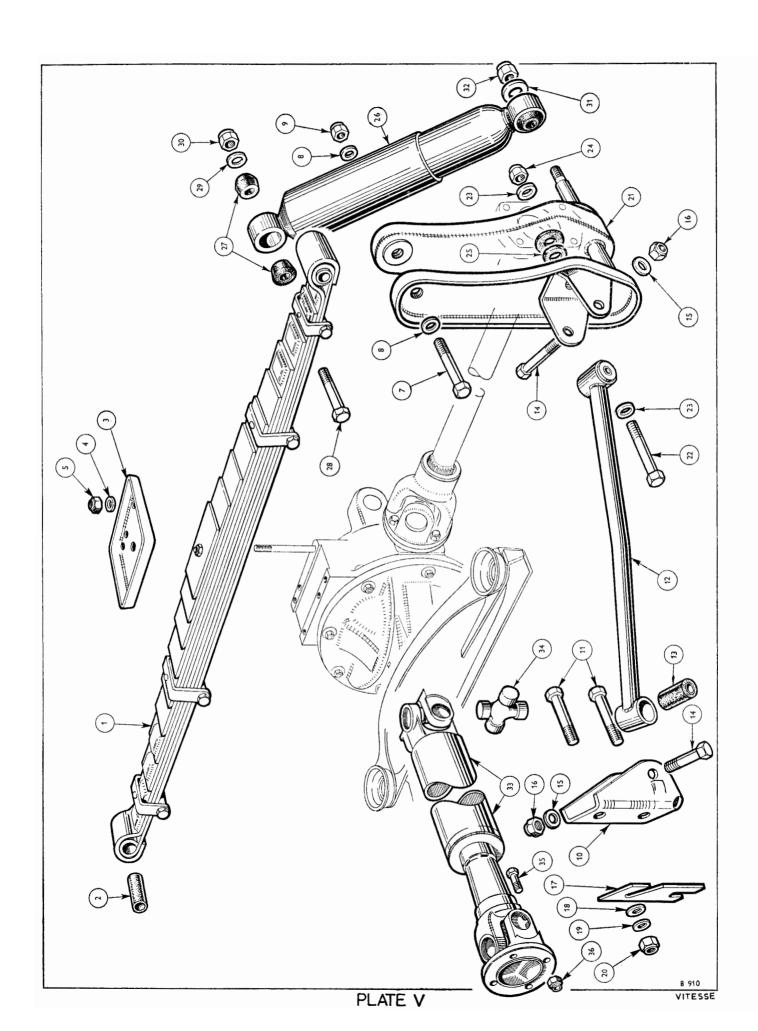

STEERING

Part No.	Description	Plate No.	No. per Unit	Remarks
11 8577	STEERING WHEEL	W1	1	
105438	Nut, steering wheel	W2	1	
132130	STEERING COLUMN UPPER ASSEMBLY —LOCKING		1	Germany only. Fitted up to Commission No. HBD12923 (Saloon) and HBC4770 (Convertible) only
141625	STEERING COLUMN UPPER ASSEMBLYLOCKING		1	Germany only. Fitted from Commission No. HBD12924 (Saloon) and HBC4771 (Convertible) and future
122529	STEERING COLUMN UPPER ASSEMBLY	W3	1	Fitted up to Commission No.
122525	Clip, trafficator cancelling		1	HBD12923 (Saloon) and HBC4770
140755	STEERING COLUMN UPPER ASSEMBLY		1	(Convertible) only Fitted from Commission No.
140549	Clip, trafficator cancelling		1	HBD12924 (Saloon) and HBC4771
132135	SWITCH-IGNITION, STARTER AND STEERING COLUMN LOCK DEVICE ASSEMBLY		1	(Convertible) and future Germany only
205642	STEERING COLUMN, LOWER	W4	1	
122718	Cap, end, steering column cowl	W5	1	
122719	Washer, bearing	W6	1	
122669	Clamp, steering column	W7	1	
125782	Plate, locating	W8	1	
125781	Screw, locating	W9	1	
JN2110	Nut, lock Clamp to steering column	W10	1	
HB0710	Bolt Weeken look	W11	2	
WL0207	Washer, lock	W12	2	
110961	FLEXIBLE JOINT ASSEMBLY		1	
110960	Plate, flexible joint	W13	1	
108977	Bush, rubber, adaptor plate	W14	8	
110959	Adaptor, steering column	W15	2	
108976	Bolt, plate and bushes to adaptor	W16	4	
502136	Washer, plain, on bolt	W17	4	
110461	Strip, conductor, on bolt	W18	1	
502148	Wire, locking bolt		2	
109438 YN2907	Bolt Adaptors to Nut, nyloc column and unit	W19 W20	2 2	
305775	†RACK AND PINION ASSEMBLYR.H.S.		1)
305776	†RACK AND PINION ASSEMBLYL.H.S.		1	Alternative to 305932/1
305932	†RACK AND PINION ASSEMBLY—R.H.S.		1)
305931	†RACK AND PINION ASSEMBLY—L.H.S.		1	Alternative to 305775/6
Not serviced	Rack and Pinion Body	W21		
128002	Bush, rack tube		1	
128020	Cover, end		1	
208058	Rack	W22	1	

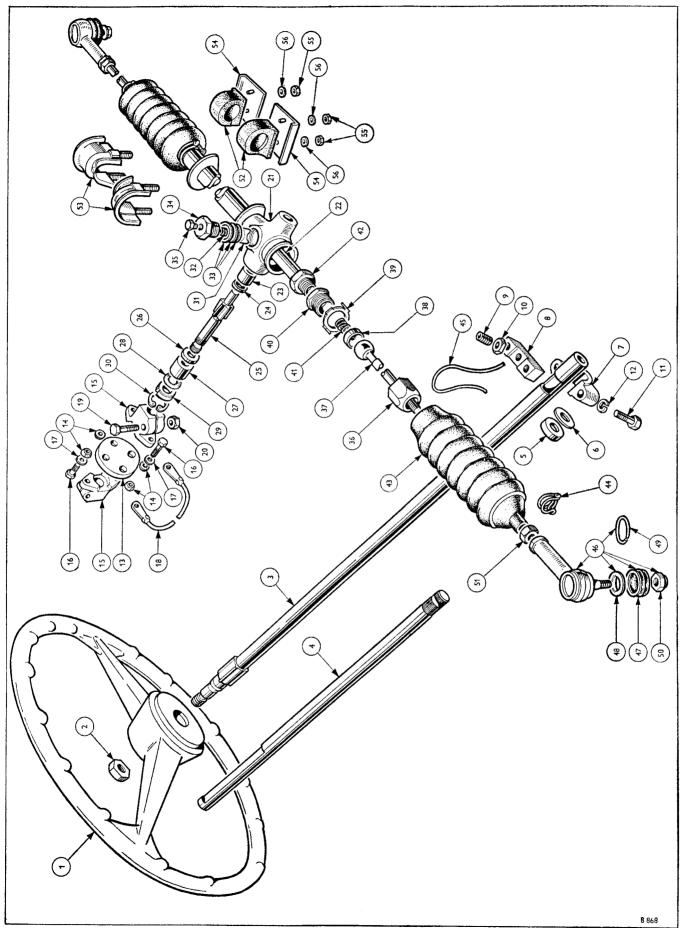


PLATE W


VITESSE

STEERING

Part No.	Description	Plate No.	No. per Unit	Remarks
	RACK AND PINION ASSEMBLY—cont.			
27997	Bush, pinion, lower	W23	1	
28000	Washer, thrust, lower	W24	1	
27995	Pinion—R.H.S.	W25	1	Alternative to
27996	Pinion—L.H.S.	7.25	1	134689/8
34689	Pinion—R.H.S.		1	Alternative to
34688	Pinion—L.H.S.		1	127995/6
27999	Washer, thrust, upper	W26	1	,
27998	Bush, pinion, upper	W27	1	
20941	Shim		A/R	
28021	'O' ring	W28	1	
28001	Plug, end	W29	1	
128008	Pin	,	1	
509537	Circlip	W30	1	
120946	Plunger	W31	1	
126765	Spring	W32	1	
132055	Shim, ·010"	W33	A/R	
120959	Shim, ·002"	,,,,,	A/R	
120949	Shim, '004"		A/R	
132053	Cover, end	W34	1	
33103	Plug, grease	W35	1	
29961	INNER BALL JOINT ASSEMBLY		2	
128024	Housing, ball	W36	2	
28023	Pin, ball	W37	2	
20955	Socket, ball	W38	2	
120957	Washer, tab	W39	2	
130031	Shim, .002"		A/R	
130032	Shim, ·010"		A/R	
129963	Sleeve, adaptor	W40	2	
120953	Spring	W41	2	
120968	Locknut	W42	2	
128004	Bellows	W43	1	
120948	Bellows		1	
CS4009	Clip, bellows	W44	2	
CS4020	Clip, bellows	,	1	
•	Wire, binding bellows—18 SWG. galvanised (Driver's side only)	W45	A/R	
132450	BALL JOINT ASSEMBLY	W46	2	
126575	Gaiter	W47	2	
107741	Retainer, gaiter	W48	2	
126577	Clip, gaiter	W49	2	
TN3209	Nut, nyloc	W50	2	
128022	Locknut, ball joint attachment	W51	2	
133872	MOUNTING BLOCK, RACK AND PINION BODY	W52	2	
133874	Ring, clamp	W53	2	
133875	Plate Rack and pinion body	W54	2	
YN2908	Nut, nyloc to frame	W55	4	
		W56		


Part No.	Description	Plate No.	No. per Unit	Remarks
126586	ACCELERATOR PEDAL AND SUPPORT BRACKET ASSEMBLY		1)
126587	Pedal, accelerator	X1	1	
122438	Bracket, accelerator mounting and stop	X2	1	
HU0716	Screw, set, pedal stop	X3	1	
IN2107	Nut, jam, locking setscrew	X4	1	
PJ8719	Pin, joint Accelerator pedal	× 5	1	
WP0007	Washer, plain > to	X6	1	
PC0007	Pin, cotter mounting bracket	X 7	1	
122392	Spring	X8	1	
YT3706	Screw, self tapping (bracket to floor)		2	
609729	Clip, accelerator pedal		1	
1312 94	ACCELERATOR CONTROL CABLE (INNER)—R.H.S. only	X9	1	Fitted up to Commission No.
131295	ACCELERATOR CONTROL CABLE (OUTER)—R.H.S. only	X10	1	HB7555 L.H.S., HB7604 R.H.S only. For future see page 38
132752	ACCELERATOR CONTROL CABLE ASSEMBLY (INNER)—L.H.S.		1	
132751	ACCELERATOR CONTROL CABLE ASSEMBLY (OUTER)—L.H.S.		1	
132044	Nipple Cable	X11	1	
ΓR6452	Setscrew	X12	1	
132356	Bracket, accelerator cable abutment, cylinder head	X13	1	
HN2008	Nut Abutment bracket	X14	1	
√ L0208	Washer, lock ∫ to manifold	X15	1	J
50274	Return spring, accelerator	X16	1	-
34576	Tab, return spring	X17	1	
132753	Bracket, acceleration cable support		1	
WP0007	Washer, plain, support bracket attachment		1	

R.H.S. only

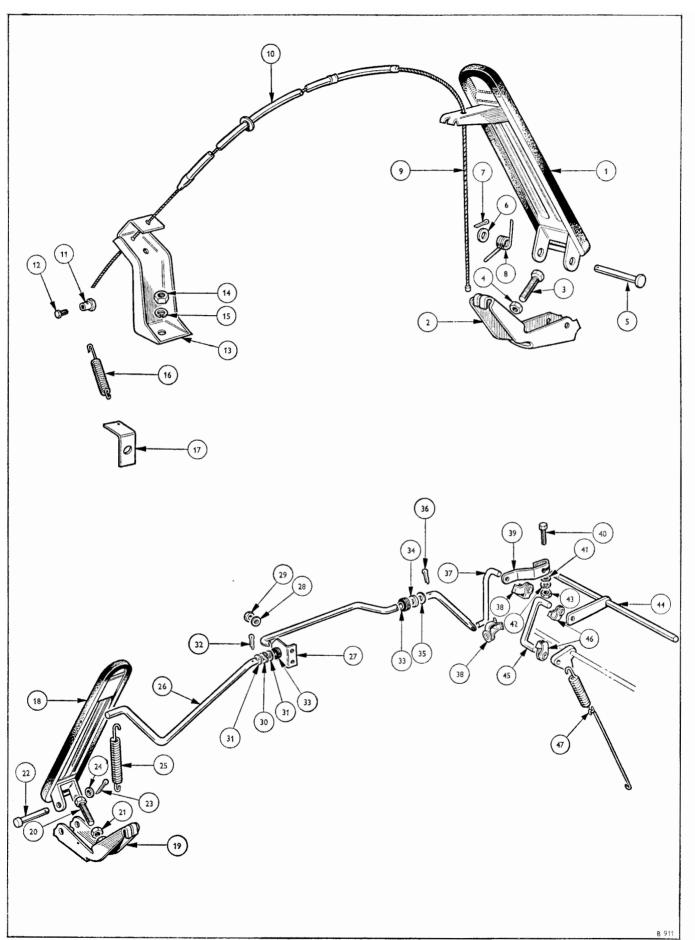


~ '

Part No.	Description	Plate	No. per	Remarks
		No.	Unit	
137257	ACCELERATOR PEDAL AND SUPPORT		1)
137248	BRACKET ASSEMBLY—R.H.S. Pedal, accelerator—R.H.S.	X18	1	Fitted from Commission No.
13/110	redai, accordact — N. 11.3.	710	'	HB7605 R.H.S., HB7556 L.H.S. u
134997	ACCELERATOR PEDAL AND SUPPORT BRACKET ASSEMBLY—L.H.S.		1	to Engine No. HB22116E only
134985	Pedal, acceleratorL.H.S.		1	J
139918	ACCELERATOR PEDAL AND SUPPORT BRACKET ASSEMBLY—R.H.S.		1]
139916	Pedal, accelerator—R.H.S.		1	Fired from Facing No. 11022447
139909	Clip, accelerator—R.H.S.		1	Fitted from Engine No. HB221171 up to only
139924	ACCELERATOR PEDAL AND SUPPORT BRACKET ASSEMBLY—L.H.S.		1	
139925	Pedal, accelerator—L.H.S.		1	
139909	Clip, accelerator—L.H.S.		1	
134998	Bracket assembly, accelerator mounting and stop	X19	1	ጎ
HU0716	Screw, set, pedal stop	×20	1	
JN2107	Nut, jam, locking setscrew	X21	1	Fitted from Commission No.
PJ8719	Pin, joint Accelerator	X22	1	≻HB7605 R.H.S., HB7556 L.H.S. up
WP0007	Washer, plain > pedal to mounting	X23	1	to only
PC0007	Pin, cotter bracket	X24	1	
60274	Spring, pedal return	X25	1	Fitted from Commission No.
00271	Spring, pedar return	723	•	HB7605 R.H.S., HB7556 L.H.S. u to Engine No. HB22116E only
YT3706	Screw, self-tapping, mounting bracket to floor		2)
209471	ACCELERATOR CROSS-SHAFT-R.H.S.	X26	1	
209799	ACCELERATOR CROSS-SHAFT ASSEMBI	Υ.	1	
134955	Bracket assembly, accelerator cross-shaft	×27	1	
WL0207	Washer, lock Bracket to	X28	2	Fitted from Commission No.
HN2007	Nut dash panel R.H.S. only	X29	2	HB7605 R.H.S., HB7556 L.H.S. u
WD0159	Washer, double coil Cross-	X30	1	to only
WP0009	Washer, plain shaft to	X31	2	1/
PC0008	Pin, cotter bracket	X32	1	
134540	Bearing, cross-shaft	X33	2	
134953	Washer, felt, accelerator cross-shaft	X34	2	
WP0009	Washer, plain, between felt washer and cotter pin—R.H.S.		1	
WP0009	Washer, plain, between felt washer and cotter pin—L.H.S		2	
PC0008	Pin, cotter, retaining washers on cross-shaft	X36	1	
134878	Link, accelerator cross-shaft to relay actuating lever	X37	1	Fitted from Commission No.
606698	Clip, link attachment	X38	2	HB7605 R.H.S., HB7556 L.H.S. u
000070	City, mix attachment	√30	2	to Engine No. HB22116E only

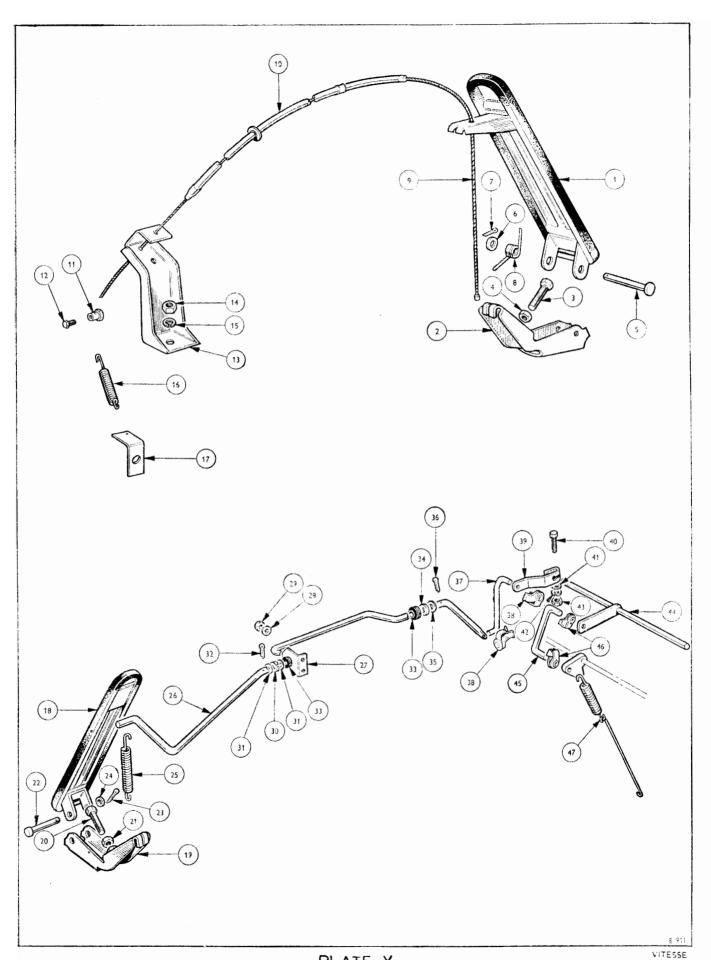

Part No.	Description	Plate No.	No. per Unit	Remarks
134880	RELAY ACTUATING LEVER	X39	1)
HU0708	Screw, set	X40	1	1
WP0023	Washer, plain Actuating lever	X41	1	
WL0207	Washer, lock to relay spindle	X42	1	İ
HN2007	Nut	X43	1	Fitted from Commission No.
134821	Lever and spindle assembly, relay	X44	1	► HB7605 R.H.S., HB7556 L.H.S., up
134879	Link, relay lever to carburettor lever	X45	1	to Engine No. HB22116E only
606698	Clip, link attachment	X46	1	
603790	Plug, blanking cable hole		1	
60247	Spring, throttle return		1	1
136968	Extension, return spring		1	J
140106	Link, throttle		1	ጎ
HN2007	Nut \ \ Link to		1	
WL0207	Washer, lock cross-shaft		1	
HN2007	Nut \(\frac{1}{2}\) Link to carburettor		1	
₩L0207	Washer, lock operating lever		1	Fitted from Engine No. LIB224175
114438	Spring, return		1	Fitted from Engine No. HB22117E
PC0011	Pin, split, cross-shaft		1	up to only
131807	Plate, spring anchor		1	
HU0704	Screw, set Anchor		1	
WP0007	Washer, plain > plate		1	
TN3207	Nut, nyloc, thin to dash		1	

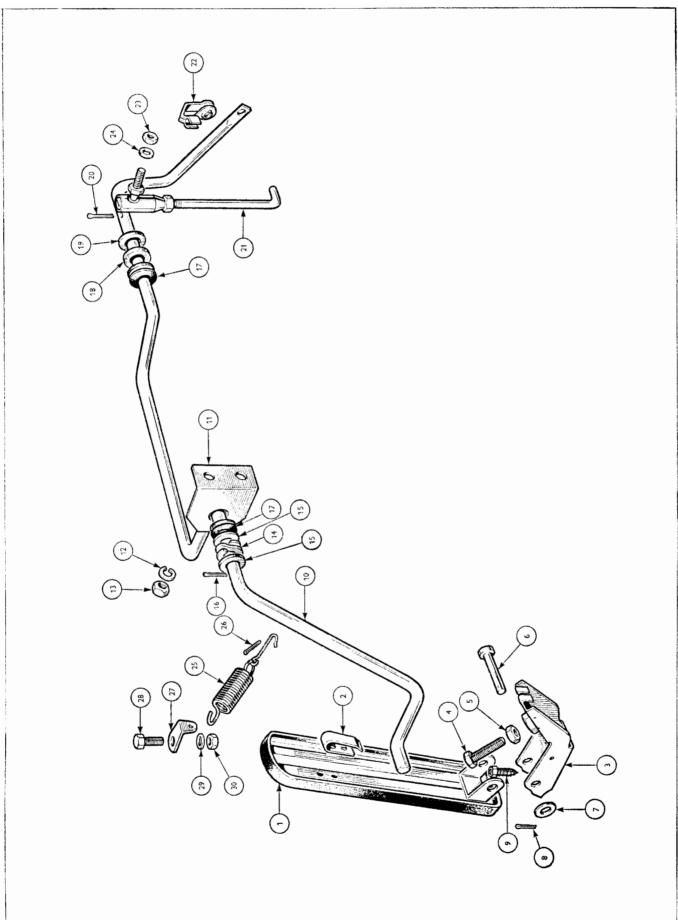

Part No.	Description	Plate No.	No. per Unit	Remarks
139918	ACCELERATOR PEDAL AND SUPPORT BRACKET ASSEMBLY—R.H.S.		1	
139924	ACCELERATOR PEDAL AND SUPPORT BRACKET ASSEMBLY—L.H.S.		1	
139916	Pedal, accelerator, R.H.S.	XS1	1	
139925	Pedal, accelerator, L.H.S.	7(5)	1	
139909	Clip, accelerator pedal	XS2	1	
134998	Bracket assembly, accelerator mounting and stop	XS3	1	
HU0716	Screw, set, pedal stop	XS4	1	}
JN2107	Nut, jam, locking setscrew	XS5	1	
PJ8719	Pin, joint Accelerator pedal	XS6	1	1
WP0007	Washer, plain > to	XS7	1	
PC0007	Pin, cotter mounting bracket	XS8	1	1
YT3706	Screw, self-tapping, mounting bracket to floor	XS9	2	Fitted from Commission No. HB20861 and future. 1600 cc. models only
212679	ACCELERATOR CROSS-SHAFT ASSEMBLY—R.H.S.	XS10	1	Fitted from Commission No. HC1 uto HC only. Vitesse 2-litre mode
212680	ACCELERATOR CROSS-SHAFT ASSEMBLYL.H.S.		1	
134955	Bracket assembly, accelerator cross-shaft	XS11	1	
WL0207	Washer, lock Bracket to	XS12	2	
HN2007	Nut ∫ dash panel	XS13	2	1
WD0159	Washer, double coil	XS14	1	
WP0009	Washer, plain	XS15	2	
PC0008	Pin, cotter	XS16	1	
134540	Bearing, accelerator cross-shaft	XS17	2	
134953	Washer, felt, accelerator cross-shaft	XS18	2	
WP0009	Washer, plain, between felt washer and cotter pin-R.H.S.	XS19	1	
WP0009	Washer, plain, between felt washer and cotter pin-L.H.S.		2	
PC0008	Pin, cotter, retaining washers on cross-shaft	XS20	1	J
143530	THROTTLE LINK	XS21	1	Fitted from Commission No. HB20861 up to HC1 only. 1600 cc. models only
147440	THROTTLE LINK		1	For 2-litre model only. Fitted from Commission No. HC1 up to HC only
606698	Clip, link to cross-shaft	XS22	1	
JN2107	Nut \ \ Link to carburettor	XS23	1	Fitted from Commission No.
WL0207	Washer operating lever	XS24	1	HB20861 and future 1600 cc.
114438	Spring, return, throttle link	XS25	1	models only
PC0011	Pin, split, securing return spring	X\$26	1	,
131807	Plate, spring anchor	XS27	1	Fitted from Commission No. HC1
HU0704	Screw, set Anchor plate	XS28	1	up to HC only. Vitesse 2-litre
WP0007	Washer, plain	XS29	1	models
TN3207	Nut, nyloc, thin to dash	XS30	1	1


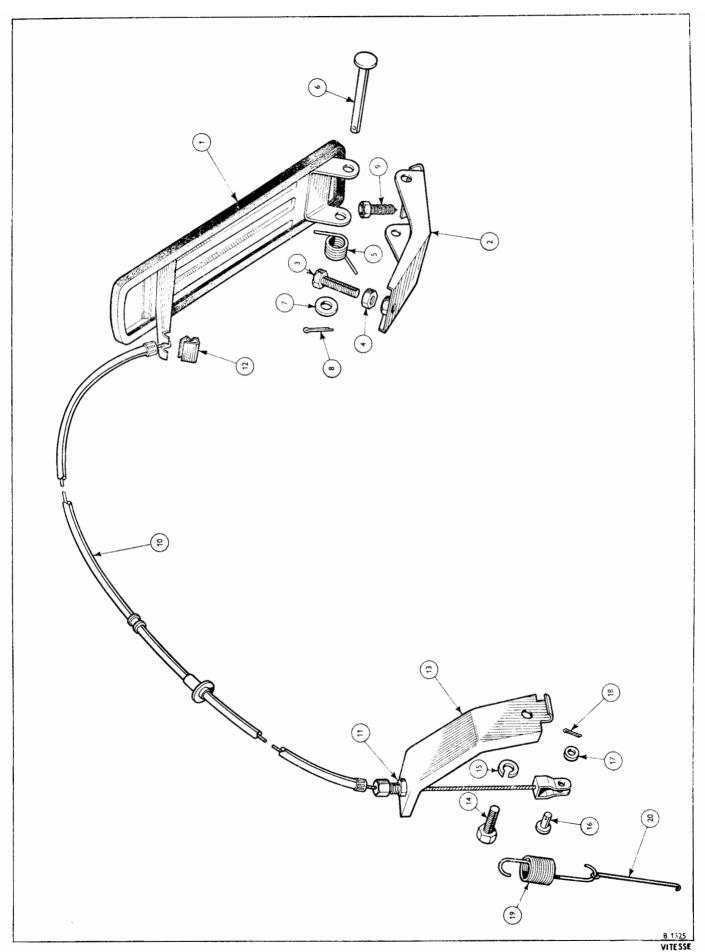


PLATE XT

Part No.	Description	Plate No.	No. per Unit	Remarks
147654	ACCELERATOR PEDAL AND SUPPORT BRACKET ASSEMBLY—R.H.S.		1	
147653	ACCELERATOR PEDAL AND SUPPORT BRACKET ASSEMBLY—L.H.S.		1	
37247	Pedal, accelerator, R.H.S.	XT1	1	
26587	Pedal, accelerator, L.H.S.		1	
147655	Bracket, accelerator, mounting and stop	XT2	1	
HU0712	Screw, set, pedal stop	XT3	1	
N2107	Nut, jam, locking setscrew	XT4	1	
22392	Spring	XT5	1	
J8719	Pin, joint Pedal to	XT6	1	
№ Р0007	Washer, plain mounting bracket	XT7	1	
PC0007	Pin, cotter	XT8	1	
/T3706	Screw, spire speed, support bracket to floor	XT9	2	Fitted from Commission No. HC and future
4738 8	ACCELERATOR CONTROL CABLE ASSEMBLY—R.H.S.	XT10	1	Vitesse 2-litre models
47389	ACCELERATOR CONTROL CABLE ASSEMBLY—L.H.S.		1	
46984	Nut, adjusting, accelerator cable	XT11	2	
09729	Clip, securing control cable to accelerator pedal	XT12	1	
46868	Bracket, abutment, accelerator cable	XT13	1	
HU0755	Screw, set \ Abutment	XT14	1	
∕ /L0207	Washer, lock of to manifold	XT15	1	
J8504	Pin, joint Accelerator cable	XT16	1	
∨ P0005	Washer, plain to	XT17	1	
C0005	Pin, split carburettor lever	XT18	1	
36835	Spring, throttle return	XT19	1	
47131	Link, throttle spring attachment	XT20	1	


CLUTCH AND BRAKE PEDALS

Part No.	Description	Plate No.	No. per Unit	Remarks
205593	CLUTCH PEDAL ASSEMBLY		1	
	(Complete with Mounting Bracket)		•	
119581	Bracket assembly, pedal mounting	Y1	1	
122252	Pedal, clutch, assembly	Y2	1	
105605	Bush, pedal to shaft	Y3	1	
122289	Pad, rubber, on pedal	Y4	1	
119575	Shaft, pedal \ Pedal to	Y5	1	
5065 4 2	Circlip mounting bracket	Y6	2	
114438	Spring, pedal return	Y7	1	
209256	BRAKE PEDAL ASSEMBLY-L.H.S.		1)
	(Complete with Mounting Bracket)			Fitted up to Commission
209882	BRAKE PEDAL ASSEMBLY-R.H.S.		1	No. HB15000 only
207002	(Complete with Mounting Bracket)		'	ł
	(Somplete With Flouriting Bracket))
211127	BRAKE PEDAL ASSEMBLY-L.H.S.		1	Fitted from Commission
				No. HB15001 and future
211166	BRAKE PEDAL ASSEMBLY—R.H.S.		1	140. HB13001 and luttire
133279	Bracket assembly, pedal mounting	Y8	1	Fitted up to Commission
				No. HB15000 only
138803	Bracket assembly, pedal mounting—R.H.S.		1	Fitted from Commission
138717	Bracket assembly, pedal mountingL.H.S.		1	∫ No. HB15001 and future
133277	Pedal, brake assembly—L.H.S.	Y9	1	Alternatives
136666	Pedal, brake assembly—R.H.S.		1	}
138715	Pedal, brake assembly—L.H.S.		1	Alternatives
138802	Pedal, brake assembly—R.H.S.		1	<i>f</i>
105605	Bush, pedal to shaft	Y10	1	
122289	Pad, rubber, on pedal	Y11	1	
119575	Shaft, pedal \ Pedal to mounting	Y12	1	
506542	Circlip ∫ bracket	Y13	1	
11 44 38	Spring, pedal return	Y14	1	
HU0705	Screw, set \text{Pedal and master cylinder}	Y15	16	
WL0207	Washer, lock \int mounting brackets to dash	Y16	16	
₩P0139	Washer, plain		8	
125217	Cover, dust, brake and clutch pedal	Y17	2	

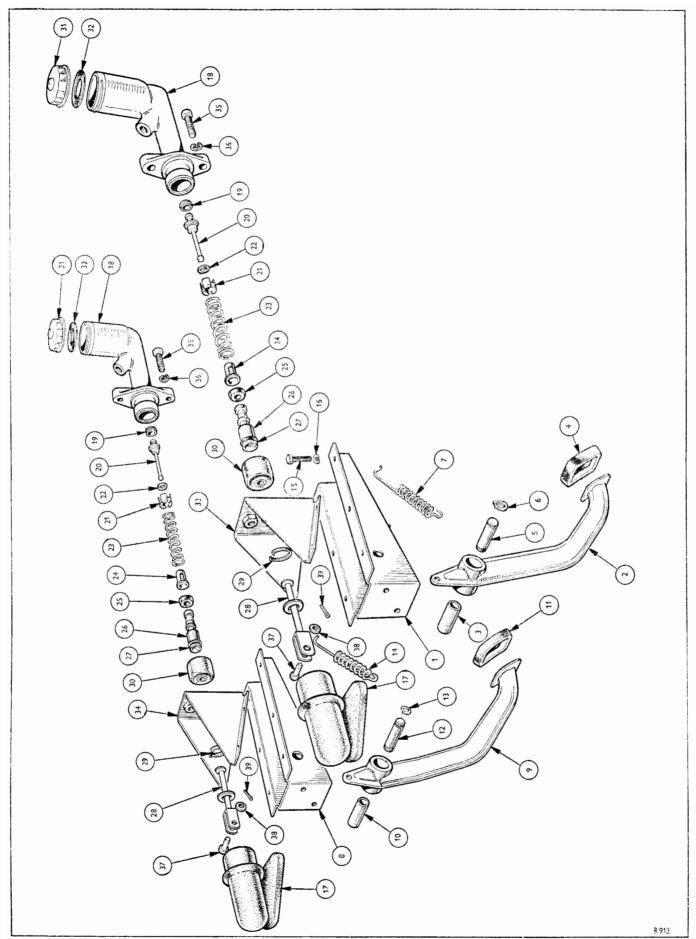

MASTER CYLINDER

Part No.	Description	Plate No.	No. per Unit	Remarks
120308	†CLUTCH MASTER CYLINDER ASSEMBLY		1	
132125	BRAKE MASTER CYLINDER ASSEMBLY		1	
Not serviced	Body, master cylinder	Y18		
106158	Seal, valve	Y19	2	
106157	Stem, valve	Y20	2	
111163	Spacer, valve	Y21	2	
106090	Washer, spring, valve head	Y22	2	
106156	Spring, plunger	Y23	2	
106088	Retainer, spring	Y24	2	
1 09190	Seal, plunger	Y25	2	
106155	Plunger, cylinder	Y26	2	
111979	Seal, taper, cylinder plunger	Y27	2	
122296	Rod, push, assembly	Y28	2	
106092	Circlip, push rod retainer	Y29	2	
510940	Cover, dust (rubber), cylinder end	Y30	2	
106094	Lid, reservoir	Y31	2	
106095	Gasket, on reservoir lid	Y32	2	
119583	CLUTCH MASTER CYLINDER SUPPORT BRACKET	Y33	1	
133450	BRAKE MASTER CYLINDER SUPPORT BRACKET	Y34	1	
HU0807	Setscrew \ Master cylinders to	Y35	4	
WL0208	Washer, lock support bracket	Y36	4	
PJ8808	Pin, joint Clutch and brake pedals	Y37	2	
WP0008	Washer, plain > to	Y38	2	
PC0009	Pin, cotter master cylinder push rods	Y39	2	
508445	SERVICE KIT MASTER CYLINDER		1	

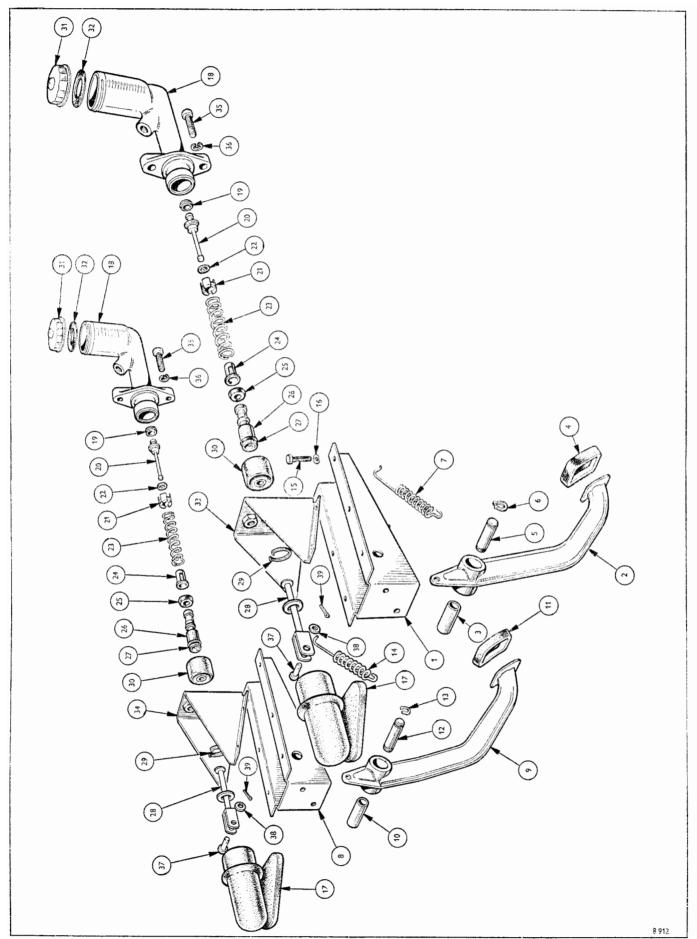

HYDRAULIC PIPES

Part No.	Description	Plate No.	No. per Unit	Remarks
	HYDRAULIC BRAKE PIPES			
305767	Pipe assembly, master cylinder to five way connection —R.H.S.	Z1	1	
305768	Pipe assembly, master cylinder to five way connection —L.H.S.		1	
59380	Clip, brake pipe to bulkhead—R.H.S. only	Z2	1	
137075	Connection, five way	Z3	1	Fitted up to Commission No. HB15000 only
136939	Connection, five way		1	Fitted from Commission No. HB15001 and future
HB0710P	Bolt	Z4	1	TIDISOOT and facale
№P0007	Washer, plain Five way connection	Z 5	1	
∕ /L0207	Washer, lock to bracket on frame	Z6	1	
HN2007	Nut	Z 7	1	
22779	Switch, stop light, in five way connection	Z8	1	Alternative to
22780	Gasket, switch	Z9	1	132869 and 107072
32869	Switch, stop light, in five way connection	2,	1	Alternative to
07072	Gasket, switch		1	
05765	Pipe assembly, five way to R.H. front hose	710	-	∫ 122779/80
		Z10	1	
33043	Clip, brake pipe to front suspension bracket—R.H.	Z11	1	
34056	Pipe assembly, five way to L.H. front hose	Z12	1	
32365	Bracket, hose attachment—R.H.	Z13	1	
32366	Bracket, hose attachment—L.H.	Z14	1	
	Note:—Hose bracket secured by valance panel attachments			
132958	Hose assembly, front	Z15	2	
07072	Gasket (hose)	Z16	2	
√N0709	Washer, shakeproof \ Hose	Z17	2	
N2109	Nut attachment	Z18	2	
05764	Pipe assembly, five way to double end union	Z19	1	
21782	Connector, double end union	Z20	1	
05763	Pipe assembly, three way to double end union	Z21	1	
36908	Piece, three way	Z22	;	
1B0710P	Bolt	Z23	1	
VP0007			- 1	
	Washer, plain Three way piece	Z24	1	
VL0207	Washer, lock to bracket	Z25	1	
1N2007	Nut	Z26	1	2
09343	Pipe assembly, three way to hose—R.H.	Z27	1	Alternative to
33534	Pipe assembly, three way to hose—L.H.	Z28	1	∫ 211399 and 139523
11399	Pipe assembly, three way to hose—R.H.		1	Alternative to
39523	Pipe assembly, three way to hose—L.H.		1	∫ 209343 and 133534
15459	Hose assembly, rear	Z29	2	
07072	Gasket, hose	Z30	2	
VN0709	Washer, shakeproof \(\begin{array}{c}\text{Hose}\end{array}	Z31	2	
N2109	Nut ∫ attachment	Z32	2	
9191	Clip, on L.H. side member	Z33	4	
01707/LV	Fluid, brake		1 qt.	
515707 [°]	Clip, brake and petrol pipes		1	
	HYDRAULIC CLUTCH PIPES			
209504	Pipe assembly, master cylinder clutch to slave cylinder —R.H.S.	Z34	1	
305766	Pipe assembly, master cylinder clutch to slave cylinder		1	

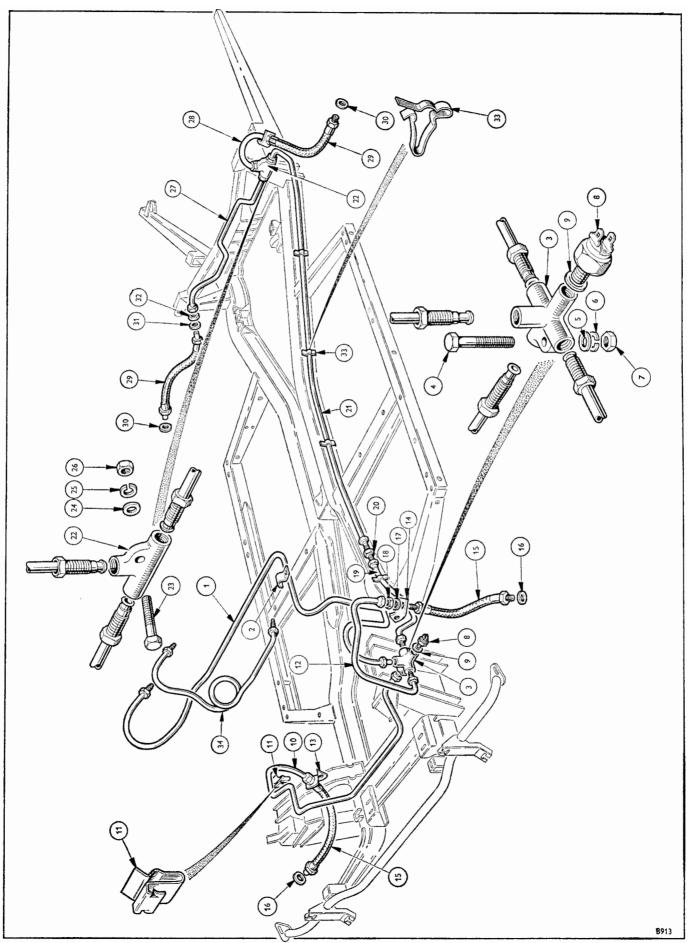


PLATE Z

HANDBRAKE

Part No.	Description	Plate No.	No. per Unit	Remarks
132589	HANDBRAKE ASSEMBLY		1	
132586	Lever assembly	AA1	1	
104737	Pawl) Fitted in	AA2	1	
104738	Pin lever	AA3	· 1	
132588	Rod assembly, pawl release	AA4	i	
104740	Spring, pawl release	AA5	<u>.</u>	
104742	Segment, ratchet	AA6		
131312	Grip, handbrake lever	AA7	<u>.</u>	
104743	Pin, fulcrum \ Handbrake lever	AA8	i	
WP0119	Washer, plain and ratchet to	AA9	1	
500186	Ring, snap mounting bracket	AA10	i	
121766	HANDBRAKE CABLE ASSEMBLY	AA11	1	
	(Handbrake to Relay Lever)			
104749	Fork-end, cable to handbrake	AA12	1	
QN2707	Nut, square \ Fork end	AA13	1	
N2107	Nut, jam attachment	AA14	1	
104750	Pin)	AA15	2	
₩ P0035	Washer > Cable attachment	AA16	2	
C0005	Pin, cotter	AA17	2	
06036	Clip, handbrake cable	AA18	Ĩ	
ΓF2205	Setscrew	AA19	1	
WP0002	Washer, plain Clip to	AA20	1	
HN2002	Nut, lock handbrake cable	AA21	1	
WL0202	Washer, spring	AA22	1	
134862	RELAY LEVER ASSEMBLY	AA23	1	
121757	Bearing	AA24	1	
21760	Seal, felt, relay lever	AA25	1	
21755	Seal, dust (rubber)	AA26	1	
121759	Pin, shouldered Relay lever	AA27	1	
21758	Washer, tab	AA28	1	
21699	COMPENSATING SECTOR	AA29	1	
J8806	Pin, joint	AA30	1	
₩P0008	Washer, plain > Compensator to relay lever	AA31	1	
°C0009	Pin, cotter	AA32	1	
27311	Cable assembly, compensator to wheel cylinder	AA33	1	
1047 4 9	Fork end, rear cable	AA34	2	
QN2707	Nut, square \ Fork end	AA35	2	
N2107	Nut, jam ∫ attachment	AA36	2	
104750	Pin	AA37	2	
№ Р0007	Washer, plain > Cable to rear brake units	AA38	2	
PC0005	Pin, cotter	AA39	2	
31806	Spring, pull-off, handbrake rear cable	AA40	2	
131807	Plate, spring anchor	AA41	2	
HN2007	Nut, spring anchor plate to rear cable	AA42	4	

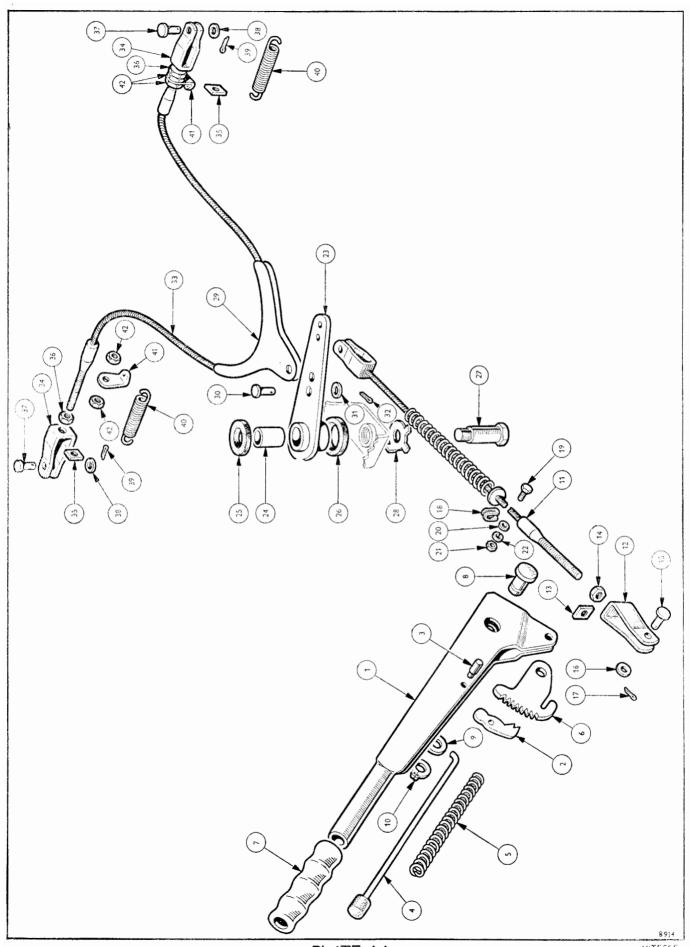


PLATE AA

VITESSE

BRAKES

Part No.	Description	Plate No.	No. per Unit	Remarks
	FRONT BRAKE DETAILS			
208937	Caliper assembly—R.H.		1	Fitted up to Commission
208936	Caliper assembly—L.H.	AB1	1	No. HB11535 only
210989	Caliper assembly—R.H.		1	Fitted from Commission
210988	Caliper assembly—L.H.		1	No. HB11536 and future
511033	Pad, lining	AB2	1 set	Fitted up to Commission
136407	Shim, damping, between lining pad and piston		4	No. HB15173 only Note: When fitted in sets Part Nos. 138767-8 and 138667 may be used for all replacement
138667	Pad, lining		1 set	Fitted from Commission
138767	Shim, damping, spring—R.H.		1	> No. HB15174
138768	Shim, damping, spring—L.H.		1	and future
512539	Pad, lining		1 set	Heavy Duty
511031	Pin, pad retaining	AB3	4	ricary Bacy
511032	Clip, pin retaining	AB4	4	
511034	Service Kit	AB5	1	
511035	Ring, sealing	AB6	2	Fitted up to Commission
512543	Ring, sealing		2	No. HB11535 only Fitted from Commission No. HB11536 and future
132439	Bolt Caliper to	AB7	4	
WQ0310	Washer mounting bracket	AB8	4	
20 871 5	Disc, friction	AB9	2	
113150	Bolt Triction disc	AB10	8	
WQ0309	Washer ∫ to hub	AB11	8	
208718	Shield, dust—R.H.		1	
208713	Shield, dustL.H.	AB12	1	
	Note:—For dust shield attachment details see Front Suspension Section			
209258	REAR BRAKE ASSEMBLY—R.H.		1	
209257	REAR BRAKE ASSEMBLY—L.H.		1	
209260	BACK PLATE—R.H.		1	
209259	BACK PLATE—L.H.	AB13	1	
12012 4	Pin, shoe hold down	AB14	4	
504877	Spring Shoe to back plate	AB15	4	
50 4 878	Washer, cup	AB16	4	
120142	ADJUSTER UNIT ASSEMBLY	AB17	2	
11105 4	Tappet, between wedge and shoe	AB18	4	
HN2007	Nut Adjuster unit	AB19	4	
WN0707	Washer, spring to back plate	AB20	4	

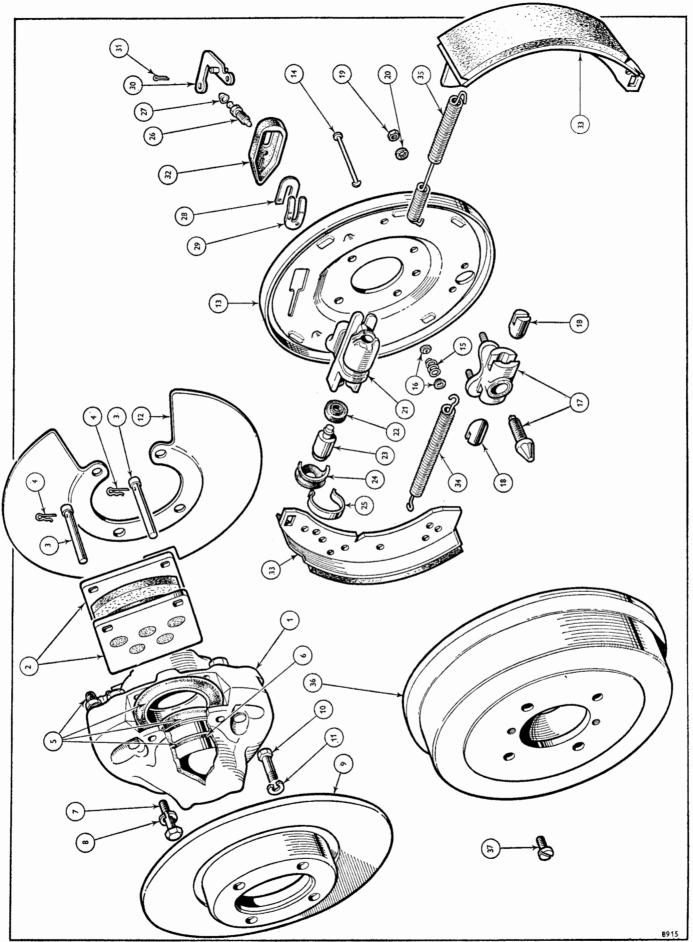


PLATE AB

BRAKES

Part No.	Description	Plate No.	No. per Unit	Remarks
136451	REAR BRAKE ASSEMBLY—continued REAR WHEEL CYLINDER ASSEMBLY		2	
Not serviced	Body, wheel cylinder	AB21		
510945	Seal	AB22	2	
514332	Piston	AB23	2	
120134	Cover, dust	AB24	2	
514333	Retainer, dust cover	AB25	2	
108756	Screw, bleed	AB26	2	
105676	Cap, dust	AB27	2	Alternative to 512544
5125 44	Cap, dust		2	Alternative to 105676
120138	Plate, retaining	AB28	2	
120137	Plate, spring	AB29	2	
123135	OPERATING LEVER ASSEMBLY—WHEEL CYLINDER	AB30	2	
PC0034	Pin, cotter	AB31	2	
120139	Cover, dust, wheel cylinder	AB32	2	
508433	REAR WHEEL CYLINDER SERVICE KIT		1	
511653	BRAKE SHOE ASSEMBLY	AB33	4	
105689	Spring, return shoe, adjuster end	AB34	2	
105690	Spring, shoe return, cylinder end	AB35	2	
203077	BRAKE DRUM—REAR	AB36	2	
V5435	Screw, retaining, brake drums	AB37	4	

RADIATOR

Part No.	Description	Plate No.	No. per Unit	Remarks
305306	†RADIATOR BLOCK ASSEMBLY	AC1	1)
101416	Tap, water drain	AC2	1	
⊣B0910	Bolt	AC3	2	
№P0136	Washer, plain	AC4	2	
8101	Packing, Kautex > Radiator to frame mounting bracket	AC5	6	
VP0130	Washer, plain	AC6	2	
N2909	Nut, nyloc	AC7	2	
1T3207	Nut, nyloc Radiator to engine	AC8	2	
∿M0067	Washer, plain ∫ bay valance	AC9	2	Fitted up to Commission
209014	Elbow, water	AC10	1	No. only
7103	Gasket, water elbow	AC11	1	See page 47 for future
1B0812	Bolt	AC12	2	
√L0208	Washer, lock	AC13	2	
32634	Hose, top, radiator to water elbow	AC14	1	
CS4025	Clip, hose attachment	AC15	2	
32635	Hose, bottom, radiator to water pump	AC16	1	
CS4023	Clip, bottom hose attachment	AC17	2	
32898	Hose, radiator to header tank	AC18	1	
CS4020	Clip, hose to tank and radiator	AC19	2	J
36 4 02	HEADER TANK ASSEMBLY	AC20	í)
22136	Cap, filler	AC21	1	
34829	Foot, mounting, header tank, front	AC22	1	
34823	Foot, mounting, header tank, rear	AC23	1	
1U0704	Screw, set	AC24	4	Fitted up to Commission
VL0207	Washer, lock > Mounting feet to header tank	AC25	4	No. only
IN2007	Nut	AC26	4	INO. OHIY
1N2008	Nut \(\) Mounting feet	AC27	4	
VL0208	Washer, lock of to manifold	AC28	4	
32637	Pipe, overflow	AC29	1	
00148	Clip, overflow pipe attachment	AC30	1]

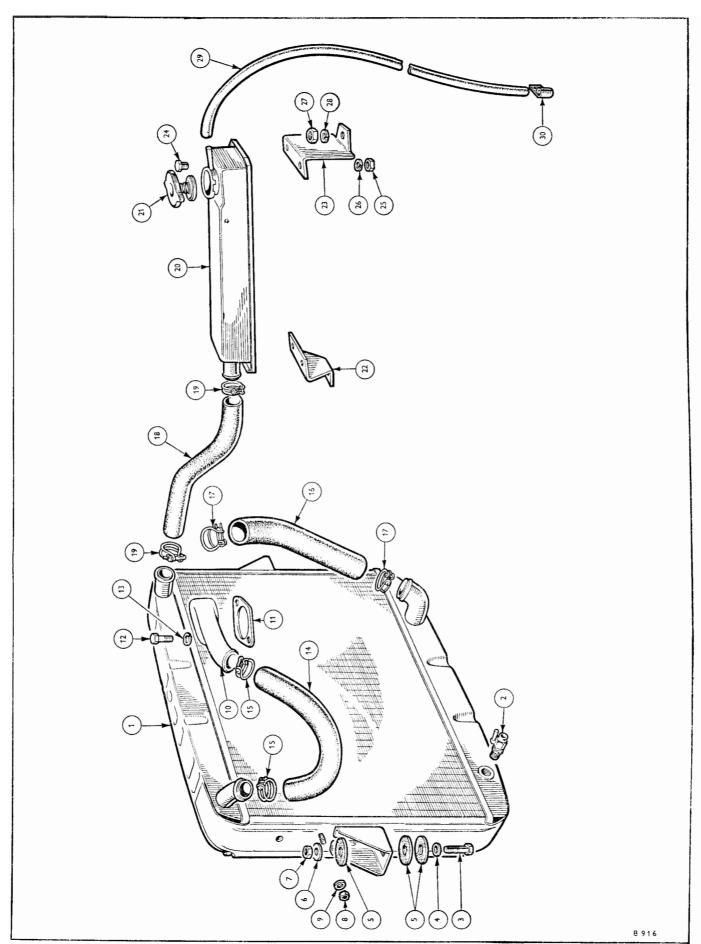


PLATE AC

RADIATOR

art No.	Description	Plate No.	No. per Unit	Remarks
07125	†RADIATOR BLOCK ASSEMBLY	ACS1	1	<u> </u>
01416	Tap, water drain	ACS2	1	
37691	Cap, filler	ACS3	1	
T3207	Nut Radiator to	ACS4	2	
/M0067	Washer, plain \int valance	ACS5	4	Fitted from Commission
101	Packing, kautex	ACS6	6	No. and future
30910	Bolt	ACS7	2	
/P0136	Washer, plain, top \(\rightarrow \) Radiator to frame mounting	ACS8	2	
/P1030	Washer, plain, bottom	ACS9	2	
12909	Nut, nyloc	ACS10	2	J
9014	WATER ELBOW	ACS11	1)
103	Gasket, water elbow	ACS12	1	
B0812	Bolt Water elbow to	ACS13	2	
1.0208	Washer, lock water pump	ACS14	2	Fitted from Commission
2634	Hose, top, water elbow to water pump	ACS15	1	No. and future
54025	Clip, hose attachment	ACS16	2	
2635	Hose, bottom, radiator to water pump	ACS17	1	
34023	Clip, hose attachment	ACS18	2	J
37632	RADIATOR OVERFLOW BOTTLE	ACS19	1)
7743	Cap, overflow bottle	ACS20	1	
2146	Bracket, mounting overflow bottle	ACS21	1	
2958	Screw, set	ACS22	2	
2455	Washer, plain > Mounting bracket	ACS23	2	Fitted from Commission
0506	Washer, lock to engine bay valance	ACS24	2	No. and future
2450	Nut	ACS25	2	
0508	Screw Retaining bottle	ACS26	1	
L0205	Washer, lock > in	ACS27	1	
N2005	Nut mounting bracket	ACS28	1	
2123	Pipe, overflow, radiator to bottle	ACS29	1	


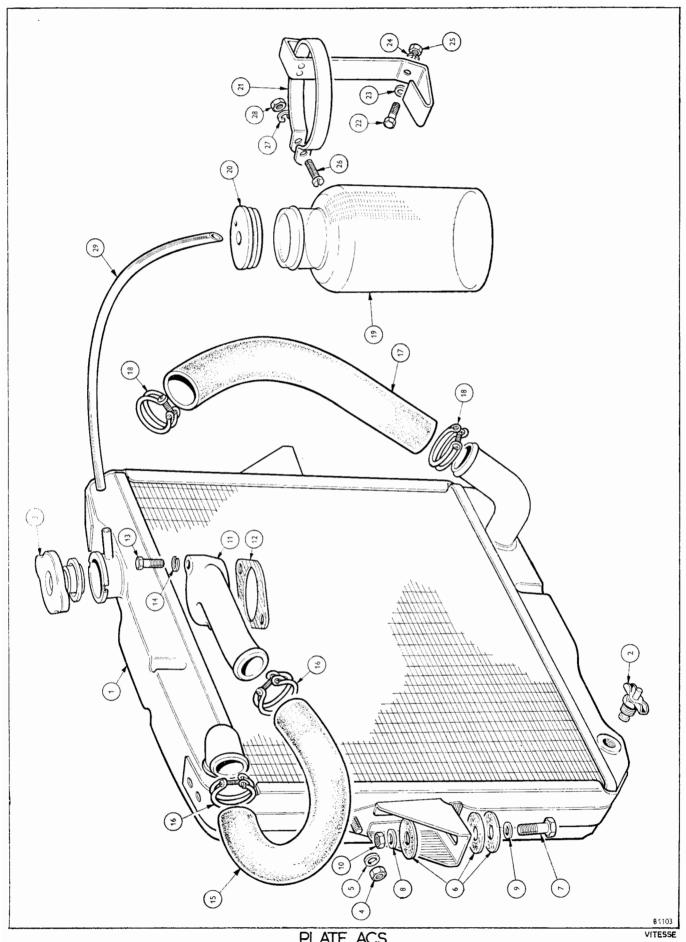


PLATE ACS


EXHAUST SYSTEM

Part No.	Description	Plate No.	No. per Unit	Remarks
209058	FRONT EXHAUST PIPE	AD1	1	
123415	Gasket	AD2	1	
100455	Nut Front exhaust pipe to manifold	AD3	3	
WL0208	Washer, spring	AD4	3	
134345	Bracket, support, front exhaust pipe to engine plate	AD5	1	
HB0809	Bolt	AD6	1	
WP0008	Washer, plain Support bracket to front	AD7	1	
WL0208	Washer, spring exhaust pipe clip	AD8	1	
HN2008	Nut	AD9	1	
105292	Strip, flexible, front	AD10	1	
HU0809	Screw, set	AD11	1	
134416	Washer, heat insulation Flexible strip to front	AD12	1	
105290	Clamp exhaust pipe	AD13	1	
TN3208	Nut, nyloc	AD14	1	
105290	Clamp Flexible strip to	AD15	1	
TN3208	Nut, nyloc frame bracket	AD16	1	
305560	EXHAUST SILENCER AND TAIL PIPE ASSEMBLY	AD17	1	
132639	Clip, front exhaust pipe to silencer	AD18	1	
HB0822	Bolt	AD19	1	
WP0107	Washer, plain Clip and mounting bracket	AD20	1	
WL0207	Washer, lock to front pipe	AD21	1	
HN2008	Nut	AD22	1	
105578	Bracket, front pipe and silencer mounting	AD23	1	
105291	Strip, flexible, centre	AD24	1	
HU0808	Screw, set	AD25	2	
105290	Plate, clamp > Centre flexible strip to mounting brackets	AD26	2	
TN3208	Nut, nyloc	AD27	2	
105291	Strip, flexible, rear	AD28	1	
HU0808	Screw, set	AD29	2	
105290	Plate, clamp > Rear flexible strip to mounting brackets	AD30	2	
TN3208	Nut, nyloc	AD31	2	

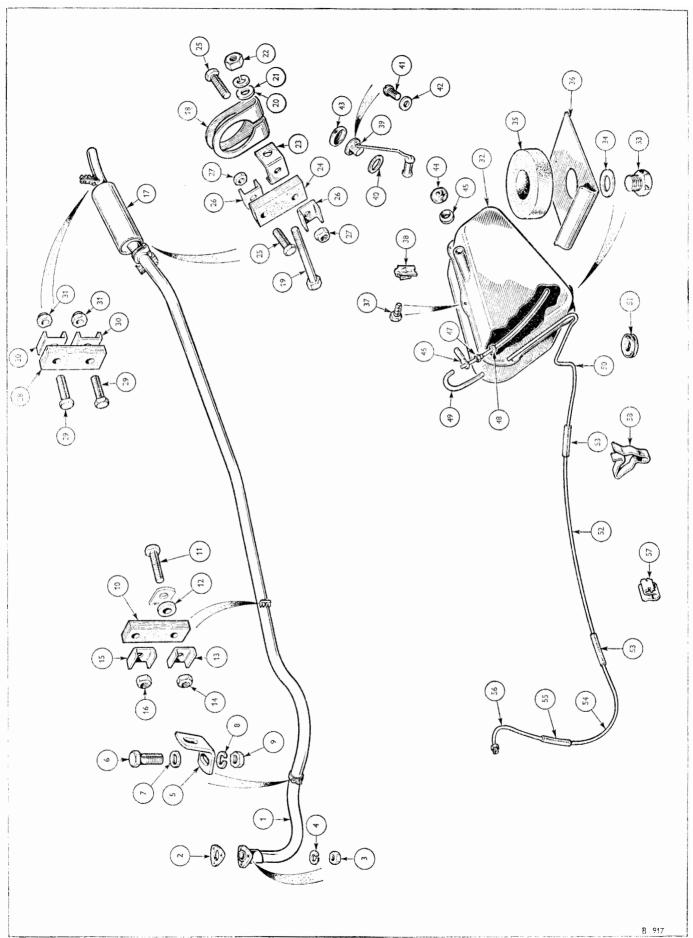

PETROL SYSTEM


Part No.	Description	Plate No.	No. per Unit	Remarks
305559	PETROL TANK ASSEMBLY	AD32	1	
103222	Plug, petrol drain	AD33	1	
WF0513	Washer, drain plug	AD34	1	
608052	Seal, drain plug, fitted in floor	AD35	1	
610470	Bracket, drain plug	AD36	1	
UL2705	Screw	AD37	4	
FA3058	Nut, fix > Petrol tank fixings		1	
FA3057	Nut, fix	AD38	3	
205303	†Gauge unit, petrol tank	AD39	1	
110777	Washer, on gauge unit	AD40	1	
TR6503	Screw \ \ \ Fuel gauge	AD41	6	
WF0505	Washer, fibre to tank	AD42	6	
123286	Cover, gauge unit	AD43	1	
601761	Cap, filler	AD44	1	
6031 <i>4</i> 6	Cap, locking, fuel filler		1	Special Orders only
601661	Grommet, fuel filler	AD45	1	
205997	Pipe, petrol take off, assembly	AD46	1	
60176	Nut, tubing, on pipe	AD47	1	
123962	Seal, take off pipe	AD48	1	
122796	Connector, tank to pipe	AD49	1	
3057 7 0	Pipe assembly, tank to rear connector	AD50	1	
600395	Grommet, fuel feed pipe (floor)	AD51	1	
305769	Pipe assembly, rear connector to centre connector	AD52	1	
125170	Connector, petrol pipe, centre and rear	AD53	2	
209503	Pipe assembly, centre connector to front connector	AD54	1	
115783	Connector, petrol pipe, front	AD55	1	
134057	Pipe assembly, front connector to pump	AD56	1	
60176	Nut, tubing		1	
102729	Sleeve, tubing		1	
59191	Clip, pipe to chassis frame	AD57	1	
610562	Clip, pipe to wheelarch flange	AD58	1	

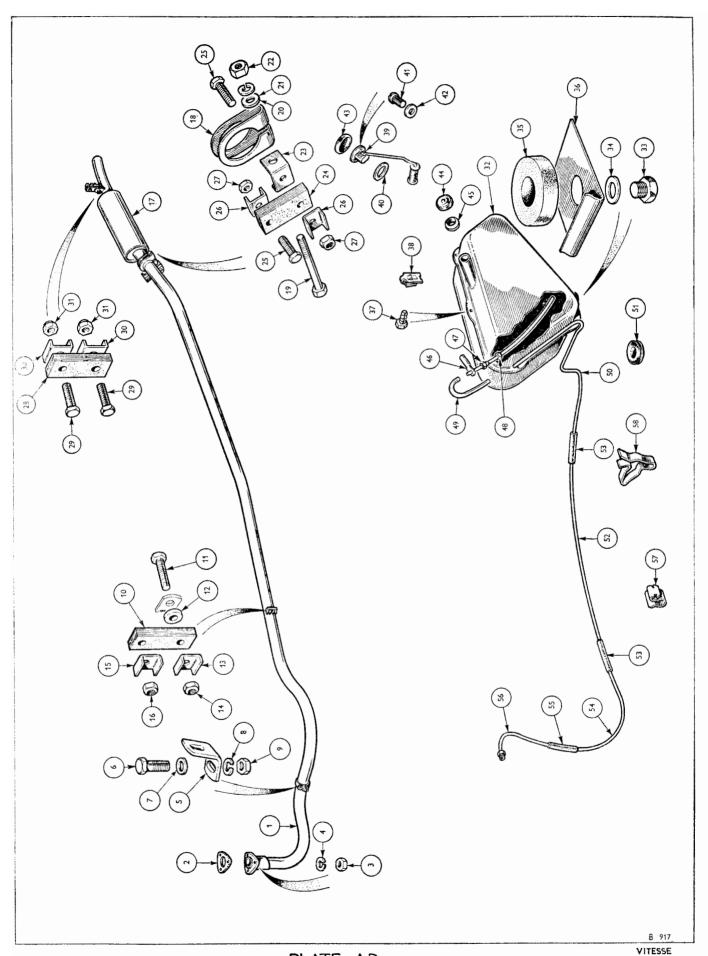

SERVICE KIT

Part No.	Description	Plate No. p No. Uni	Kemarks
	SERVICE KITS		
508445	Master cylinder	1	
511034	Front brake caliper	1	
508433	Rear brake wheel cylinder	1	
511370	Decarbonising gasket set	1	
511125	Engine gasket set	1	
508955	Water pump repair kit	1	
511236	Book, instruction	1	
501707/LV	Fluid, clutch and brake	1 q	. .
511462	TOOL KIT COMPLETE	1	
122746	Pouch, tool	1	
59427	Tool, combination	1	
101089	Spanner, sparking plug	1	
122745	Spanner, open end, $\frac{1}{2}$ " A/F, $\frac{7}{16}$ " A/F	1	
59426	Spanner, open end, .50" A/F, .56" A/F	1	Alternative to 509361
509361	Spanner, open end, .50" A/F, .56" A/F	1	Alternative to 59426
125505	Feeler gauge assembly	1	
210926/M	Jack assembly	1	Alternative to 210926/P and 210926/S
210926/MH	Handle, jack	1	•
210926/P	Jack assembly	1	Alternative to 210926/M and 210926/S
210926/PH	Handle, jack	1	'
210926/S	Jack assembly	1	
210926/SH	Handle, jack	1	,

Part No.	Description	Plate No.	No. per Unit	Remarks
208914	DISTRIBUTOR ASSEMBLY		1 .	
	(High Compression Engine)			
511545	Сар	AE1	1_	
58501	Nut, moulded	AE2	7	
501718	Brush and spring	AE3	1	
511584	Clip, retaining cap	AE4	2	
510024	Arm, rotor	AE5	1	
503681	Contact set	AE6	1	
503687	Bush, insulating	AE7	1	
509319	Condenser	AE8	1	
503684	Plate, contact breaker base	AE9	1	
511010	Plate, contact breaker bearing	AE10	1	
511086	Terminal, bush and lead	AE11	1	Fitted up to Engine No. HB150008
503688	Washer, insulating terminal		1	> only
503690	Lead, earth	AE12	1	For future see page 52
511582	Cam	AE13	1	
511583	Spring, automatic advance (set of 2)	AE14	1 set	
510638	Weight	AE15	2	
509324	Plate, shaft and action	AE16	1	
511013	Nut, knurled, micrometer	AE17	1	
511014	Spring, ratchet, micrometer	AE18	1	1
503693	Spring, return, micrometer	AE19	1	
511655	Vacuum unit, with actuating arm	AE20	1	
57991	Dog, driving	AE21	1	
510045	Set, sundry parts		1	
503678	Plate, clamping	AE22	1	
58499	Screw, clamping		1	J
125195	IGNITION COIL	AE23	1	
134175	IGNITION COIL (Cold Climate)		1	Special Order only
HU0804	Setscrew		2	
WL0208	Washer, lock > Coil to cylinder block		2	
WP0008	Washer, plain		2	

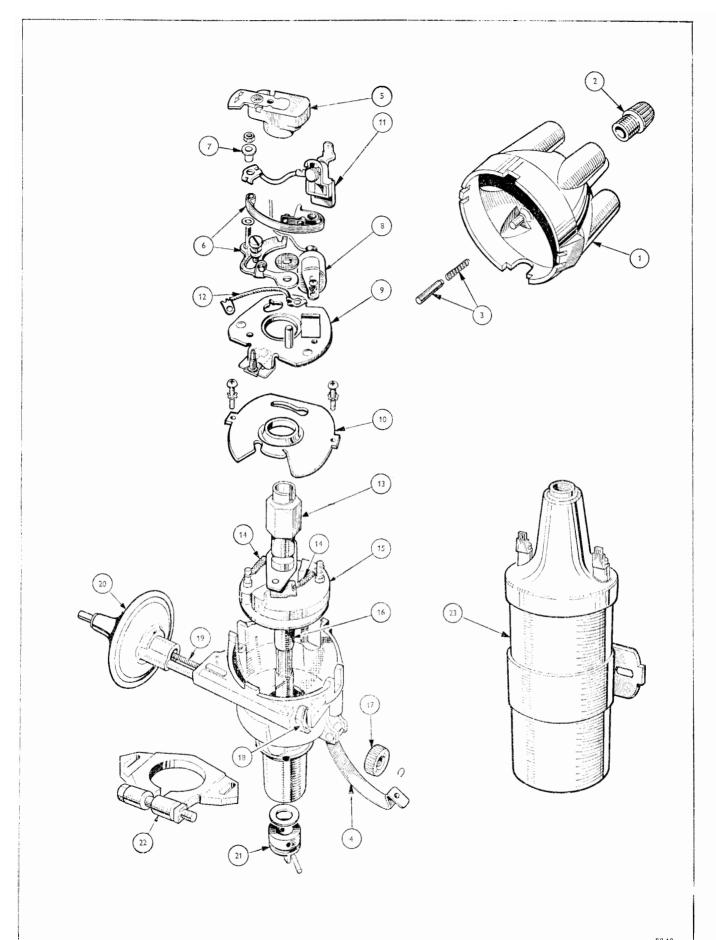

Part No.	Description	Plate No.	No. per Unit	Remarks
211407	†DISTRIBUTOR ASSEMBLY		1	Fitted from Engine No. HB15001E to Engine No. HB16301E
513992	Cap, distributor	AEa1	1	For future see page 53
511837	Rotor	AEa2	1	
511838	Contact set	AEa3	1	
511839	Stud, contact arm	AEa4	1	
511840	Washer, lock, contact arm stud	AEa5	1	
511841	Nut, contact arm	AEa6	2	
511842	Screw, locking, contact point	AEa7	1	
511843	Condenser	AEa8	1	
511844	Screw, mounting, condenser	AEa9	1	
511845	Lead, L.T. (with grommet)	AEa10	1	
511846	Lead, earth	AEa11	1	
511844	Screw, earth lead	AEa12	1	
511847	Plate, breaker assembly	AEa13	1	
511848	Screw, mounting, breaker plate	AEa14	1	
511851	Felt wick, oil	AEa15	1	
514004	Mainshaft and cam assembly	AEa16	1	
514002	Spring set, advance weight	AEa17	1	
511856	Washer, shaft, upper	AEa18	1	
514005	Control, vacuum, assembly	AEa19	1	
511844	Screw, mounting, vacuum control	AEa20	2	
511857	Clip, cap	AEa21	2	
511858	Clamp, L.T. lead	AEa22	1	
Not serviced	Housing assembly	AEa23	1	
511859	Gear, tachometer drive	AEa24	1	
511860	Washer, thrust, drive gear	AEa25	1	
511861	Plug, housing end	AEa26	1	
134891	Arm, clamp assembly	AEa27	1	
511863	Ring, oil seal	AEa28	1	
511864	Washer, shaft, lower	AEa29	1	
511866	Coupling	AEa30	1	
511865	Pin, coupling	AEa31	1	


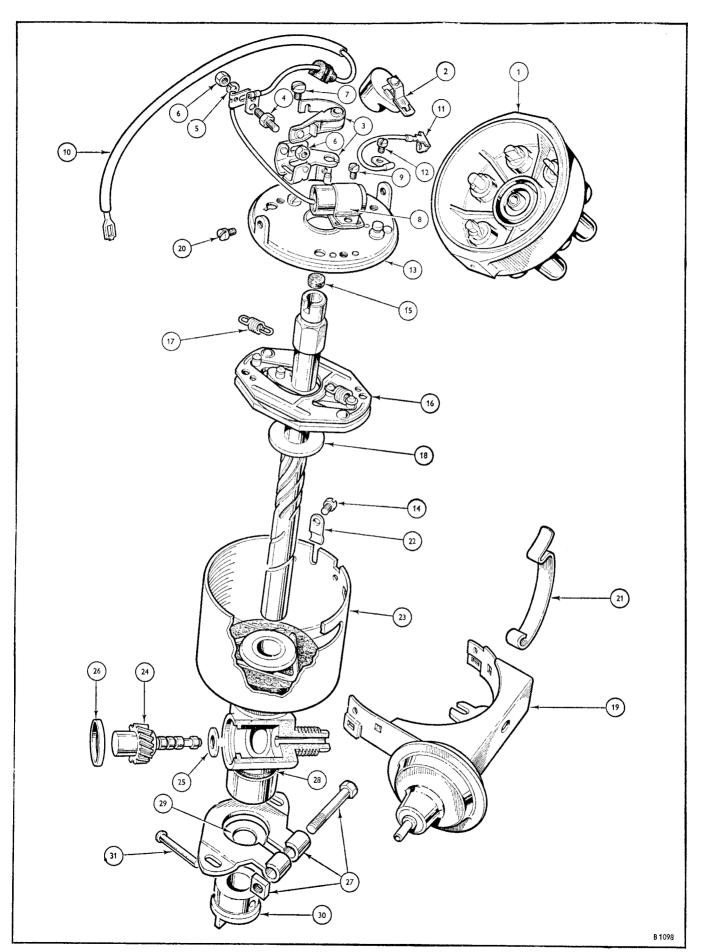



PLATE AEa

Part No.	Description	Plate No.	No. per Unit	Remarks
211414	DISTRIBUTOR ASSEMBLY		1	Fitted from Engine No. HB16302 up to only
212873	DISTRIBUTOR ASSEMBLY		1	Fitted from Engine No. and future
513992	Cap, distributor	AEb1	1)
511837	Rotor	AEb2	1	
511838	Contact set	AEb3	1	
511839	Stud, contact arm	AEb4	1	
511840	Washer, lock, contact arm stud	AEb5	1	
511841	Nut, contact arm	AEb6	2	Fitted from Engine No. HB16302
511842	Screw, locking, contact point	AEb7	1	and future
511843	Condenser	АЕЬ8	1	
511844	Screw, mounting, condenser	AEb9	1	
513994	Lead, L.T. (with grommet)	АЕЬ10	1	
513993	Lead, earth	AEb11	1	
513995	Plate, breaker, assembly	AEb12	1	
511848	Screw, breaker plate mounting	AEb13	1	
511851	Wick, felt, oil	AEb14	1	
513996	Mainshaft and cam assembly	AEb15	1	Fitted from Engine No. HB16302
51 4 954	Mainshaft and cam assembly		1	up to only Fitted from Engine No. and future
513997	Spring set, advance weight	AEb16	1	Fitted from Engine No. HB16302 up to only
514002	Spring set, advance weight		1	Fitted from Engine No.
511856	Washer, shaft, upper	AEb17	1	7
513998	Control, vacuum, assembly	AEb18	1	
513999	Screw, mounting, vacuum control	AEb19	2	
513400	Clip, cap	AEb20	2	
Not serviced	Housing	AEb21	1	
511859	Gear, tachometer drive	AEb22	1	
511860	Washer, thrust, drive gear	AEb23	1	Fitted from Engine No. HB1630
511861	Plug, housing end	AEb24	1	and future
134891	Arm, clamp, assembly	AEb25	1	
511863	Ring, oil seal	AEb26	1	
511864	Washer, shaft, lower	AEb27	1	
511866	Coupling	AEb28	1	
511865	Pin, coupling	AEb29	1	

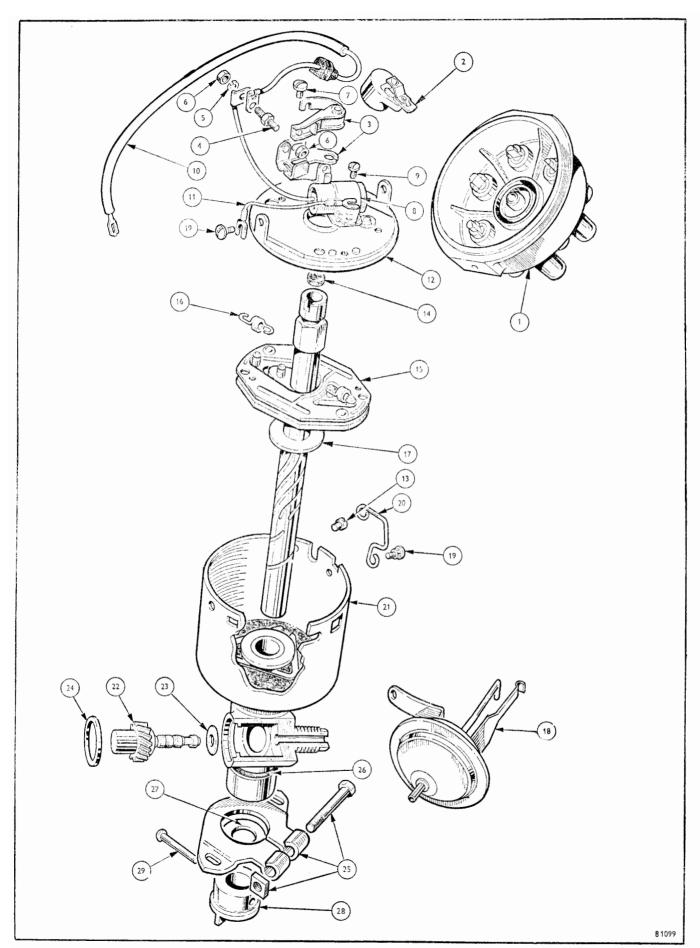


Part No.	Description	Plate No.	No. per Unit	Remarks
00000	±DVNAMO		,	
209000 5 11 593	†DYNAMO	A F4	1	
	Armature assembly	AF1	1	
09309	Nut, shaft	AF2	1	
509310 509302	Washer, spring, under shaft nut Brush set	AF3	1	
		AF4	1	
09306	Spring set, brush tension	AF5	1 1	
11589 609304	Bracket assembly, commutator end (less bush) Bush, commutator end bracket	AF6 AF7	1	
509305	Oiler assembly	AF8	1	
509308	Bracket assembly, driving end (less bush)	AF9	1	
09307	Bearing, driving end bracket	AF10	1	
09312	Retainer, bearing ring	AF11	1	
09313			1	
311594	Coll field set	AF12	1	
	Coil, field set	AF13	1	
509315 511596	Set, terminal (Lucar)	AF14	-	
509317	Bolt, through end bracket	AF15	2 1	
07317	Set, sundry parts		1	
	Note:—For Dynamo Attachment Details, see Engine Section			
.00535	†STARTER MOTOR		1	
01714	Armature assembly	AF16	1	
01705	Brush set	AF17	1	
01708	Spring set, brush tension	AF18	1	
01706	Bracket assembly, Die cast commutator	AF19	1	
	commutator end end bracket			
00926	Bush, commutator bracket	AF20	1	
09819	Spring set, brush tension	AF21	1	
09817	Bracket assembly, Pressed metal	AF22	1	
	commutator end commutator			
09818	Bush, commutator bracket end bracket	AF23	1	
09820	Sleeve	AF24	1	
01712	Bracket assembly, driving end	AF25	1	
00927	Bush, driving end bracket	AF26	1	
01715	Coil, field, set	AF27	1	
02210	Bolt, through end brackets	AF28	2	
01704	Cap, shaft end	AF29	1	
7458	Band, cover, assembly	AF30	1	
00892	Pinion and sleeve assembly	AF31	1	
01711	Spring, pinion retaining	AF32	1	
01710	Spring, main	AF33	1	
01709	Nut, locating	AF34	1	
0391	Set, sundry parts	• .	1	
31570	Packing, starter motor		1	7
04549	Shim, starter motor		A/R	Fitted up to Commission No
IB0915	Bolt, starter motor attachment		2	HB11707 only
37373	Packing, starter motor		1	Fitted from Commission No.
04549	Shim, starter motor		A/R	HB11708 up to
1B0917	Bolt, starter motor attachment		2	only
31570	Packing, starter motor		1	Fitted from Commission No.
1B0916	Bolt, starter motor attachment		2	and future
1N2009	Nut, on bolt		2	J and ratale
VL0209	Washer, spring		2	

Part No.	Description	Plate No.	No. per Unit	Remarks
121269	STARTER SOLENOID SWITCH	AF35	1	
134174	STARTER SOLENOID SWITCH (Cold Climate)		1	Special Order only
YH8506	Screw		2	
₩M0055	Washer, plain Starter solenoid		2	
FC2805	Nut, spire fix to bulkhead		2	
611077	Washer, sealing		2	

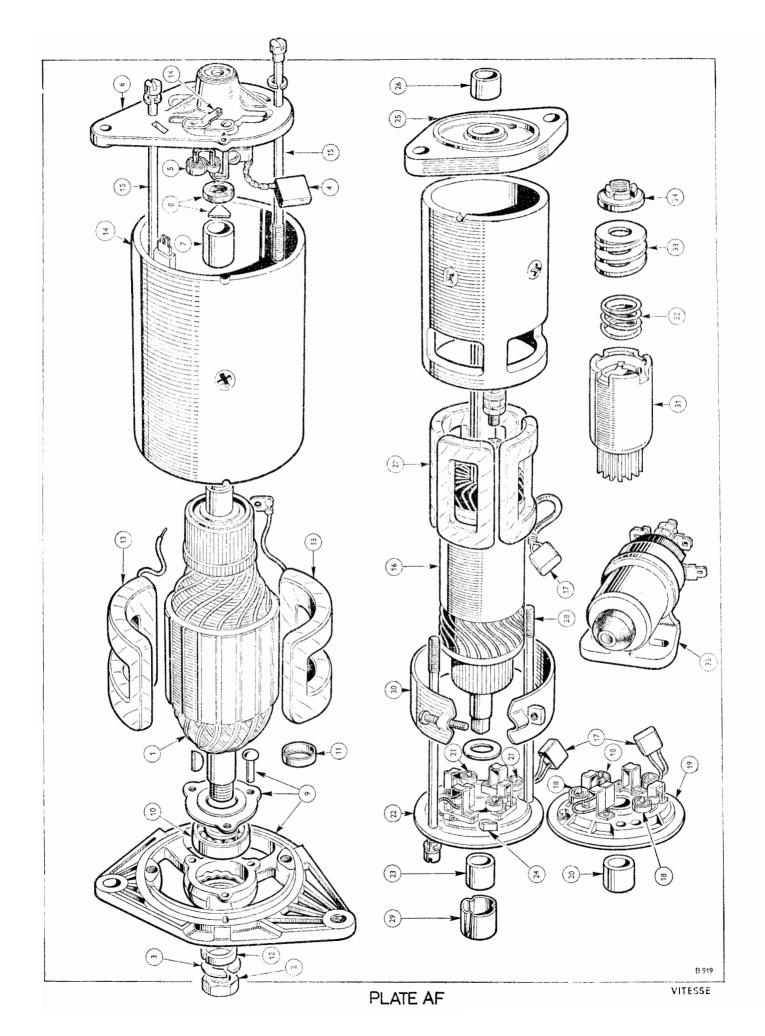

Part No.	Description	Plate No.	No. per Unit	Remarks
131227	HORN PUSH ASSEMBLY	AG1	1	
108657	Brush, horn push connection	AG2	1	
204741	Clip, horn push assembly	AG3	1	
208660	HORN (WINDTONE) High Note	AG4	1	Alternative to
208659	(Fitted as a pair) Low Note	AG4	1	209250 and 209251
133071	Horn mounting bracket assembly		2	}
209250	HORN (WINDTONE) High Note ASSEMBLY		1	Alternative to
209251	(Fitted as a pair) Low Note		1	j 208660 and 208659
133363	HORN (WINDTONE) High Note ASSEMBLY		1	
209251	(Fitted as a pair) Low Note		1	
129915	Bracket assembly, horn mounting—R.H.		1	Export
129914	Bracket assembly, horn mounting—L.H.		1	France only
SP92A/D6	Rivet, horn mounting bracket		4	
133325	Lead, horn extension		1	
133326	Lead, horn extension		1)
BT7710	Bolt		4	
505259	Washer, lock Horns to mounting brackets		4	
503628	Washer, plain		4	
131273	HORN SWITCH (France only)		1	Fitted up to Commission No. HB15000 only
133322	HORN SWITCH (France only)		1	`
609795	Bezel, horn switch		1	Fitted from Commission No.
128089	Washer, bezel		1	HB15001 and future
121267	FLASHER UNIT	AG5	1	
YF7504	Screw		1	
WM0055	Washer, plain > Flasher unit attachment		1	
FC2805	Nut, spire		1	
131274	FLASHER INDICATOR SWITCH	AG6	1	Fitted up to Body No. HED12923
TP0403	Screw Tlasher switch		2	(Saloon) and HEC1770
WE0604	Washer ∫ to column shroud		2	(Convertible) only
140626	FLASHER INDICATOR SWITCH		1	Fitted from Body No. HED12924
TP0402	Screw Flasher switch to		2	(Saloon) and HEC1771
WE0604	Washer ∫ column shroud Note:—Flasher Switch 140626 must be fitted in conjunction with Cancelling Clip 140549.		2	(Convertible) and future
128383	LIGHTING SWITCH—SIDE, HEAD AND DIP—R.H.S. ONLY	AG7	1	
132674	LIGHTING SWITCH—SIDE, HEAD AND DIP—L.H.S. ONLY, EXCEPT U.S.A.		1	
	LIGHTING SWITCH—OFFSIDE AND		1	
132673	HEAD (U.S.A. ONLY)		'	

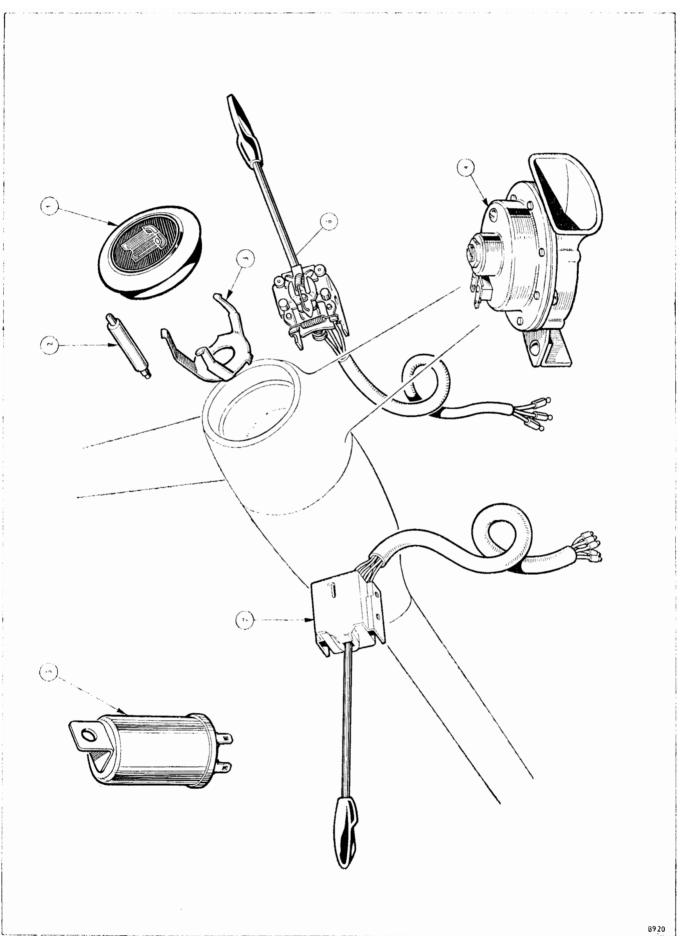

art No.	Description	Plate No.	No. per Unit	Remarks
	WINDSCREEN WIPER DETAILS			
10987	†Motor and Gear Box		1	
11002	Cover, end (Bakelite)	AH1	1	
08169	Brush, gear	AH2	1	
08170	Brush, set	AH3	1	
7492	Spring, brush	AH4	1	
11004	Coil	AH5	1	
11003	Armature	AH6	1	
11077	Shaft and gear assembly	AH7	1	
11096	Rod, connecting, assembly	AH8	1	
11006	Switch, parking		1	
11005	Stud, set, fixing		1	
11001	Bolt, fixing		2	
03603	Sundry parts set		1	
08182	Crosshead and rack	AH9	1	
22781	Wheelbox assembly	AH10	2	
07948	Bush, front	AH11	2	
07947	Bush, rear	AH12	2	
05554	Tubing, motor to 1st wheelbox	AH13	1	
22092	Tubing, wheelbox to wheelbox	AH14	1	
08860	Extension tubing	AH15	1	
13270	Grommet	AH16	1	
30034	WIPER ARM—R.H.S.	AH17	2)
	William Abba I II a			Alternative to details listed
30035	WIPER ARM—L.H.S.	AH17	2	below in car sets
30036	WIPER BLADE	AH18	2) ""/
30034/TEX	WIPER ARM—R.H.S.		2)
20025/75	WIDER ARM I LIC		2	Alternative to details listed
30035/TEX	WIPER ARM-L.H.S.		2	above in car sets
30036/TEX	WIPER BLADE		2	1


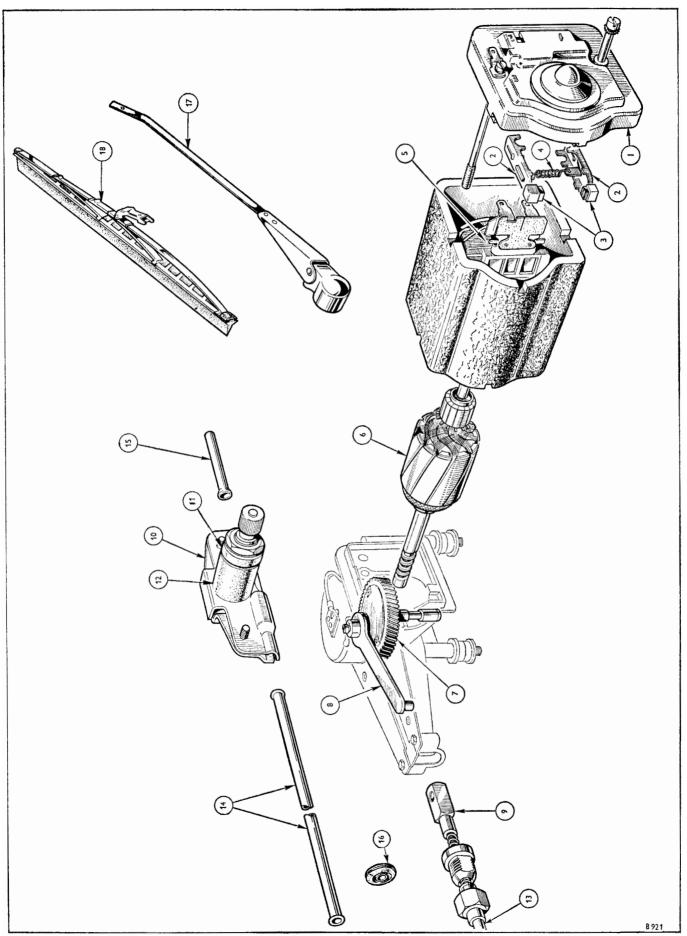



PLATE AH

VITESSE


art No.	Description	Plate No.	No. per Unit	Remarks
)556 2	HEADLAMP ASSEMBLYINNER (Sealed Be	am)	2	
	(Main beam R.H. Steering)	ŕ		
05562/B	HEADLAMP ASSEMBLY—INNER		2	
	(Bulb Type) (Main Beam, R.H. Steering)			
11598	Rim	AJ1	2	
1139 4	Screw, rim fixing	AJ2	6	
1599	Light unit (Sealed Beam)	AJ3	2	
11599/B	Light unit (Bulb Type)		2	
1600	Adaptor	AJ4	2	
lot serviced	Rim, seating	AJ5		
11601	Attachment set, seating rim	AJ6	2	
ot serviced	Body	AJ7		
11602	Gasket, lamp seating	AJ8	2	
05569	HEADLAMP ASSEMBLY—OUTER (Sealed Bo (Main and Dip Beam R.H. Steering)	eam)	2	
	(Train and Dip Deam North Steering)			
05569/B	HEADLAMP ASSEMBLY—OUTER (Bulb Type) (Main Beam, R.H. Steering)		2	
11598	Rim	AJ9	2	
	Screw, rim fixing	AJ10	6	
1394	Light unit (Sealed Beam)	AJ11	2	
1603	-	Vill	2	
1603/B	Light unit (Bulb Type) Adaptor	AJ12	2	
1600	Rim, seating	AJ13	2	
ot serviced 1601	Attachment set, seating rim	AJ14	2	
ot serviced	Body	AJ15	4	
1602	Gasket, lamp seating	AJ16	2	
	LIEADI AMD ACCEMBI V INNIED (EDANICE	•	2	
05564	HEADLAMP ASSEMBLY—INNER (FRANCE AND VIETNAM)	•	2	
	(Main Beam)			
11598	Rim	AJ1	2	
1394	Screw, rim fixing	AJ2	6	
1609	Light unit	AJ3	2	
1600	Adaptor	AJ4	2	
ot serviced	Rim, seating	AJ5	_	
1601	Attachment set, seating rim	AJ6	2	
ot serviced	Body	AJ7	-	
1602	Gasket, lamp seating	AJ8	2	
)5571	HEADLAMP ASSEMBLY—OUTER		2	
	(FRANCE AND VIETNAM)			
	(Main and Dip Beam)	4.10	•	
1598	Rim	AJ9	2	
1394	Screw, rim fixing	AJ10	6	
1610	Light unit	AJ11	2	
1611	Spring, retaining bulb		2	
0219	Bulb	A 140	2	
1600	Adaptor	AJ12	2	
ot serviced	Rim, seating	AJ13	2	
1601	Attachment set, seating rim	AJ14	2	
ot serviced	Body	AJ15	•	
1602	Gasket, lamp seating	AJ16	2	

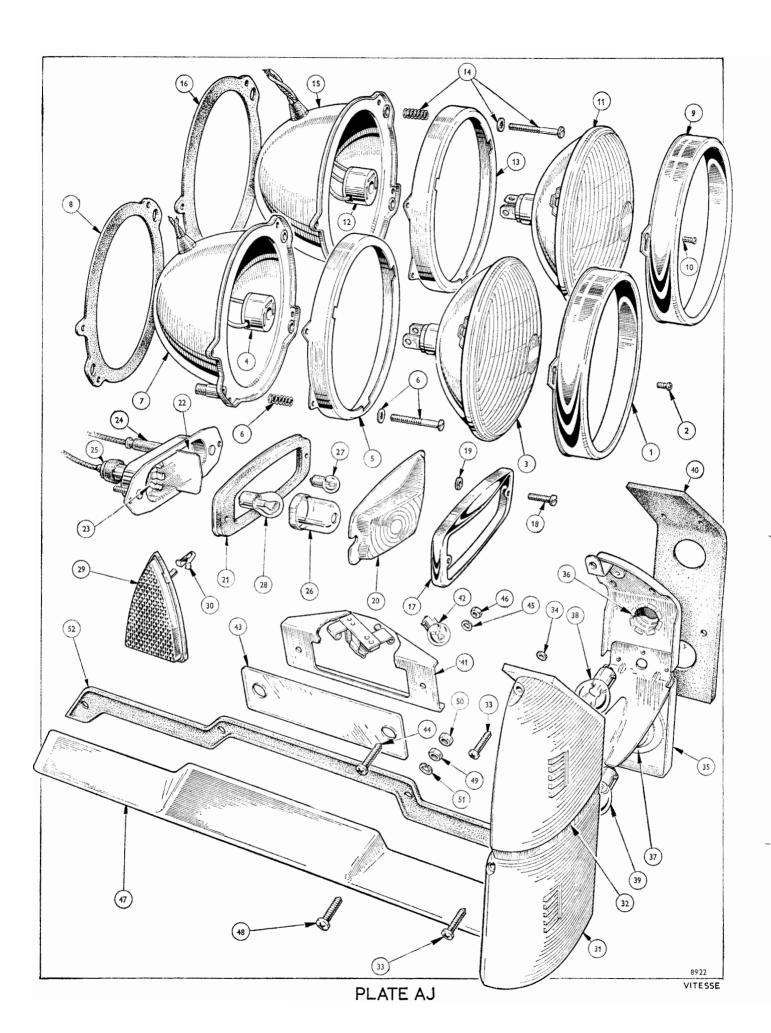


Part No.	Description	Plate No.	No. per Unit	Remarks
05563	HEADLAMP ASSEMBLY—INNER (U.S.A.) (Main Beam)		2	
11598	Rim	AJ1	2	
51139 4	Screw, rim fixing	AJ2	6	
11606	Light unit	AJ3	2	
11600	Adaptor	AJ4	2	
Not serviced	Rim, seating	AJ5		
11601	Attachment set, seating rim	AJ6	2	
Not serviced	Body	AJ7		
11602	Gasket, lamp seating	AJ8	2	
05570	HEADLAMP ASSEMBLY—OUTER (U.S.A.) (Main and Dip Beam)		2	
11598	Rim	AJ9	2	
11394	Screw, rim fixing	AJ10	6	
11607	Light unit	AJ11	2	
11600	Adaptor	AJ12	2	
Not serviced	Rim, seating	AJ13		
11601	Attachment set, seating rim	AJ14	2	
lot serviced	Body	AJ15		
11602	Gasket, lamp seating	AJ16	2	
05562	HEADLAMP ASSEMBLY—INNER (SWEDEN) (Main Beam)		2	
11598	Rim	AJ1	2	
11394	Screw, rim fixing	AJ2	2	
11599	Light unit	AJ3	2	
11600	Adaptor	AJ4	2	
lot serviced	Rim, seating	AJ5		
11601	Attachment set, seating rim	AJ6	2	
lot serviced	Body	AJ7		
11602	Gasket, lamp seating	AJ8	2	
05 574	HEADLAMP ASSEMBLY—OUTER (SWEDEN) (Main and Dip Beam)		2	
511598	Rim	AJ9	2	
11394		AJ10	6	
	Screw, rim fixing			
11612 11611	Light unit Spring, retaining bulb	AJ11	2	
10218	Bulb		2	
11600	Adaptor	AJ12	2	
lot serviced	Rim, seating	AJ13	4	
11601	Attachment set, seating rim	AJ14	2	
lot serviced	Body	AJ15	4	
LOT SETVICED				

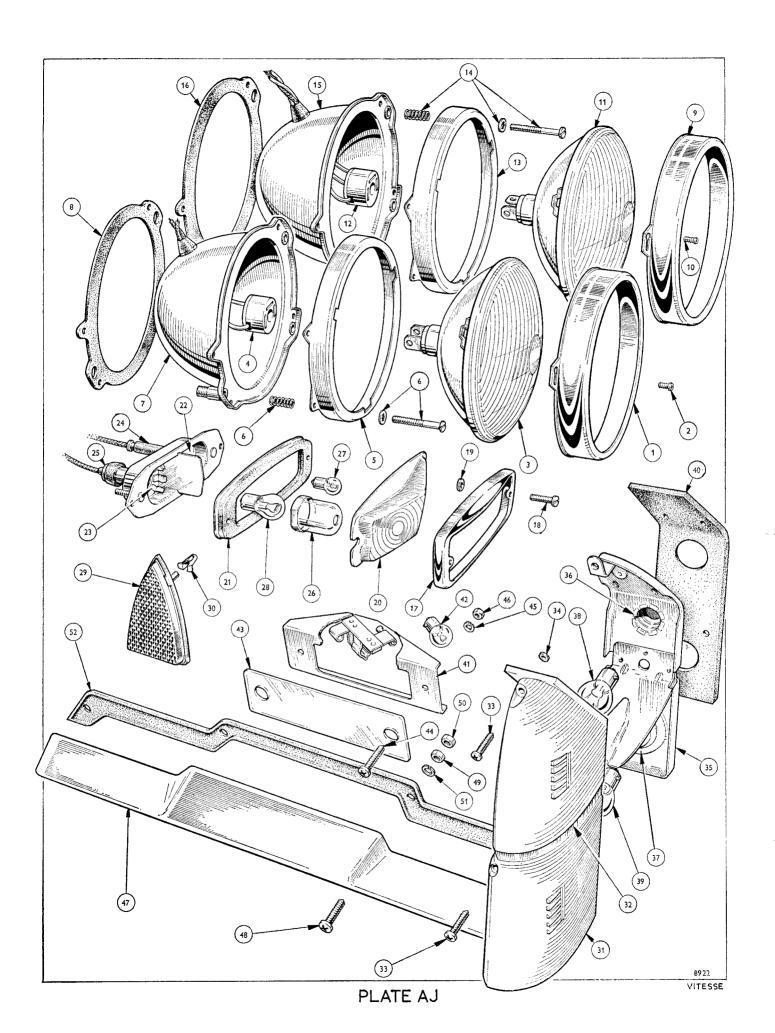


art No.	Description	Plate No.	No. per Unit	Remarks
05566	HEADLAMP ASSEMBLY-INNER		2	
	(AUSTRIA)			
	(Main Beam)			
11598	Rim	AJ1	2	
11394	Screw, rim fixing	AJ2	6	
11608	Light unit	AJ3	2	
11600	Adaptor	AJ4	2	
lot serviced	Rim, seating	AJ5	_	
11601	Attachment set, seating rim	AJ6	2	
lot serviced	Body	AJ7		
11602	Gasket, lamp seating	AJ8	2	
05573	HEADLAMP ASSEMBLY—OUTER		2	
	(AUSTRIA)			
	(Main and Dip Beam)			
11598	Rim	AJ9	2	
11394	Screw, rim fixing	AJ10	6	
11613	Light unit	AJ11	2	
11611	Spring, retaining bulb		2	
10218	Bulb		2	
11600	Adaptor	AJ12	2	
lot serviced	Rim, seating	AJ13		
11601	Attachment set, seating rim	AJ14	2	
lot serviced	Body	AJ15		
11602	Gasket, lamp seating	AJ16	2	
05562	HEADLAMP ASSEMBLY—INNER (CONTINENTAL) (Main Beam)		2	
44500	Rim	AJ1	2	
11598 11394	Screw, rim fixing	AJ2	6	
1139 4 11599	Light unit	AJ2	2	
11600	Adaptor	AJ4	2	
lot serviced	Rim, seating	AJ5	-	
11601	Attachment set, seating rim	AJ6	2	
lot serviced	Body	AJ7	-	
11602	Gasket, lamp seating	AJ8	2	
305575	HEADLAMP ASSEMBLY—OUTER (CONTINENTAL) (Main and Dip Beam)		2	
511598	Rim	AJ9	2	
11394	Screw, rim fixing	AJ10	6	
11610	Light unit	AJ11	2	
11611	Spring, retaining bulb	7011	2	
10218	Bulb		2	
11600	Adaptor	AJ12	2	
Not serviced	Rim, seating	AJ13	-	
11601	Attachment set, seating rim	AJ14	2	
Not serviced	Body	AJ15	-	
11602	Gasket, lamp seating	AJ16	2	

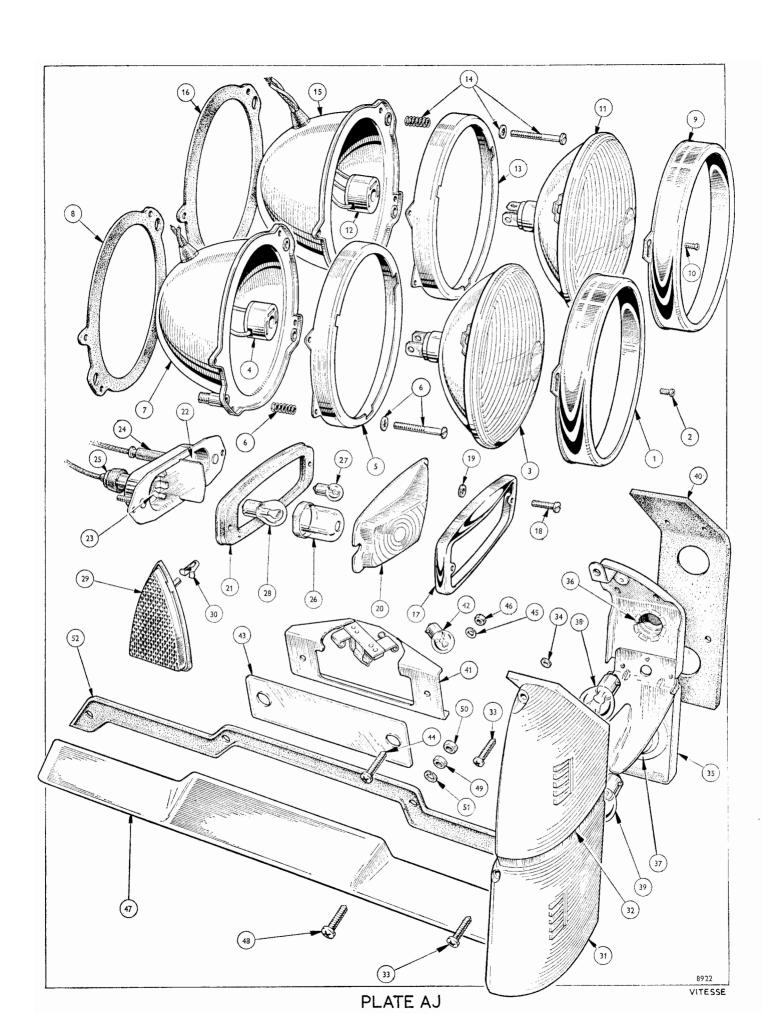


Part No.	Description	Plate No.	No. per Unit	Remarks
305565	HEADLAMP ASSEMBLY—INNER (ITALY)		2	
F44 F00	(Main Beam)	A 14	2	
511598	Rim	AJ1	2	
511394	Screw, rim fixing	AJ2	6	
511605	Light unit	AJ3	2	
510218	Bulb	A 14	2 2	
511600	Adaptor	AJ4	2	
Not serviced	Rim, seating	AJ5	•	
511601	Attachment set, seating rim	AJ6	2	
Not serviced	Body	AJ7	_	
511602	Gasket, lamp seating	AJ8	2	
305572	HEADLAMP ASSEMBLY—OUTER (ITALY) (Main and Dip Beam)		2	
511598	Rim	AJ9	2	
511394	Screw, rim fixing	AJ10	6	
511604	Light unit	AJ11	2	
510218	Bulb		2	
511600	Adaptor	AJ12	2	
Not serviced	Rim, seating	AJ13	=	
511601	Attachment set, seating rim	AJ14	2	
Not serviced	Body	AJ15	-	
511602	Gasket, lamp seating	AJ16	2	
	HEADLAMP ATTACHMENT DETAILS			
YF7404	Screw		16	
FJ2444	Nut, spire > Headlamps to body		16	
WP0004	Washer		16	
205526	FLASHER—SIDE LAMP		2	
505491	Rim	AJ17	2 2	
503561	Screw, rim fixing	AJ17 AJ18	4	
503534	, <u> </u>	AJ18 AJ19	4	
	Washer, retaining screw Lens	AJ19 AJ20	2	
505492			2	
122229	Gasket, rubber	AJ21 AJ22	2	
506619	Interior, bulbholder, side lamp			
508537	Interior, bulbholder, flasher	AJ23	2	
506620	Grommet, cable, side lamp	AJ24	2	
505856	Grommet, cable flasher	AJ25	2	
505854	Cover, bulb	AJ26	2	
59467	Bulb, side lamp	AJ27	2	
5023 79	Bulb, flasher	AJ28	2	

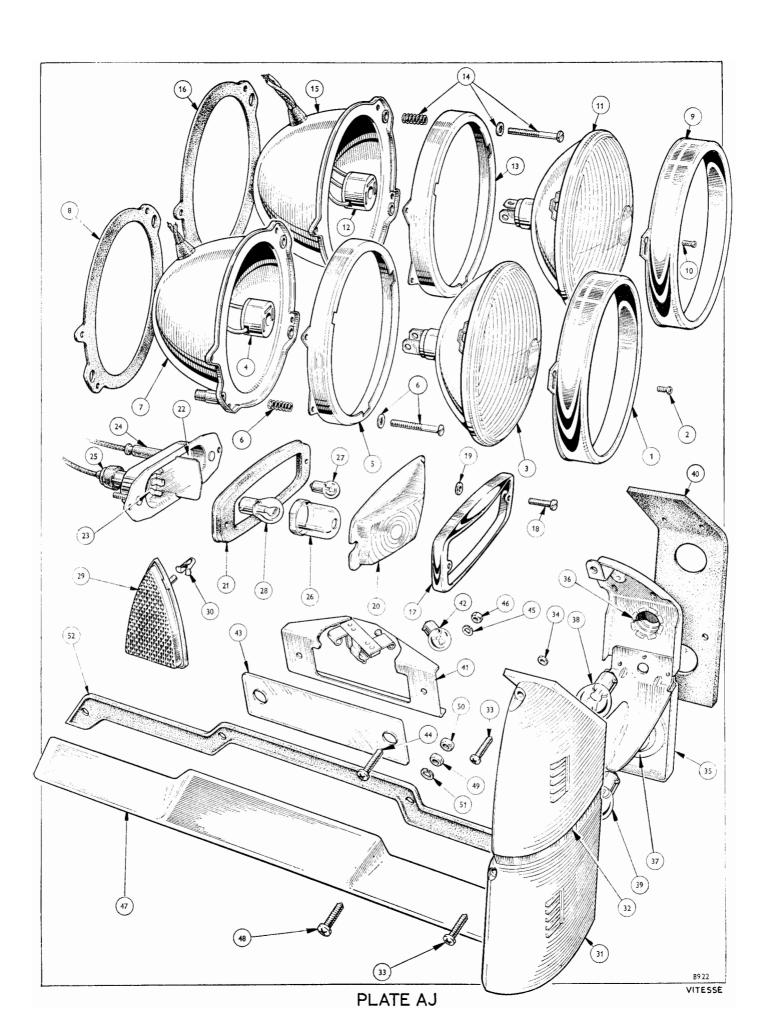

Part No.	Description	Plate No.	No. per Unit	Remarks
206977	FLASHER—SIDE LAMP (U.S.A. & CANADA ONLY)		2	
510756	Rim		2	
510757	Screw, rim fixing		4	
503534	Washer, retaining screw		2	Fitted up to Commission No.
510758	Lens		2	HB930 only
122229	Gasket		2	Note: If fitted in pairs, may be
508545	Interior, bulbholder		2	used as an alternative to
502287	Bulb		2	Flasher-Side Lamp
510759	Grommet, cable entry		2	206540.
510760	Base		2	
HN2005	Nut, side lamp attachment		4	
WN0705	Washer, shakeproof		4	
504806	Sleeve, cable		2	
50 1000	515575, 225.5			,
206540	FLASHER—SIDE LAMP (U.S.A. & CANADA ONLY)		2	
505491	Rim		2	
503561	Screw, rim fixing		4	
503534	Washer, retaining screw		4	
505492	Lens		2	Fitted from Commission No.
122229	Gasket, rubber		2	HB931 and future
506619	Interior, bulbholder, side lamp		2	Note: If fitted in pairs, may be
508537	Interior, bulbholder, flasher		2	used as an alternative to
506620	Grommet, side lamp cable		2	Flasher-Side Lamp
505856	Grommet, flasher lamp cable		2	206977.
59467	Buib, side-lamp		2	1
502379	Bulb, flasher lamp		2	
HN2005	Nut Lamp		4	
WN0705	Washer, shakeproof attachment		4	
504806	Sleeve, cable		2	
121401	REFLEX UNIT	AJ29	2	
609710	Bush, spring, reflex unit to body	AJ30	4	
121400	LAMP ASSEMBLY, STOP, TAIL AND FLASHER		2	
508701	LAMP ASSEMBLY, STOP, TAIL AND FLASHER—RED LENS (U.S.A. & CANADA ONLY)		2	
508542	Lens	AJ31	2	
508890	Lens (red flasher)—U.S.A. and Canada only		2	Fitted up to Commission No.
508544	Clip, lens joint		2	only
508543	Screw, lens fixing	AJ33	4	l only
503534	Washer, screw retaining	AJ34	4	
Not serviced	Base assembly	AJ35		
508537	Interior, bulbholder, flasher	AJ36	2	
508545	Interior, bulbholder, stop-tail	AJ37	2	
502379	Bulb, flasher	AJ38	2	
F00007	Bulb, stop-tail	AJ39	2	
502287	Duib, stop-tail	//33/	_	l control of the cont

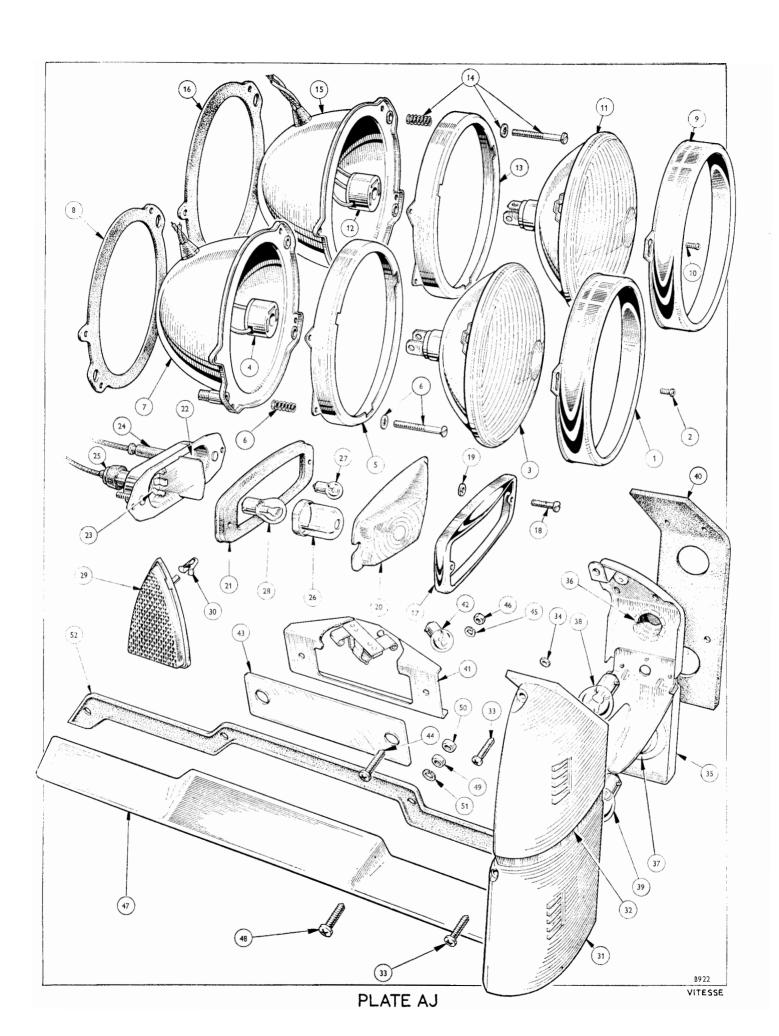


Part No.	Description	Plate No.	No. per Unit	Remarks
212124	LAMP ASSEMBLY, STOP, TAIL AND FLASHER—AMBER LENS		2	
209499	LAMP ASSEMBLY, STOP, TAIL AND FLASHER—RED LENS (U.S.A. AND CANADA ONLY)		2	
51 44 16	Lens, amber		2	
1 44 17	Lens, red (U.S.A. and Canada only)		2	}
08544	Clip, lens joint		2	
08543	Screw, lens fixing		4	
03534	Washer, screw retaining		4	Fitted from Commission No.
Not serviced	Base assembly		7	and future
10907	Interior, bulbholder, flasher		2	}
508545	Interior, bulbholder, stop-tail		2	
502379	Bulb, flasher		2	
502377 502287	Bulb, stop-tail		2	
05953	Sleeve, terminal		2	
51 44 19	Washer, D.P. cable grip		2	1
514420	Washer, S.P. cable grip		2	
514418	Gasket, lens seating		2	
YF7306	Screw, self-tapping		8	Alternative to YZ3404
YZ3404	Screw, self-tapping		8	Alternative to YF7306
WP0004	Washer, plain Rear lamp base to body		8	
FC2803	Nut, spire		8	
509710	Bush, spring		4	
128188	REFLECTOR (SWITZERLAND ONLY)		2	
612121	Plinth, reflector		2	
503627	Nut \ \ Reflectors		2	
WE0605	Washer, lock ∫ to plinths		2	
506186	Screw, set Plinths to		4	
WE0605	Washer, lock ∫ boot lid		4	
03829	REAR NUMBER PLATE LAMP	AJ41	1	
59467	Bulb	AJ42	1	
508051	Lens, rear number plate lamp	AJ43	1	
510239	Screw, set	AJ44	2	
₩L 0205	Washer, lock > Lamp and lens to trunk lid	AJ45	2	
HN2005	Nut	AJ46	2	
704789	Cowl, rear number plate lamp	AJ47	1	
PX0454	Screw, set	AJ48	4	
HN2054	Nut Cowl to	AJ49	4	
HN2005	Nut trunk lid	AJ50	4	
WL0204	Washer, lock Cowl to	AJ51	4	
705211	Seal, rubber f trunk lid	AJ52	1	

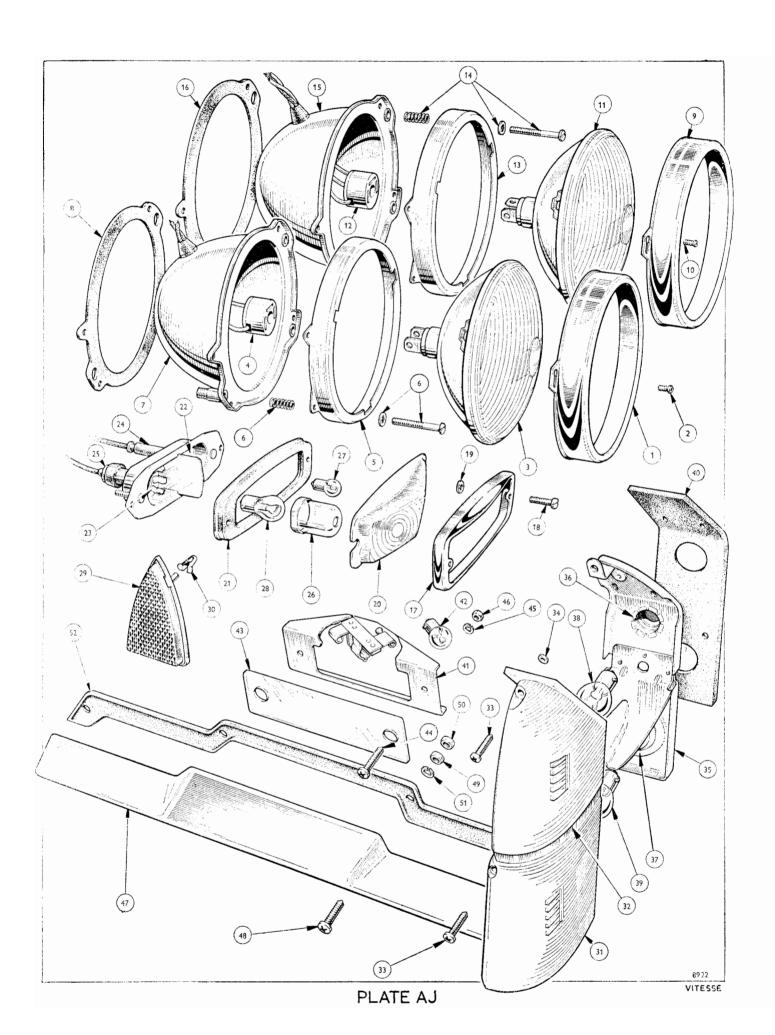


Part No.	Description	Plate No.	No. per Unit	Remarks
127916	REAR NUMBER PLATE LAMP (U.S.A. ONLY)		1	
500492	Glass, rear number plate lamp		1	
501436	Bulb		2	
509736	Nut, dome		1	
6 09680	Cowl assembly, number plate lamp		1	
607880	Seal, cowl, number plate lamp		1	
61917	Grommet		1	
WE0605	Washer, shakeproof, external		2	
HN2005	Nut \ \ Rear number plate		2	
WN0705	Washer, s hakeproof \int lamp attachment		2	
610126	FACIA LAMP ASSEMBLY		1)
612158	Plate, cover, facia lamp		1	
508977	Bulb, amber 12 v. 6 w.		1	Alternative to 611769 listed below
YF7304	Screw, self-tapping (Alternative to YZ3304) Facia		2	Tracer lacive to or 1705 listed below
YZ3304	Screw, self-tapping (Alternative to YF7304) > lamp		2)
FU2543	Nut, spire attachment		2	J
611769	FACIA LAMP ASSEMBLY		1)
612158	Plate, cover, facia lamp		1	
508977	Bulb, facia lamp		1	Alternative to 610126 listed above
564801	Bush \ Lamp		2	
566783	Peg, locking \int attachment		2	J
606241	COURTESY LIGHT SWITCH		2	Alternative to 606242
606242	COURTESY LIGHT SWITCH		2	Alternative to 606241
604291	ROOF LAMP ASSEMBLY		1	
502356	Lens, roof lamp		1	
508977	Bulb		1	
503702	Screw Roof lamp to		2	
FU2543	Nut, spire mounting bracket		2	

Part No.	Description	Plate No.	No. per Unit	Remarks
122759	FOOT DIPPER SWITCH (FOR U.S.A. ONLY)	AK1	1	Fitted up to Commission No. only
137630	FOOT DIPPER SWITCH (FOR U.S.A. ONLY)		1	Fitted from Commission No.
608595	Bracket, foot dipper switch—For U.S.A. only	AK2	1	
rF7504	Screw, self-tapping		4	
№ P0156	Washer, plain Bracket		4	
10177	Washer, rubber ∫ to body		4	
FU2585/9	Nut, fix		4	
YF7528	Screw, self-tapping		2	Fitted up to Commission No.
DV0E04	Dipswitch		•	only
PX0504	Screw to bracket		2	Fitted from Commission No. and future
FN2045	Nut, fix		2	and receive
22779	STOP-LIGHT SWITCH	AK3	1	Fitted up to Commission No.
	(Fitted in Five-Way Connection)			HB7578 only
122780	Gasket, on switch		1) 1187378 61119
132569	STOP-LIGHT SWITCH		1	Fitted from Commission No.
	(Fitted in Five-Way Connection)			≻ HB7579 up to HB15000
107072	Gasket, on switch		1	only
139529	STOP-LIGHT SWITCH		1)
	(Fitted on Brake Pedal Mounting Bracket)			Fitted from Commission No.
WN0711	Washer, shakeproof Switch		1	HB15001 and future
IN2111	Nut \int attachment		1	}
208952	†CONTROL BOX	AK4	1	
511585	Cover	AK5	1	
511586	Resistance, swamp, 55 ohms	AK6	1	
511587	Resistance, points, 60 ohms	AK7	1	
510975	Screw		3	
503627	Nut Control box to body		3	
505260	Washer, lock		3	
125189	FUSE BOX (U.S.A. ONLY)	AK8	1	
58465	Fuse (2 fitted and 2 spares)	AK9	4	
FC2805/9	Nut		1	
YA0507	Screw, set Fuse box attachment		1	
YA0305	Screw, Parker Kalon		1	

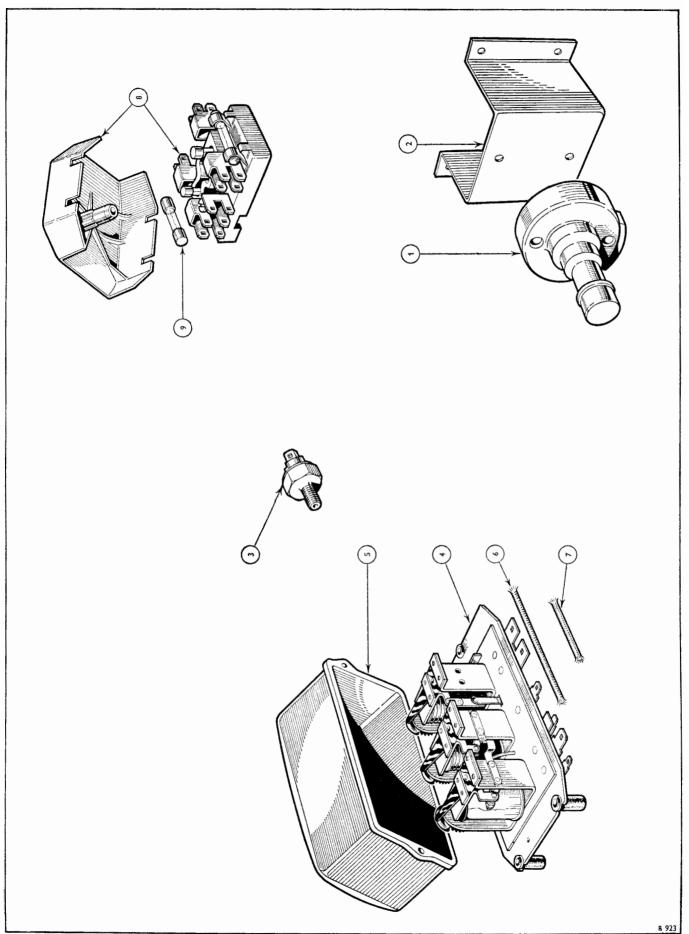

Part No.	Description	Plate No.	No. per Unit	Remarks
116011	BATTERY—12 V. 38 AMP. HOUR		1	
505446	BATTERY—SEALED (EXPORT)		1	
116012	BATTERY—DRY (EXPORT)		1	
	Note:For Battery Attachment Details-see Body Section			
133037	Body harness—Saloon		1	
123451	Body harness—Convertible		1	
123602	Earth, tail lamp		2	
59813	Screw, self-tapping, battery leads to battery		2	
WN0703	Washer, shakeproof, stop/tail lamp		2	
60527	Cleat, cable		3	
503213	Sleeve		3	
305622	MAIN HARNESS		1	Fitted up to Commission No. HB7371 (R.H.S.) and HB7463
305782	MAIN HARNESS		1	(L.H.S.) only Fitted from Commission No. HB7372 (R.H.S.) and HB7464
305523	MAIN HARNESS (U.S.A. ONLY)		1	(L.H.S.) up to HB15000 only Fitted up to Commission No. HB15000 only
306768	MAIN HARNESS		1) = 44 = 44
				Fitted from Commission No.
306767	MAIN HARNESS (U.S.A. ONLY)		1	HB15001 and future
125469	Clip, cable, harness to bonnet hinge tube		2	
508730	Clip, cable, horn leads to valance		2	
508726	Clip, cable, temp. transmitter lead to dynamo bracket (U.S.A. and Canada only)		1	
134301	Lead, earth, steering rack housing to chassis		1	
	ENGINE LEADS			
511109	Lead, starter to solenoid		1	
507900	Lead, battery to earth		1	
133233	Lead, engine to earth		1	
511110	Lead, neg., battery to solenoid—R.H.S.		1	
507903	Lead, neg., battery to solenoid—L.H.S.		1	
125957	Lead, coil to distributor—L/T		1	
HU0804	Setscrew Battery earth to		1	
WE0608	Washer , shakeproof \int gusset, panel dash side		1	
115706	Boot, rubber, starter solenoid		1	

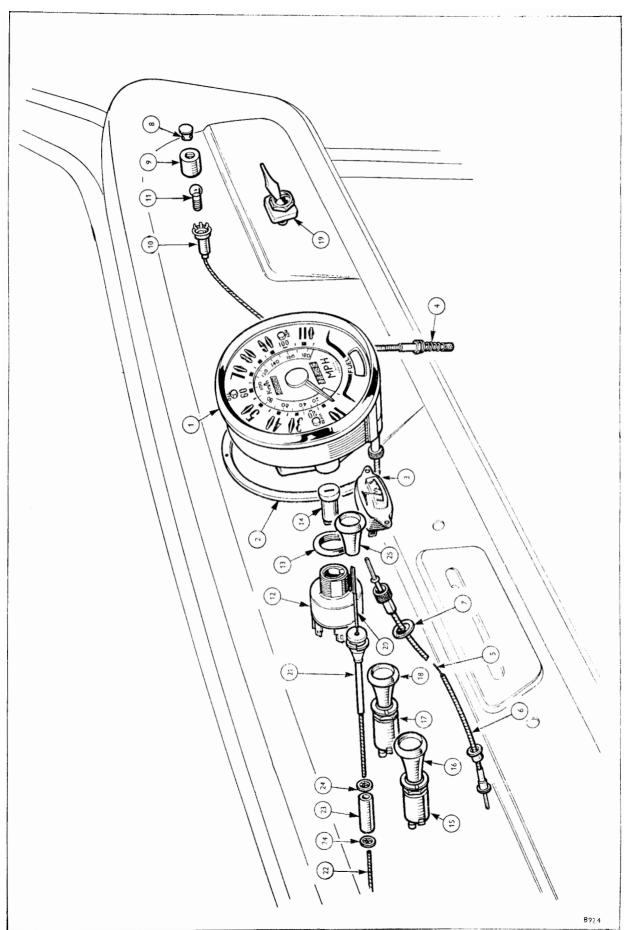

Part No.	Description	Plate No.	No. per Unit	Remarks
209036	†SPEEDOMETER—MILE	AL1	1]
209037 608499	†SPEEDOMETER—KILO Ring, reinforcement, speedo to facia	AL2	1 1	Fitted up to Commission No. No. HB15000 only
211403	†SPEEDOMETERMILE		1	Final from Commission No.
211404 608501	†SPEEDOMETER—KILO Ring, reinforcement, speedo to facia		1 1	Fitted from Commission No. HB15001 and future
131437	†FUEL GAUGE	AL3	1	Fitted up to Commission No. HB15000 only
131438 608490	†FUEL GAUGE Ring, reinforcement, fuel gauge to facia		1 1	Fitted from Commission No. HB15001 and future
209543 608501 59492	†REV. COUNTER Ring, reinforcement, rev. Bulb, instrument illumination		1 1 6	Fitted from Commission No. HB15001 and future
	Ignition, Main Beam, Oil Pressure Warning and Panel Illumination Lamp Tubes are incorporated in the above Speedo, Fuel Gauge and Rev. Counter Assemblies			
120580	Trip, reset, flexible	AL4	1	
	SPEEDOMETER CABLE ASSEMBLY			
504621/I	Cable, inner	AL5	1	
504621/O	Cable, outer	AL6	1	
602037	Grommet, fitted to cable	AL7	1	
601847	Bracket, speedo cable—R.H.S.		1	
125905 614690	Bracket, speedo cable—L.H.S. Clip, cable		1 2	
	REV. COUNTER CABLE ASSEMBLY			
139567/I	Cable, rev. counter—R.H.S.		1	Fitted from Commission No.
138316/I	Cable, rev. counter—L.H.S.		1	HB15001 to Body No. HBD1036
139567/O	Cable, rev. counter—R.H.S.		1	only
138316/O	Cable, rev. counter—L.H.S.		1	,
140136/O	Cable, rev. counter—outer		1	Fitted from Body No. HBD1036
140136/I 602037	Cable, rev. counter—inner Grommet, rev. counter		1 1	∫ and future
131439	TEMPERATURE GAUGE		1)
608490	Ring, reinforcement		1	
121997	Temperature transmitter		1	U.S.A. only up to Com-
126022	Bulbholder and cable, temperature gauge		1	mission No. HB15000. For all
59492	Bulb, temperature gauge		1	countries from commission No.
126019	Cable, temperature gauge to temperature transmitter		1	HB15001 and future
131144	Cable, fuel gauge to temperature gauge		1	
126264	Cable, earth, temperature and oil gauge		2	J
138669	Lead, extension, temperature transmitter		1	


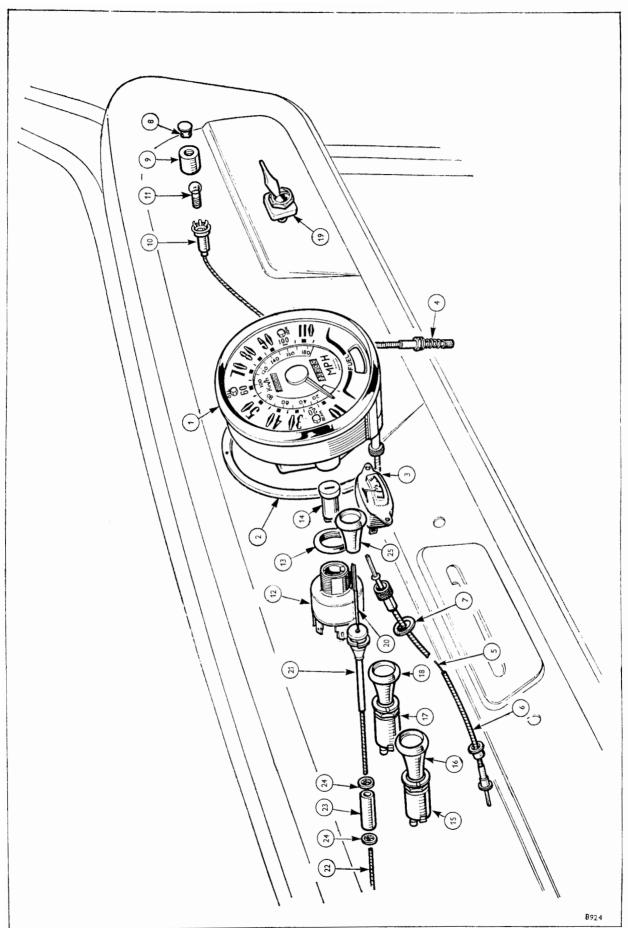


PLATE AL

VITESSE


Part No.	Description	Plate No.	No. per Unit	Remarks
119616	FLASHER WARNING LIGHT		1	
508138	Window	AL8	1	
508137	Shade	AL9	1	
508139	Holder, bulb	AL10	1	
9492	Bulb, warning light	AL11	1	
132135	IGNITION STARTER SWITCH AND STEERING COLUMN LOCKING DEVICE		1	Germany only
27651	IGNITION AND STARTER SWITCH	AL12	1	
507032	Bezel	AL13	1	Fitted up to Commission No. HB15000 only
509793	Bezel		1	Fitted from Commission No.
28087	Washer		1	No. HB15001 and
316046	Washer, P.V.C.		1	future
554217	Barrel, ignition locking	AL14	1	
07285	WINDSCREEN WIPER SWITCH	AL15	1) Fired up to Commission N
704875	Knob	AL16	1	Fitted up to Commission No. (HB15000 only
10573	Clip, securing knob lens		1	HB13000 only
130544	WINDSCREEN WIPER SWITCH		1)
704875	Knob		1	
10573	Clip, securing knob lens		1	
9445	Washer, rubber		1	Fitted from Commission No.
09933	Bezel		1	HB15001 and future
16045	Washer, P.V.C.		1	ĺ
02884	Nut		1	
30545	Washer		1	J
	PANEL LIGHT SWITCH AND KNOB (U.S.A. ONLY)			
107285	Switch		1)
704879	Knob		1	Fitted up to Commission No.
510573	Clip, securing knob lens		1	HB15000 only
₩M0060	Washer, medium		1	J
39564	Switch, panel light		1)
704879	Knob		1	
510573	Clip, securing knob lens		1	
59445	Washer, rubber, fitted in knob		1	Fitted from Commission No.
509795	Bezel, switch		1	HB15001 and future
39566	Nut		1	
128088	Washer → Switch attachment		1	
616049	Washer, P.V.C.		1	

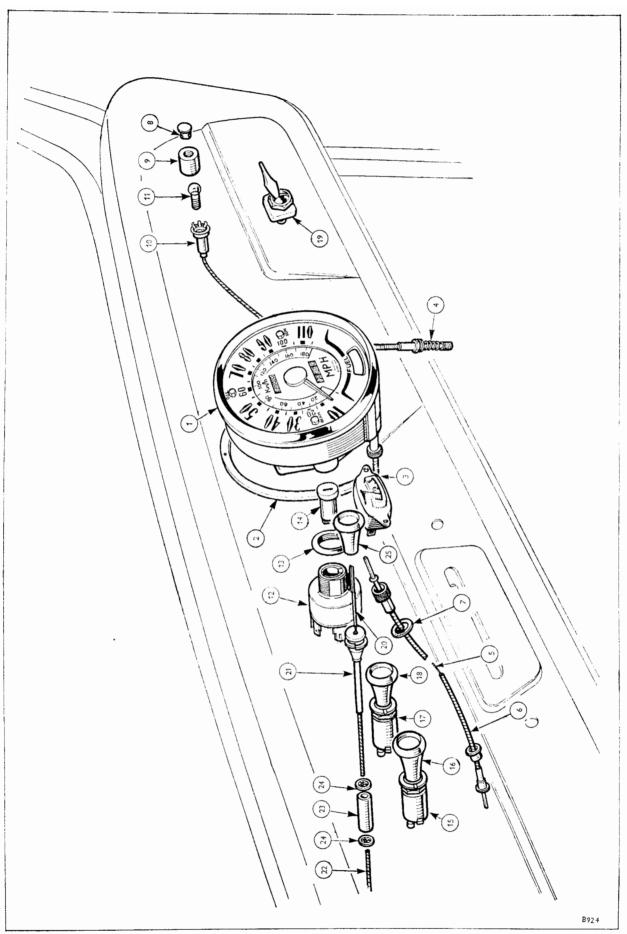

Part No.	Description	Plate No.	No. per Unit	Remarks
	LIGHTING AND ILLUMINATION MASTER SWITCH AND KNOB			
125245	Switch	AL17	1	Fitted up to Commission No
704877	Knob	AL18	1	,
610573	Clip, securing knob lens		1	∫ HB15000 only
131812	Switch		1 '	ĺ
704877	Knob		1	
310573	Clip, securing knob		1	Fitted from Commission No.
9445	Washer, rubber, fitted in knob		1	HB15001 and future
310685	Bezel, switch		1	HB15001 and future
128089	Washer Between switch		1	
316049	Washer, P.V.C. ∫ and facia		1 .	J
131273	HEATER SWITCH-TOGGLE	AL19	1	Fitted up to Commission No HB15000 only
39536	HEATER SWITCH—TOGGLE		1	Fitted from Commission No HB15001 and future
	CHOKE CONTROL AND KNOB			
101463	Cable, inner	AL20	1	Fitted up to Commission No
101458	Cable, outer, primary	AL21	1	HB15000 only
101464	Cable, outer, secondary	AL22	1	TIBISOOD OILLY
101831	Cable, inner		1)
101832	Cable, outer, primary > R.H.S. only		1	Fitted from Commission No.
101833	Cable, outer, secondary		1	HB15001 up to
01835	Cable, inner		1	•
101836	Cable, outer, primary \(\setminus \) L.H.S. only		1	only
101833	Cable, outer, secondary		1	J
102339	Cable, inner		1 '	Ì
102337	Cable, outer, primary > R.H.S. only		1	
101816	Cable, outer, secondary		1	Fitted from Commission No.
102341	Cable, inner		1	and future
102340	Cable, outer, primary \(\sum_{\text{L.H.S. only}} \)		1	
101816	Cable, outer, secondary		1	J
17400	Sleeve, connecting \ Connector to primary	AL23	1 '	
X3203	Clip, locking and secondary cables	AL24	2	
'0 4 873	Knob	AL25	1	
310573	Clip, securing knob		1	Fitted from Commission No.
16050	Washer, P.V.C.		1	HB15001 and future
110030				

26

Part No.	Description	Plate No.	No. per Unit	Remarks
568042	BODY COMPLETE PAINTED AND TRIMMED—SALOON		1	
568044	BODY COMPLETE PAINTED AND TRIMMED—CONVERTIBLE		1	
569036	BODY COMPLETE PAINTED AND TRIMMED (LESS SEATS) (SUNSHINE ROOF CONDITION)		1	Secret Outro
569037	BODY COMPLETE PAINTED AND TRIMMED (INCLUDING SEATS) (SUNSHINE ROOF CONDITION) Less the following items. Facia Panel, Facia Ash Trays, Cubby Box, Steering Column, Brackets and Cowl, Driving Mirror, Sun Visor, Heater, Bumper Overriders, Frontal Grille, Bonnet Medallion, Name Plate, Front Floor Mats or Carpets, Door Tread Plates, Blanking Plugs, Clips and Grommets.		1	Special Orders
568041	BODY SHELL, PRIME FINISH—SALOON		1	
569034	BODY SHELL, PRIME FINISH (SUNSHINE ROOF)		1	
568043	BODY SHELL, PRIME FINISH— CONVERTIBLE Comprising: Body, Bonnet, Doors, Trunk Lid and Chassis Frame.		1	
903104	BONNET ASSEMBLY	AM1	1	Fitted up to Commission
903319	BONNET ASSEMBLY		1	No. only Fitted from Commission
902981	DASH AND WINDSCREEN ASSEMBLY—R.H.S. (SALOON)	AM2	1	No. and future
902973	DASH AND WINDSCREEN ASSEMBLY— R.H.S. (CONVERTIBLE)		1	Fitted up to
902982	DASH AND WINDSCREEN ASSEMBLY— L.H.S. (SALOON)		1	Commission No.
902974	DASH AND WINDSCREEN ASSEMBLY— L.H.S. (CONVERTIBLE)		1	

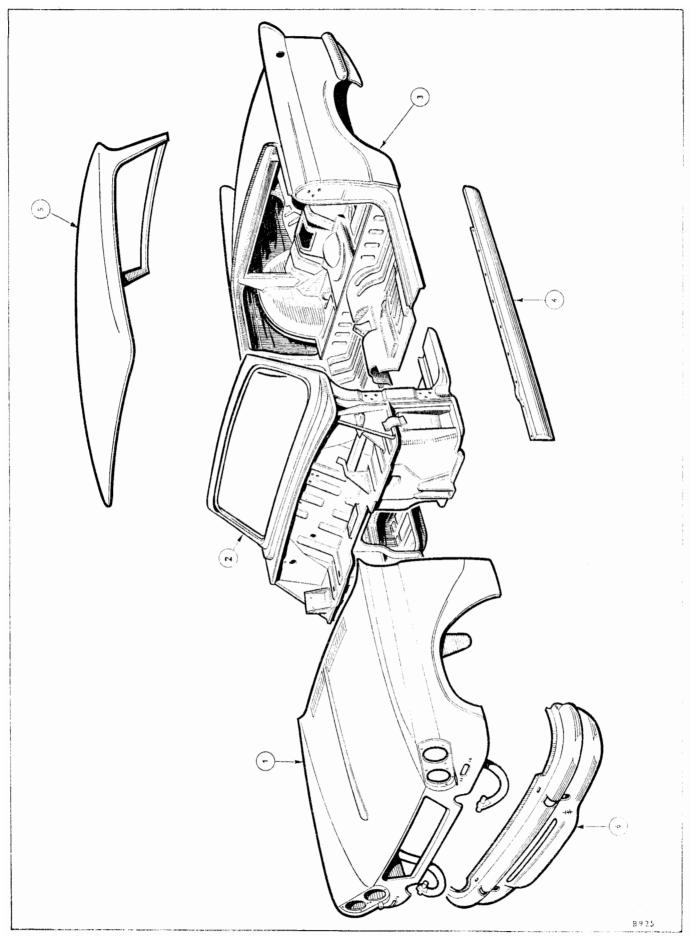

Part No.	Description	Plate No.	No. per Unit	Remarks
	BODY—continued			
903314	DASH AND WINDSCREEN ASSEMBLY— R.H.S. (SALOON)		1	
903316	DASH AND WINDSCREEN ASSEMBLY— R.H.S. (CONVERTIBLE)		1	Fitted from Commission No.
903313	DASH AND WINDSCREEN ASSEMBLY— L.H.S. (SALOON)		1	and HBD2538 only
903315	DASH AND WINDSCREEN ASSEMBLY— L.H.S. (CONVERTIBLE)		1	
569043	DASH AND WINDSCREEN ASSEMBLY R.H.S. (SALOON)		1	
569045	DASH AND WINDSCREEN ASSEMBLY R.H.S. (CONVERTIBLE)		1	Fitted from Body No. HBC2256
569042	DASH AND WINDSCREEN ASSEMBLY L.H.S. (SALOON)		1	and HBD2539 and future
569044	DASH AND WINDSCREEN ASSEMBLY L.H.S. (CONVERTIBLE)		1	
903194	REAR END COMPLETE ASSEMBLY (LESS TRUNK LID)—SALOON	AM3	1	
903195	REAR END COMPLETE ASSEMBLY (LESS TRUNK LID)—CONVERTIBLE		1	
803071	SILL ASSEMBLY—R.H.		1	
803070	SILL ASSEMBLY—L.H.	AM4	1	
903083	ROOF PANEL ASSEMBLY—SALOON	AM5	1	
806600	FRONT VALANCE ASSEMBLY	AM6	1	



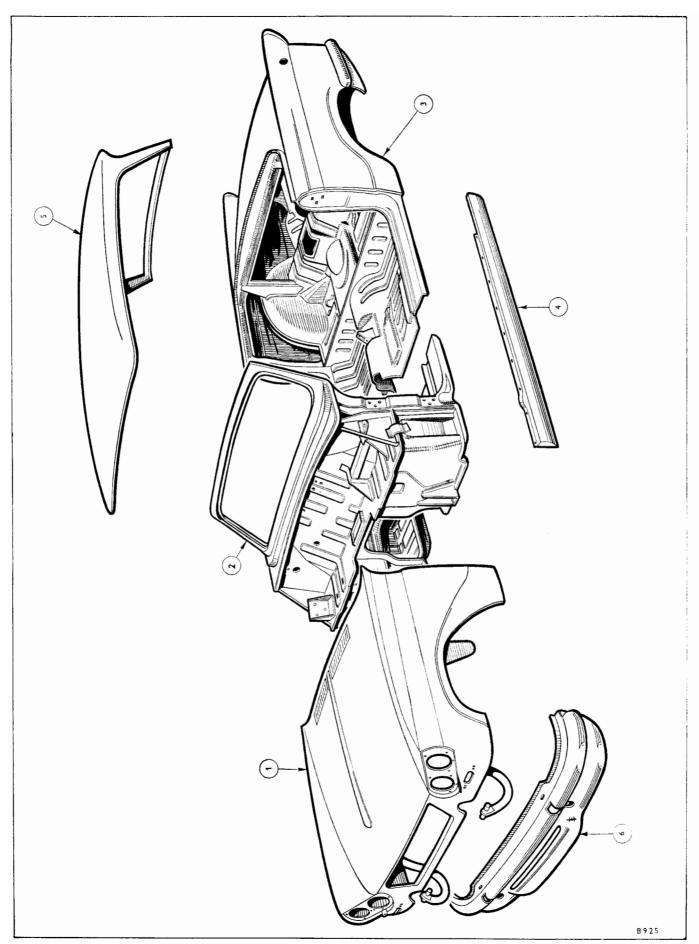


PLATE AM

Part No.	Description	Plate No. per No. Unit	Remarks
	BODY MOUNTING DETAILS		
607708	Plate assembly, 'B' post mounting	2	
105002	Washer, plain, under plate assembly	2	
609291	Anchor plate assembly, mounting bracket, floor	2	
607931	Anchor plate assembly, mounting bracket, floor	4	
608836	Pad, mounting	A/R	
HU0808D	Setscrew Body to mounting	2	
WM0058	Washer, plain fracket, dash, front	2	
HB0826D	Bolt Body to chassis	8	
WP0008	Washer, plain side channels	8	
613178	Packing, aluminium	2	
HB0910	Bolt	2	
WM0075	Washer, plain ∫ to chassis	2	
WQ0309	Washer, lock	2	
608269	Pad, mounting Front and rear	2	
WP0160	Washer, plain > floors to centre	6	
YT3711	Screw cross member	6	
BT7822	Screw	6	
HU0811	Screw Luggage floor	4	
WP0160	Washer, plain (to chassis	2	
105002	Washer, plain ∫	4	
609824	Tube, distance, body mounting pad	4	
CD26326	Block, mounting	A/R	
610558	Packing, body mounting	A/R	
HB0826P	Bolt	8	
WP0008	Washer, plain > Body to chassis side channel	8	
WP0160	Washer, plain	4	
611865	Anchor plate, mounting bracket, floor	4 \ _H	eavy Duty
611866	Anchor plate, mounting bracket, floor—Rear	2 \(\) ''	car, 50c,

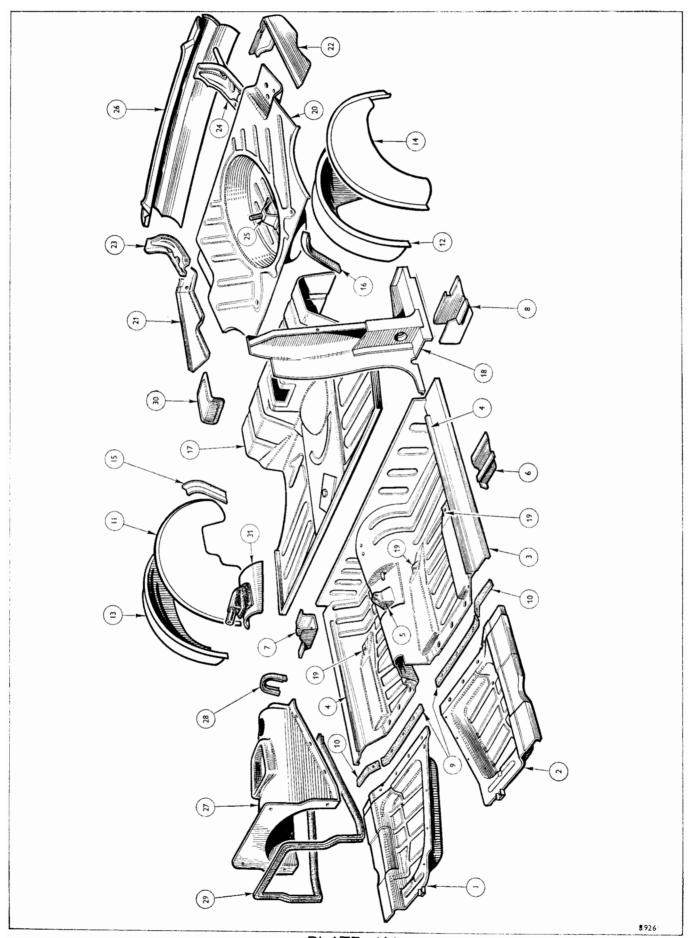


Part No.	Description	Plate No.	No. per Unit	Remarks
	FLOOR PANEL DETAILS			
806269	Floor assembly, front—R.H.—R.H.S.	AN1	1	
806262	Floor assembly, front—L.H.—R.H.S.	71111	1	
B06263	Floor assembly, front—L.H.—L.H.S.	AN2	1	
06270	Floor assembly, front—R.H.—L.H.S.	71112	1	
3187	Floor assembly, rear—Saloon	AN3	1	
03189	Floor assembly, rear—Convertible	71113	1	
07670	Support, angle, rear door seal	AN4	2	Fitted up to Body No.
0, 0, 0				only
08548	Support, angle, rear door seal—L.H.		1	Fitted from Body No.
08549	Support, angle, rear door seal—R.H.		1	and future
21765	Bracket, fulcrum, handbrake lever	AN5	1	
07655	Bracket, mounting, rear floor	AN6	2	
03626	Bracket, mounting, 'B' post—R.H.	AN7	1	
03625	Bracket, mounting, 'B' post—L.H.	AN8	1	
12073	Plate, tapped, safety harness fixing		2	
08268	Strip, sealing	AN9	2	
′H8604	Screw, S/T		2	
VP0117	Washer, plain > Front floor to rear floor		2	
U2566	Nut, fix		2	
08695	Sealing, strip	AN10	2	
05788	Panel, wheelarch, inner—R.H.	AN11	1	
05787	Panel, wheelarch, inner-L.H.	AN12	1	
02846	Panel, wheelarch, outer-R.H.	AN13	1	
02845	Panel, wheelarch, outer-L.H.	AN14	1	
08351	Support angle, squab side—R.H.	AN15	1	
08350	Support angle, squab side—L.H.	AN16	1	
07868	Bracket, support—millboard		2	
07669	Bracket, petrol tank, forward, upper		1	
07668	Bracket, petrol tank, forward, lower		1	
06692	Seat pan assembly—Saloon	AN17	1	
06694	Seat pan assembly—Convertible		1	
12295	Bracket, support, rear seat pan		2	
08049	Reinforcement, fulcrum bracket		1	
21762	Bracket, fulcrum assembly, relay lever		1	
05438	Panel, inner, assembly, 'B' post-R.H.	AN18	1	
05437	Panel, inner, assembly, 'B' post-L.H.		1	
03592	Panel, side, rear seat pan—R.H.		1	
03591	Panel, side, rear seat pan-L.H.		1	
08201	Bracket support assembly, seat	AN19	4	
07826	Bracket support, rear, floor		1	
03181	Floor assembly, luggage	AN20	1	
04612	Panel, luggage, floor, side—R.H.	AN21	1	
04611	Panel, luggage, floor, side—L.H.	AN22	1	
03806	Bracket, mounting, assembly, rear luggage floor—R.H.	AN23	1	
03805	Bracket, mounting, assembly, rear luggage floor-L.H.	AN24	1	
07863	Bracket assembly, spare wheel mounting	AN25	1	

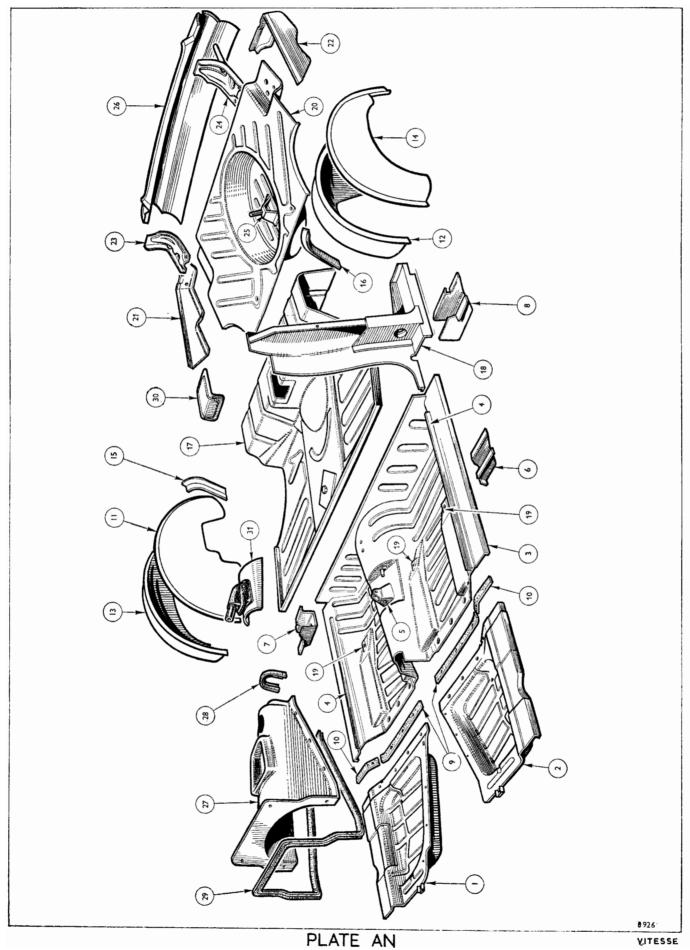


VITESSE

Part No.	Description	Plate No.	No. per Unit	Remarks
	FLOOR PANEL DETAILS—continued			
704300	Cover, panel, spare wheel		1	
09113	Grommet, spare wheel cover		3	
13087	Nut, wheel, spare wheel mounting		1	
02268	Panel, rear valance assembly, centre	AN26	1	
57922	Rivet, Imex, valance to spare wheel panel		2	
IU0703	Screw, set		6	
VP0035	Washer, plain Rear valance centre panel		6	
VL0207	Washer, lock to rear floor		6	
IN2007	Nut		6	
04283	Gusset, heelboard, 'B' postR.H.		1	
04282	Gusset, heelboard, 'B' post-L.H.		1	
06121	Cover, gearbox, assembly	AN27	1	Fitted up to Body No. HBD12759 only
08506	Cover, gearbox, assembly		1)
08499	Deflector plate, heater (Riveted to gearbox cover)		1	Fitted from Body No.
54407	Rivet \ Securing deflector plate		2	HBD12760 and future
09563	Washer ∫ to gearbox cover		2	J
08815	Plate, fixing, radio		1	
Z3504	Screw, s/tapping		2	
Z3303	Screw, s/tapping Fixing plate radio to		1	
VP0005	Washer, plain gearbox cover		2	
U2549/4	Nut, fix		3	
06357	Pad assembly, sound insulation, gearbox cover		1	
08563	Seal, gearbox cover, rear	AN28	1	
11957	Seal, gearbox cover, top and sides	AN29	1	
U2549/4	Nut, spire		10	
H8506	Screw Gearbox cover to dash side,		10	
VP0005	Washer, plain front lower and front floor		10	Fitted up to Commission No.
08383	Plate, retaining		10	only
VP0005	Washer, plain \(\) Gearbox cover		12	Fitted from Commission No.
08383	Plate, retaining \int to dash side		12	sand future
H7405	Screw Gearbox cover to dash shelf		3	Fitted up to Commission No.
VP0006	Washer, plain \int and dash side front top		3	only
H8506	Screw Gearbox cover to dash shelf		2	Fitted from Commission No.
VP0124	Washer, plain dash side front top		2	and future
07688	Cover, rear spring, access	AN30	1	-
U2585/4	Nut, fix Cover		4	
H8505	Screw attachment		4	
05812	Millboard assembly, handbrake	AN31	1	
05789	Grommet		1	
'A0304	Screw, millboard assembly to gearbox tunnel		4	

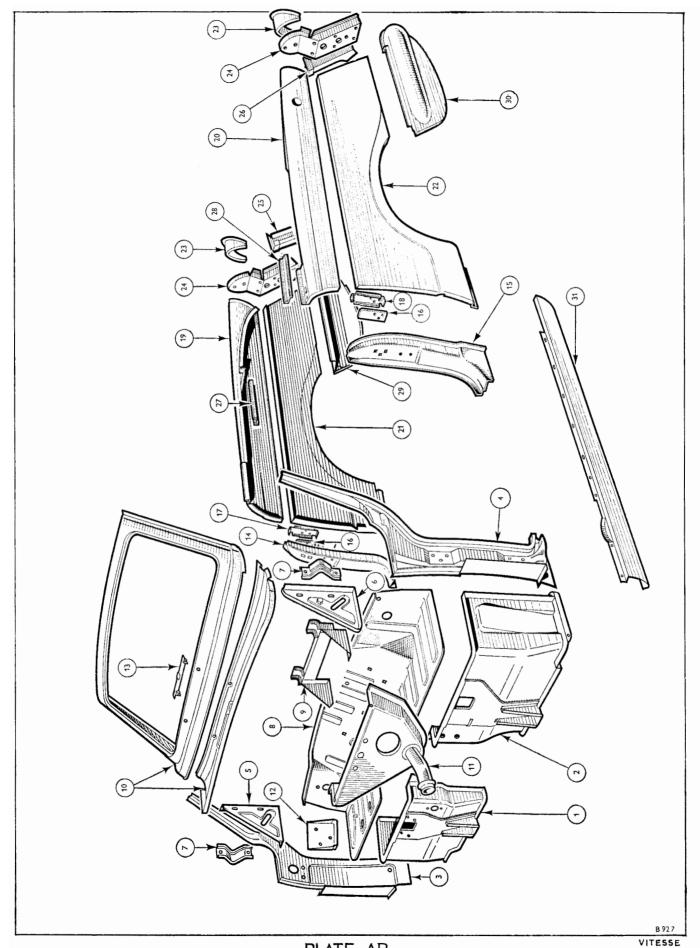


Part No.	Description	Plate No.	No. per Unit	Remarks
	BODY SIDE PANELS			
803242	Panel assembly, dash side—R.H.S.—R.H.	AP1	1	
706028	Panel assembly, dash side—R.H.S.—L.H.	AP2	1	
803241	Panel assembly, dash side—L.H.S.—R.H.		1	
706029	Panel assembly, dash side-L.H.SL.H.		1	
803201	Panel assembly, 'A' Post-R.H.	AP3	1	
803200	Panel assembly, 'A' Post-L.H.	AP4	1	
610278	Support, angle, front door seal—R.H.		1	
610277	Support, angle, front door seal-L.H.		1	
608263	Gusset, panel assembly, dash side, upper-R.HL.H.S.	AP5	1	
608262	Gusset, panel assembly, dash side, upper-L.HR.H.S.	AP6	1	
703570	Gusset, panel, dash side, upper-R.HR.H.S.		1	
703569	Gusset, panel, dash side, upper-L.HL.H.S.		1	
611192	Bracket, support, assembly, bonnet, dash side	AP7	2)
HU0704	Bolt		4	Fitted up to
WP0035	Washer, plain Support bracket assembly to		8	Commission No.
WL0207	Washer, lock gusset panel, dash side		4	only
HN2007	Nut		4	
706555	Plate, guide, bonnet locator—R.H.		1	Fitted from Commission No.
70655 4	Plate, guide, bonnet locator—L.H.		1	up to HBC2255 & HBD5938 only
707292	Bracket, mounting, bonnet locator pin-R.H.		1	1
707291	Bracket, mounting, bonnet locator pin-L.H.		1	Fitted from Commission No.
612962	Pin, bonnet locator		2	HBC2256 and HBD5939 and
511363	Nut, jam Locator pin		2	future
51136 4	Nut > to dash		2	lucure
511365	Washer, plain scuttle bracket		4	J
806271	Panel, dash shelf, assembly—R.H.S.	AP8	1	
806272	Panel, dash shelf, assembly—L.H.S.		1	
608623	Bracket, inner, parcel tray hinge and sound deadening support		2	
608624	Bracket, outer, parcel tray hinge		1	
603559	Clip, wiring		11	
559892	Bracket assembly, battery fixing	AP9	1	
601553	Angle, retaining battery		1	
607847	Rod, battery fixing		2	
V0243	Nut, wing		2	
WL0207	Washer, spring		2	
CD15685/B	Washer		2	
602053	Rubber, battery		1	
902981	DASH AND WINDSCREEN ASSEMBLY (SALOON)—R.H.S.		1	Fitted up to Body No.
902982	DASH AND WINDSCREEN ASSEMBLY (SALOON)—L.H.S.		1	only

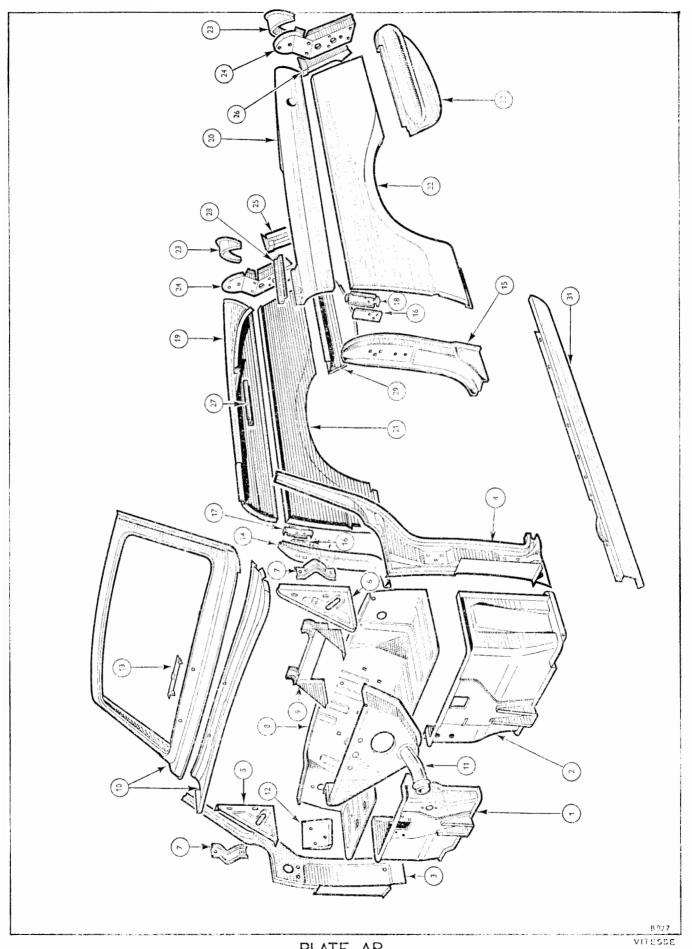


Part No.	Description	Plate No.	No. per Unit	Remarks
	BODY SIDE PANELS—continued			
903314	DASH AND WINDSCREEN ASSEMBLY (SALOON)—R.H.S.		1	Fitted from
903313	DASH AND WINDSCREEN ASSEMBLY (SALOON)—L.H.S.		1	Body No. up to HBD5938 only
569043	DASH AND WINDSCREEN ASSEMBLY (SALOON)—R.H.S.		1	Fitted from Body No. HBD5939 and
569042	DASH AND WINDSCREEN ASSEMBLY (SALOON)—L.H.S.			future
902973	DASH AND WINDSCREEN ASSEMBLY (CONVERTIBLE)—R.H.S.		1	Fitted up to
902974	DASH AND WINDSCREEN ASSEMBLY (CONVERTIBLE)—L.H.S.		1	Body No. only
903316	DASH AND WINDSCREEN ASSEMBLY (CONVERTIBLE)—R.H.S.		1	Fitted from
903315	DASH AND WINDSCREEN ASSEMBLY (CONVERTIBLE)—L.H.S.		1	Body No. up to HBC2255 only
569045	DASH AND WINDSCREEN ASSEMBLY (CONVERTIBLE)—R.H.S.		1	Fitted from Body No. HBC2256
569044	DASH AND WINDSCREEN ASSEMBLY (CONVERTIBLE)—L.H.S.		1	and future
902302	Panel, screen and front deck assembly—R.H.S.	AP10	1	Saloon only
902301	Panel, screen and front deck assembly—L.H.S.		1	Saloon only
901980	Panel, screen and front deck assembly—R.H.S.		1	Convertible only
901979	Panel, screen and front deck assembly—L.H.S.	A D44	1	,
803680	Panel assembly, air box Mesh, air intake	AP11	1 1	
608163 607729	Bracket, wiper motor	AP12	1	
611312	Bracket, tie	AL14	1	
703686	Bracket, steering column and demister support—R.H.S.	AP13	1	
703685	Bracket, steering column and demister support—L.H.S.		1	
902329	Tonneau side assembly—Saloon—R.H.		1	
902328	Tonneau side assembly—Saloon—L.H.		1	
903353	Tonneau side assembly—Convertible—R.H.		1	
903352	Tonneau side assembly—Convertible—L.H.		1	


Part No.	Description	Plate No.	No. per Unit	Remarks
	BODY SIDE PANELS—continued			
	Tonneau side assembly—continued			
703808	Panel assembly, 'B' post, outer—R.H.	AP14	1	
703807	Panel assembly, 'B' post, outer-L.H.	AP15	1	
607743	Plate, tapped	AP16	2	
607742	Retainer, tapped plate—R.H.	AP17	1	
6077 4 1	Retainer, tapped plate—L.H.	AP18	1	
603559	Clip, wiring—R.H.		2	
603559	Clip, wiring—L.H.		6	
902319	Panel, tonneau side, upper—Saloon—R.H.	AP19	1	
902318	Panel, tonneau side, upper—Saloon—L.H.	AP20	1	
706659	Panel, tonneau side, upper—Convertible—R.H.		1	
706658	Panel, tonneau side, upper—Convertible—L.H.		1	
902271	Panel, tonneau side, lower—R.H.	AP21	1	
902270	Panel, tonneau side, lower-L.H.	AP22	1	
607505	Closing panel, tonneau end-Upper	AP23	1	
804613	Closing panel, tonneau end-Lower	AP24	1	
802815	Panel, side, trunk aperture—R.H.	AP25	1	
802814	Panel, side, trunk aperture—L.H.	AP26	1	
703810	Panel, filler, upper tonneau to rear deck—R.H.	AP27	1	
703809	Panel, filler, upper tonneau to rear deck-L.H.	AP28	1	
902274	Panel, rear valance side—R.H.	AP29	1	
902273	Panel, rear valance side—L.H.	AP30	1	
UL2704	Screw, acme		14	
WP0167	Washer, plain > Valance panel to tonneau side panel		14	
FA3057/4	Nut, fix		14	
608050	Bracket, fixing, lower, petrol tank		1	
608193	Bracket, support, trunk stay and petrol tank		1	
	SILL DETAILS			
803071	Sill assembly—R.H.		1	
803070	Sill assembly—L.H.	AP31	1	
607696	Bracket, sill attachment to chassis—R.H.		4	
607696	Bracket, sill attachment to chassis—L.H.		4	
WN0705	Screw, s/tapping		2	
YH6505	Washer, shakeproof Sill to tonneau side, lower panel		4	
WM0055	Washer, plain		4	
YF7505	Screw, s/tapping		16	
WP0031	Washer, plain Sill to chassis		16	
FC2805	Nut, fix		16	
YF7504	Screw, s/tapping		36	
WP0005	Washer, plain Sill to floor		36	
FU2589/4	Nut, fix		36	

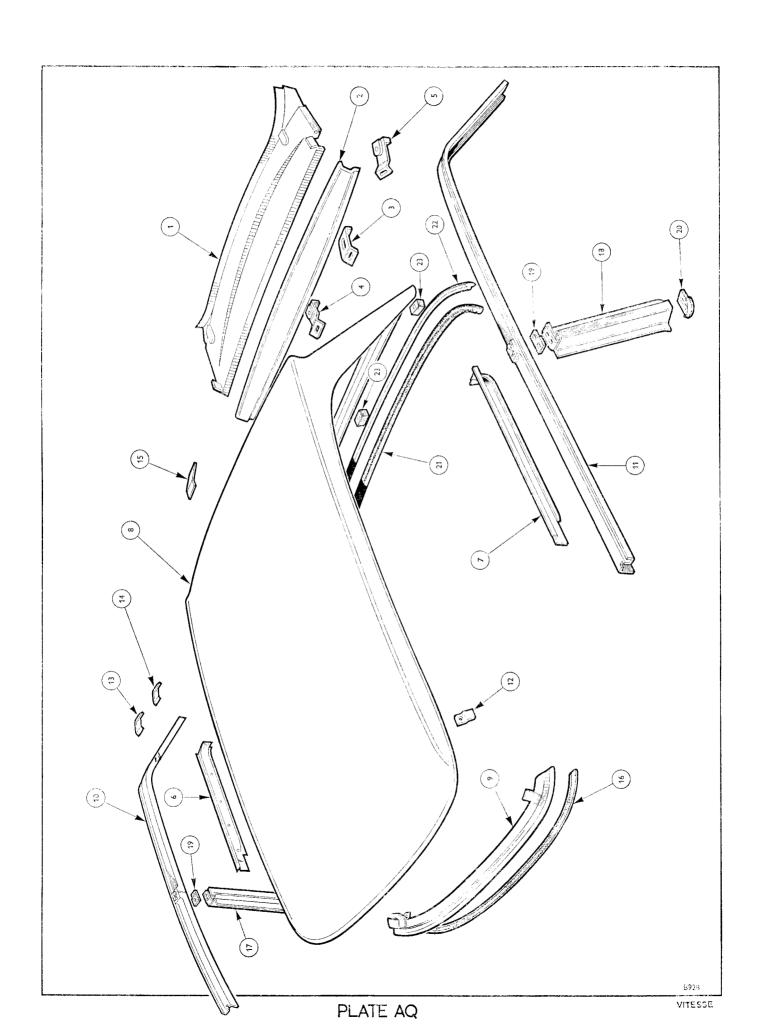

Part No.	Description ————————————————————————————————————	Plate No.	No. per Unit	Remarks
805799	REAR DECK ASSEMBLY—SALOON	AQ1	1	
803790	REAR DECK ASSEMBLY—CONVERTIBLE		1	
705786	Reinforcement, front edge, rear deck	AQ2	1)
608214	Reinforcement, centre roof fixing, rear deck	AQ3	1	
608242	Reinforcement, side roof fixing—R.H.	AQ4	1	Saloon
608241	Reinforcement, side roof fixing—L.H.	AQ5	1	only
603559	Clip, cable harness		6	,
611646	Plate, stiffening		2	
704427	Reinforcement, channel assembly, centre rear deck		1	Υ
704428	Reinforcement, channel side, rear deck—R.H.		1	Convertible only
704429	Reinforcement, channel side, rear deck—L.H.		1	
805765	Waist rail, side—R.H.	AQ6	1	J
805764	Waist rail, side—L.H.	AQ7	1	
705785	Reinforcement, waist to wheelarch—R.H.	701	1	
705784	Reinforcement, waist to wheelarch—L.H.		1	
902714	Rail, tonneau support, assembly		1	Convertible only
,,,,,	,		•	30.1,0.3.0.0 0,
902289	ROOF PANEL ASSEMBLY	AQ8	1)
706424	Panel, header, assembly	AQ9	1	
901494	Cantrail assembly—R.H.	AQ10	1	
901493	Cantrail assembly—L.H.	AQ11	1	
608322	Panel, closing, cantrail to roof—R.H.		1	
612277	Panel, closing, cantrail to roof—L.H.		1	
607733	Bracket, listing rail mounting	AQ12	6	
609206	Bracket, listing rail mounting		2	
608428	Tie plate, upper—R.H.	AQ13	1	
608427	Tie plate, upper-L.H.		1	1
608213	Tie plate, lower	AQ14	2	İ
803404	Reinforcement assembly, lower rear		1	
609158	Plate, support		2	
608485	Support stay, listing rail, No. 1		2	
609249	Reinforcement, back light aperture to roof	AQ15	1	
703696	Weatherstrip, header rail	AQ16	1	
704479	PILLAR, QUARTER LIGHT AND REINFORCEMENT BRACKETS	AQ17	1	Saloon only
	ASSEMBLY—R.H.			
704478	PILLAR, QUARTER LIGHT AND REINFORCEMENT BRACKETS ASSEMBLY—L.H.	AQ18	1	
608524	Rubber, sealing, quarter light pillar to cantrail	AQ19	2	
609693	Rubber, sealing, quarter light pillar to tonneau side	AQ20	2	1
PX0505P	Screw, set \ Quarter light pillar to cantrail		4	
HU0706P	Screw, set and tonneau side		2	
WL0207	Washer, lock		2	
611750	Seal, roof to rear deck	AQ21	1	
705803	Finisher, seal, roof to deck	AQ22	i	Fitted up to Body No. only
613957	Finisher, seal, roof to deck	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	1	Fitted from Body No. and future
608461	Piece, distance, roof to deck	AQ23	3	1
559925	Seal, header rail	-	1	

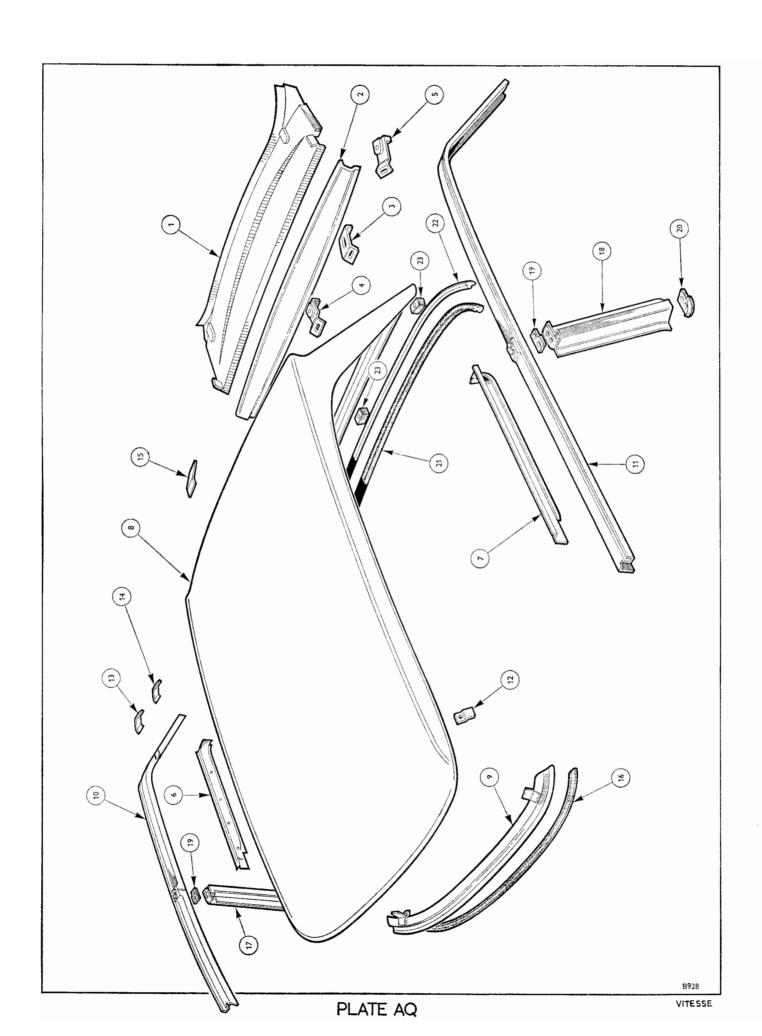

Part No.		Description	Plate No.	No. per Unit	Remarks
-IU0706P	ROOF ATTACH	IMENT DETAILS		2)
507821	Screw, set	1		1	
500309	Washer, plain	Roof to		2	1
₩F0540	Washer, fibre	header panel		2	
₩N0707	Washer, shakeproof			1	1
WQ0307	Washer, lock			2	
609363	Stud)			3	> Saloon only
₩P0042	Washer, plain R	oof		3	
508271	Washer, plate a	ttachment		3	
HN2007	Nut			3	
609426	Seal, reinforcement,	rear lower roof-R.H.		1	
609425	Seal, reinforcement,	rear lower roof—L.H.		1	
557922	Rivet, Imex			4	

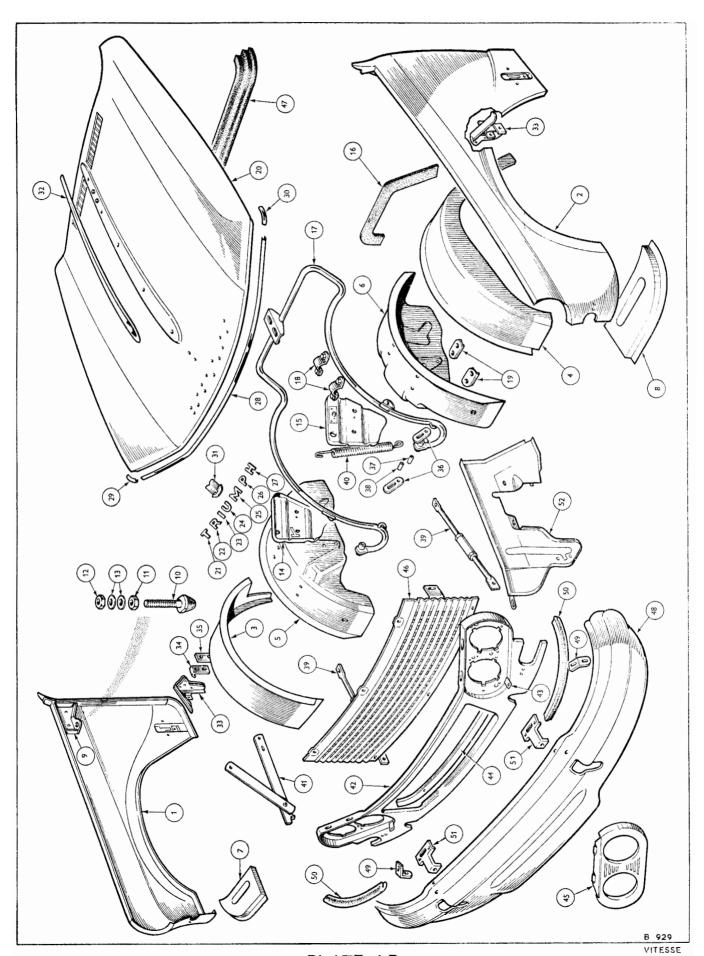

Part No.	Description	Plate No.	No. per Unit	Remarks
	BONNET DETAILS			
03108	Side assembly, front wing—R.H.	AR1	1	
03107	Side assembly, front wing—L.H.	AR2	1	
01398	Wheelarch, outer—R.H.	AR3	1	
01397	Wheelarch, outer—L.H.	AR4	1	
03076	Wheelarch, innerR.H.	AR5	1	
03075	Wheelarch, inner—L.H.	AR6	1	
03628	Panel, filler, bottom, front wheelarch—R.H.	AR7	1	
03627	Panel, filler, bottom, front wheelarch-L.H.	AR8	1	
11190	Bracket, bonnet, side—R.H.		1	Fitted up to Commission
11189	Bracket, bonnet, side-L.H.		1	No. only
06568	Bracket, bonnet locator pin mounting—R.H.	AR9	1	ì
06567	Bracket, bonnet locator pin mounting-L.H.		1	Fitted from Commission
12962	Pin, bonnet locator	AR10	2	No.
11363	Nut, jam	AR11	2	up to HBC2256 & HBD5939
11364	Nut \rightarrow Locator pin to bonnet bracket	AR12	2	only
11365	Washer, plain	AR13	4	J
07290	Plate, guide, bonnet locator—R.H.		1	Fitted from Commission No HBC2256 & HBD5939
07289	Plate, guide, bonnet locator—L.H.		1	and future
06552	Stiffener assembly, front panel to wheelarch—R.H.	AR14	1	
06551	Stiffener assembly, front panel to wheelarch—L.H.	AR15	1	
03559	Clip, harness cable		1	
08643	Packing (bonnet), rubber		2	
04033	Seal, rear, front wheelarch to dash	AR16	2	
08520	Clip, seal attachment		20	
02967	Hinge, tube assembly, bonnet	AR17	1	
VL0207	Washer, lock		2	
VP0042	Washer, plain		2	
VP0007	Washer, plain Bonnet hinge top tube		2	
VM0067	Washer, medium bracket to bonnet panel		2	
IN2007	Nut		2	
IU0706	Screw, set	4040	2	
07869	Bracket, anchor, assembly, bonnet hinge tube	AR18	4	
07711	Plate, backing, bonnet hinge tube	AR19	4	
1U0706	Setscrew		8	
VP0007	Washer, plain Anchor brackets to wheelarch		8	
VL0207	Washer, lock		8	
IU0706	Setscrew Machan lack Anchor brockets front to whoolarsh		2	
VL0207	Washer, lock Anchor brackets, front, to wheelarch		2 2	
VP0120	Washer, plain Crille aporture stiffener		4	
1U050 4 VP0005	Setscrew Grille aperture stiffener to anchor bracket		8	
VP0003 IN2905	Washer, plain to anchor bracket Nut, nyloc on hinge tube		4	
02947	Top assembly, bonnet	AR20	1	
D22869	Rubber buffer, bonnet top assembly	ANZU	2	
03559	Clip, harness cable		4	
03862	T'	AR21	1	
03863	'R'	AR22	1	
03864	\(\frac{\chi}{\text{P}}\)	AR23	1	
03865	Letter , 'U'	AR24	1	
03866	'M'	AR25	1	
03000		AR26		
03867	, ъ,	AKIN		


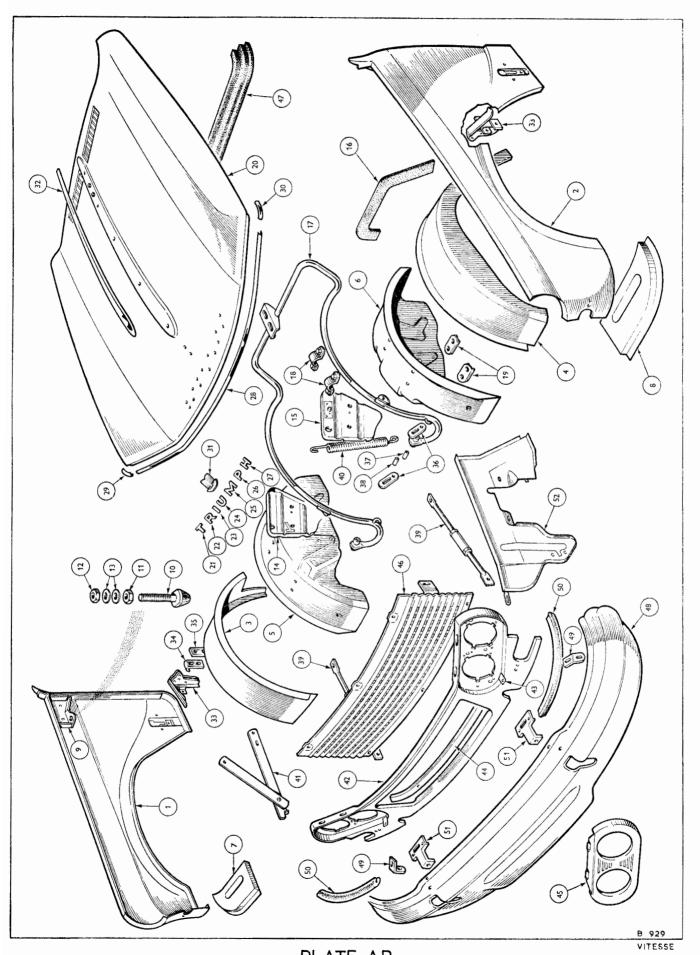



PLATE AR

Part No.	Description	Plate No.	No. per Unit	Remarks
	BONNET DETAILS—continued			
FP1012/9	Plate, fix, letters to bonnet		14	Fitted up to Commission No. HBC1881 & HBD5240
14006	Friction bush, securing letters		14	Fitted from Commission No. HBC1882 & HBD5241 and future
06149	Moulding, bonnet top	AR28	1	luture
12470	Clip, moulding attachment	A1120	9	
06162	Moulding, front bonnet corner—R.H.	AR29	1	
06161	Moulding, front bonnet corner—L.H.	AR30	1	
Z3162	Screw, corner moulding attachment	ANSO	2	
08380	Badge assembly, bonnet	AR31	1	
P1012/9	Plate, fix, badge, attachment	VIOL	2	
306402	Moulding, bonnet top	AR32	1	
511504	Clip \ Moulding to	ANJZ	5	
557922	Rivet, pop bonnet top		5	
507663	BONNET CATCH ASSEMBLY	AR33	2	
10293	Screw, set	VI(33	6	
MM0054	Washer, plain		6	
VQ0304	Washer, lock Bonnet catch attachment		6	
VN0704	Washer, shakeproof		6	
HN2054	Nut, fix		-	
076 64	Plate, catch, bonnet lock	AR34	6	
		AKJ4	2 4	
1U0706	Screw, set Washer shakenrasi			
MN0707	Washer, shakeproof Catch plate	ADOF	4	
509931 A/D0427	Plate, tapping to dash side	AR35	2	
WP0127	Washer, plain	A D 2 4	4	
21254	Link, bonnet attachment	AR36	4	
507910	Spacer, bonnet fulcrum pin	AR37	2	
121255	Spacer, bonnet attachment	AR38	2	
HB0916	Bolt		2	
WP0009	Washer, plain \ Link to overider bracket		6	
FN3209	Nut, nyloc		2	
HB0918	Bolt		2	
WP0009	Washer, plain Bonnet hinge tube to		6	
№P0048	Washer, plain bonnet support linkage		4	
ΓN3209	Nut, nyloc		2	
31234	Rod, stay, assembly, bonnet	AR39	2	
31233	Nut, jam, L.H. thread—Stay assembly		2	
N2110	Nut, jam, R.H. thread—Stay assembly		2	
1U0908	Setscrew		2	
MM0059	Washer, plain > Stay rod to suspension bracket		2	
/N2909	Nut, nyloc	4 5 15	2	
08500	Spring, bonnet counterbalance	AR40	2	
209403	Stay, bonnet assembly—R.H.	AR41	1	
209404	Stay, bonnet assembly—L.H.		1	
HU0707	Bolt		2	
YN2907	Nut, lock Bonnet stay		2	
M0057	Washer, plain to wheelarch		2	
WP0122	Washer, plain		2	
1U0707	Bolt		2	
MM0057	Washer, plain > Bonnet stay to front suspension bracket		6	
N2907	Nut, lock		2	

Part No.	Description	Plate No.	No. per Unit	Remarks
	BONNET DETAILS—continued			
611915	Buffer, rubber, bonnet		2)
SP132/D	Washer, cup Buffer attachment		4	Heavy Duty
500298	Screw, S/T to bonnet		4	(Tiest, Das)
,00270			•	J
903106	FRONT PANEL ASSEMBLY	AR42	1	
512048	Bracket, fixing headlamp cover	AR43	2	
603559	Clip, wiring		4	
306549	Channel, stiffener, assembly	AR44	1	
306293	Panel, cover, headlamp housing	AR45	2	
S2444/4	Nut, spire		2	
S2464/4	Nut, spire Cover panel to front panel		2	
11468	Screw Cover panel to front panel		4) Alexandrium
11786	Screw		4	Alternatives
	FRONTAL CRULE			
306354	FRONTAL GRILLE	AR46	1	
S2758/4	Nut, retainer		5	
√P0142	Washer, plain Grille complete assembly to valance panel		8	
PT0453/P	Screw, set		8	
509272	Rubber, sealing, bonnet	AR47	1	
306600	FRONT VALANCE ASSEMBLY	AR48	1	
607629	Bracket, fixing, end, front valance	AR49	2	
HU0705		ANTI	2	
	į		2	
№P0057	Washer, plain > end fixing bracket Washer, lock to reinforcement			
NL0207	, , , ,		2	
HU0706	Setscrew		2	
WM0057	Washer, plain Securing front valance		2	
WL0207	Washer, lock end fixing bracket to chassis frame		2	
HN2007	Nut		2	
509379	Seal, front valance to wheelarch	AR50	2	
312081	Bracket support assembly, front overrider mounting	AR51	2	
	bracket to valance			
PX0705P	Setscrew		4	
VL0207	Washer, lock Support bracket to valance		4	
№P0007	Washer, plain		4	
HU0705P	Setscrew Support bracket to		2	
№ Р0007	Washer, plain > overrider mounting		2	
∕VL0207	Washer, lock bracket		2	
/H8704	Screw		2	
03628	Washer, plain > Support bracket to chassis frame		2	
505259	Washer, lock		2	
306607	VALANCE PANEL ASSEMBLY-R.H.		1	Fitted up to Commission No. only
308954	VALANCE PANEL ASSEMBLY—R.H.		1	Fitted from Commission No. and future
306606	VALANCE PANEL ASSEMBLY—L.H.	AR52	1	
09098	Seal, valance panel to dash		2	
/N2909	Nut, nyloc		2	
MP0130	Washer, plain > Valance panel to front suspension mounting		2	
HU0907	Screw, set		2	
	Washer, plain Valance		4	
№P0007	removed a biguital and a contraction of the contrac		•	
	Screw set Danel to frame		4	
WP0007 YT3706 WM0067	Screw, set		4 2	

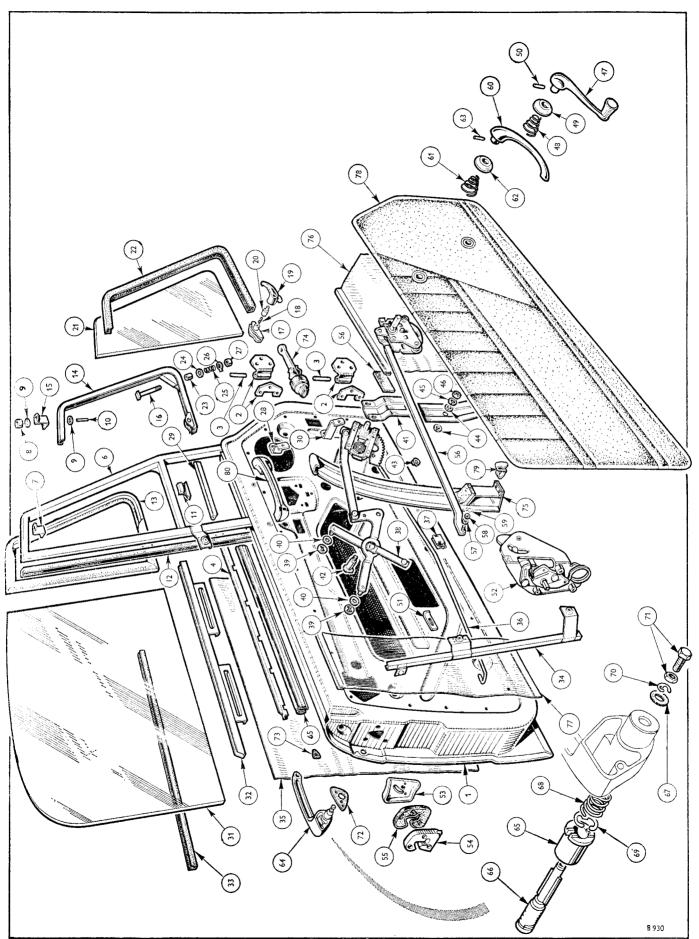

Part No.	Description	Plate No.	No. per Unit	Remarks
902257	DOOR ASSEMBLY—R.H.		1	
902256	DOOR ASSEMBLY—L.H.	AS1	1	
901339	Panel, outer, door-R.H.		1	
901338	Panel, outer, door-L.H.		1	
607631	Bracket, assembly, check strap		2	
603344	Spring, guide, check arm		2	
556141	Rivet, spring guide attachment		4	
607824	Hinge, door, assembly	AS2	4	
507823	Pin, door hinge	AS3	4	
KX4806P	Setscrew		4	
HU0807P	Screw, set > Hinge to door		8	
WL0208	Washer, lock		8	
HU0807P	Setscrew 1		12	
WL0208	Washer lock Hinge		12	
610042	Washer to 'A' post		6	
608279	Strip, sealing, waist door, outer—R.H.		1	
608278	Strip, sealing, waist door, outer—L.H.	AS4	1	
608288	Strip, sealing, waist door, inner	AS5	2	
609742	Clip, outer strip attachment		16	
608604	Clip, inner strip attachment		16	
803329	DOOR VENTILATOR ASSEMBLY—R.H.		1	
803328	DOOR VENTILATOR ASSEMBLY-L.H.		1	
803665	Outer frame assembly—R.H.		1	
803664	Outer frame assembly—L.H.	AS6	1	
608533	Bracket, top pivot, outer—R.H.	,,,,,	1	
608532	Bracket, top pivot, outer—L.H.	AS7	1	
55 7 221	Rivet, semi-tubular, casket head	737	4	
507262	Washer, thick	AS8	2	
507261	Washer, thin Assembly of top pivot	AS9	2	
557222	Rivet, semi-tubular	AS10	2	
608574	Plate, catch—R.H.	7,510	1	
608573	Plate, catch—L.H.	AS11	1	
554134	Rivet, semi-tubular, oval head	, 1011	4	
559474	Channel, silent, glass run	AS12	2	
609143	Cover, no draught vent, top corner		2	
5505 17	Rivet, semi-tubular, front rail attachment		4	
803559	Weatherstrip—R.H.		1	
803558	Weatherstrip—L.H.	AS13	1	
508312	Inner frame, glazed, assembly—R.H.		1	
508311	Inner frame, glazed, assembly—L.H.	AS14	1	
608537	Bracket, top pivot, inner—R.H.		1	
608536	Bracket, top pivot, inner—L.H.	AS15	1	
55 4 134	Rivet, semi-tubular, oval head	. 10.0	4	
J5 11 J-1	Shaft assembly, bottom pivot	AS16	2	
508642				
608642 554127	Rivet, semi-tubular, oval head	7310	- 4	

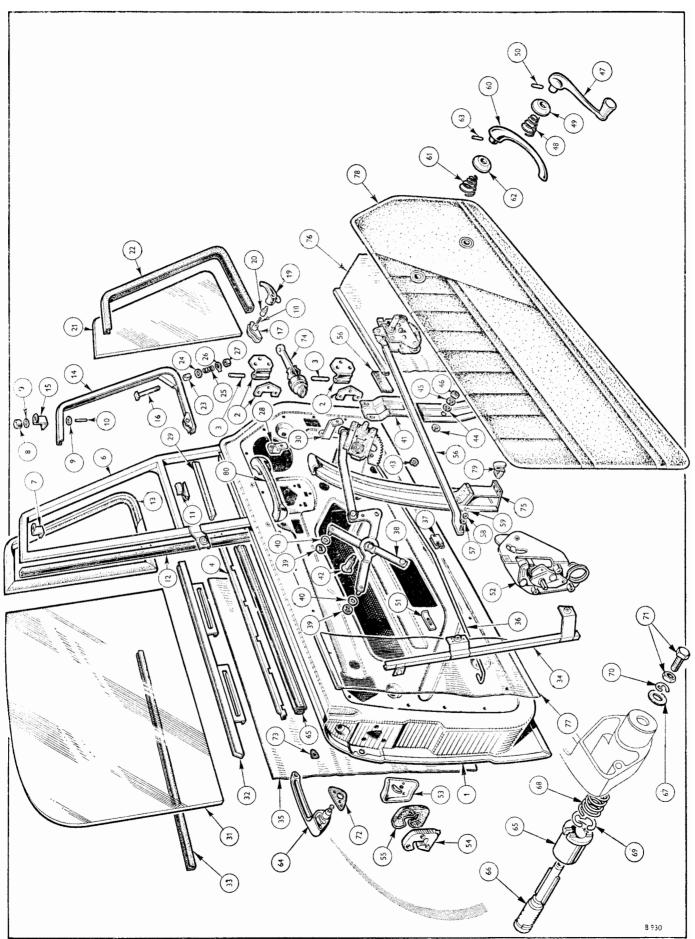


Part No.	Description	Plate No.	No. per Unit	Remarks
	DOOR VENTILATOR ASSEMBLY—cont.			
608637	Bracket assembly, handle—L.H.	AS17	1	
559530	Washer, waved	7.07.	2	
08542	Spring	AS18	2	
08545	Handle, locking—R.H.	7.070	1	
08544	Handle, locking—L.H.	AS19	1	
08540	Button, push	AS20	2	
54124	Pin, mills, grooved		2	
04324	Glass, vent	AS21	2	
54128	Strip, glazing	AS22	2	
59 5 47	Rivet, semi-tubular, oval head		4	
08539	Piece, spacing	AS23	2	
03661	Washer, plain	AS24	2	
01750	Spring Bottom pivot shaft	AS25	2	
08534	Washer, tab	AS26	2	
59531	Nut	AS27	2	
08281	Bracket, vent support assembly—R.H.	, ,,,_,	- 1	
08280	Bracket, vent support assembly—L.H.	AS28	1	
13343	Finisher, waist, forward, inner	AS29	2	
59513	Screw, corner block to front waist rail		4	
08538	Block, tapping		2	
59546	Rivet, tapping block to front rail		2	
08285	Bracket, vent support assembly—R.H.		- 1	
08284	Bracket, vent support assembly—L.H.	AS30	1	
HU0705P	Screw Brackets to inside		4	
MN0707	Washer, lock door panel		4	
X0705P	Setscrew		6	
MM0057	Washer, plain Vent		4	
VL0207	Washer, lock fixings		10	
1U0705P	Setscrew		4	
	DOOR GLASS AND REGULATOR			
	CHANNEL DETAILS		_	
03956	Glass, droplight—Saloon	AS31	2	
03795	Glass, droplight—Convertible		2	
03972	Channel assembly, window regulator—R.H.		1	
03971	Channel assembly, window regulator-L.H.	AS32	1	
59356	Strip, glazing channel	AS33	1	
045 64	Channel, glass, assembly—R.H.		1	
04563	Channel, glass, assembly—L.H.	AS34	1	
1U0705P	Screw Channel assembly		6	
MN0707	Washer, lock ∫ attachments		6	
00421	Plug		2	
05982	Curtain, weather, door glass	AS35	2	
11776	Curtain, weather, centre		2	
04643	Rod, tie, glass channel, bottom	AS36	2	
08520	Clip, tie rod attachment	AS37	2	

Part No.	Description	Plate No.	No. per Unit	Remarks
803077	WINDOW REGULATOR ASSEMBLY—R.H.		1	
803076	WINDOW REGULATOR ASSEMBLY—L.H.	AS38	1	
607867	Stud, retainer Glass retainer	AS39	4	
607902	Washer, leather to regulator	AS40	8	
705881	Reinforcement, regular pivot	AS41	2	Fitted up to Body Nos. HBD3986
	(See Door assembly for later condition)			& HBC1323 only
HU0504	Screw, set		8	
WP0138	Washer, plain Reinforcement		16	Note: From Commission Nos.
WL0208	Washer, lock to door		8	HBD3987 & HBC1324
HN2005	Nut, fix		8	reinforcement is welded.
607841	Pivot, regulator mounting	AS42	2	
608301	Washer, special	AS43	2	
WP0119	Washer, plain Regulator pivot	AS44	6	
WL0208	Washer, lock to door	AS45	2	
JN2108	Nut	AS46	2	
PX0704	Setscrew Regulator		8	
WL0207	Washer, lock of to door		8	
613017	WINDOW REGULATOR HANDLE	A\$47	2	
603382	Spring, regulator escutcheon	AS48	2	
650261	Escutcheon, handle	AS49	2	
600832	Pin, handle fixing	AS50	2	
609649	Washer, sealing, rubber		2	
610174	WINDOW REGULATOR STOP BRACKET	A\$51	2	
HU0705	Screw		2	
WP0120	Washer		2	
WP0167	Washer, plain > Stop bracket to door		4	
WL0207	Washer, lock		2	
HN2007	Nut		2	
706119	CAM LOCK ASSEMBLY—R.H.		1	
706118	CAM LOCK ASSEMBLY-L.H.	AS52	1	
611901	Plate, dovetail, cam lock-R.H.		1	
611900	Plate, dovetail, cam lock—L.H.	AS53	1	
LX6504	Setscrew		6	
PX0504	Bolt Securing lock and		2	
WP0142	Washer, plain / dovetail plate		2	
WL0205	Washer, lock		2	
607862	Striker assembly, cam lock—R.H.		1	
607861	Striker assembly, cam lock—L.H.	AS54	1	
610137	Rubber, sealing, striker, cam lock	AS55	2	
TK4707P	Setscrew, striker to 'B' post		6	
703741	DOOR RESTRAINT DEVICE ASSEMBLY		2	
KX4705	Screw, device attachment		8	Convertible
607759	Reinforcement assembly, door restraint device—R.H.		1	only
607758	Reinforcement assembly, door restraint device—L.H.		1	1


Part No.	Description	Plate No.	No. per Unit	Remarks
06279	REMOTE CONTROL MECHANISM ASSEMBLY, CAM LOCK-R.H.		1	
06278	REMOTE CONTROL MECHANISM ASSEMBLY, CAM LOCK—L.H.	AS56	1	Alternative to 614147 & 614146
514147	REMOTE CONTROL MECHANISM ASSEMBLY, CAM LOCK—R.H.		1	
14146	REMOTE CONTROL MECHANISM ASSEMBLY, CAM LOCK—L.H.		1	Alternative to 706278 & 706279
50924	Washer, waved	AS57	2	
VP0161	Washer, plain Remote control link to lock	AS58	4	
08703	Clip	AS59	2	
10226	Pad, anti-rattle, rear remote control linkage	A337		
	,		2	
10225 (L5506	Pad, anti-rattle, front remote control linkage Screw, fitted in remote control (Driver's side only)		2 1	Fitted up to Commission No.
YA0403	Screw, fitted in remote control (Driver's side only)		1	only Fitted from Commission No. and future
508454	HANDLE, REMOTE CONTROL	AS60	2	
03382	Spring, remote control escutcheon	AS61	2	
50261	Escutcheon, inside handle	AS62	2	
00832	Pin, handle fixing	AS63	2	
		A363		
YF7503	Screw Remote control		6	
FU2549/4 706117	Nut, fix ∫ to door DOOR HANDLE ASSEMBLY, OUTSIDE		6 1	
	LOCKING—R.H.—R.H.S. (Complete with push button and locking barrel)		·	
706221	DOOR HANDLE ASSEMBLY, OUTSIDE NON-LOCKING—L.H.—R.H.S. (Complete with push button)		1	
706222	DOOR HANDLE ASSEMBLY, OUTSIDE NON-LOCKING—R.H.—L.H.S. (Complete with push button)		1	
706116	DOOR HANDLE ASSEMBLY, OUTSIDE LOCKING—L.H.—L.H.S. (Complete with push button and locking barrel)	AS64	1	
567017	Button, push, locking handle only	AS65	1	
67018	Button, push, non-locking handle only		1	
67019	Barrel, locking (plunger), locking handle only	AS66	i	
567022	Washer, rubber	AS67	2	
67023	Spring, button return	AS68	2	
567023 569011				
	'E' Clip, locking handle only	AS69	1	
567021	Washer, metal, non-locking handle only	4.074	1	
567024	'E' Clip, securing push button in handle	AS70	2	
569010	Bolt and nut assembly, lock adjusting	AS71	2	
608451	Washer, seating, large	AS72	2	
608452	Washer, seating, small	AS73	2	
PX0504	Setscrew Door handle		2	
HU0504	Setscrew f to door		2	
	Washer, lock		4	
WL0205	waster, lock			

Part No.	Description	Plate No.	No. per Unit	Remarks
610170	CHECK LINK ASSEMBLY, DOOR	AS74	2	
610707	Rivet	7071	2	
602821	Seal Check link		2	
YZ3344	Screw attachment		4	
WM0055	Washer, plain		4	
705045	STIFFENER ASSEMBLY, ANTI-DRUM (SALOON)	AS75	2	
705046	STIFFENER ASSEMBLY, ANTI-DRUM (CONVERTIBLE)		2	
508276	Felt		2	
557799	Rivet \ Felt to		2	
FU2549/4	Nut, fix bracket		4	
552547	Clip, stiffener assembly to door		4	
	SEALING DETAILS			
706896	Seal, door, inner—Saloon		2	3
610652	Seal, door, inner—Convertible		2	Alternatives
707339	Seal, door, inner—Convertible		2)
611774	WEATHER CURTAIN DOOR-R.H.		1	
611773	WEATHER CURTAIN DOOR—L.H.	AS 76	1	
705732	WEATHER CURTAIN LOCK	AS77	2	
608522	Clip, weather curtains to door		2	
606389	Clip, securing weather curtain		6	
706179	Phantom Grey—R.H.	4.670	1	
706178 706177	Phantom GreyL.H.	AS 78	1	
706177 706176	Matador Red—R.H. Matador Red—L.H.	A C70	1	
706181	Black P H	AS78	1	
706180	DOOR TRIM PAD Black—I.H.	AS 78	1	
706183	Midnight Blue—R.H.	A376	1	
706182	Midnight Blue—L.H.	AS78	1	
706185	Cactus—R.H.	7370	1	
706184	Cactus—L.H.	AS78	1	
608511	Clip, trim pad to door	AS79	44	•
608586	Washer, screw cup	,,	4	
608577	Cap, screw cup washer—Phantom Grey		4	
608576	Cap, screw cup washer—Matador Red Door pocket		4	
608581	Cap, screw cup washer—Black reinforcement		4	
608582	Cap, screw cup washer—Midnight Blue		4	
608583	Cap, screw cup washer—Cactus		4	
608940	Piece, packing		4	
509281	Washer, plain > Door pocket fixing		4	
YZ3327	Screw		4	
09256	PULL HANDLE	AS80	2	
007230			_	

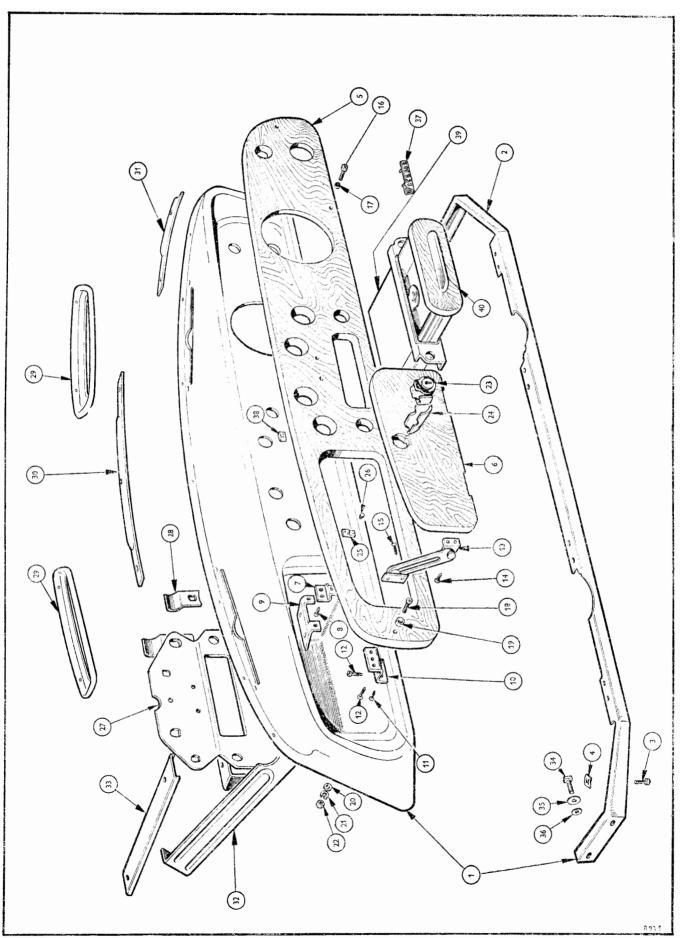


Part No.	Description	Plate No.	No. per Unit	Remarks
706148	FACIA PANEL TRIMMED AND CHANNEL SUPPORT ASSEMBLY—R.H.S.		1	Fitted up to Body No.
706147	FACIA PANEL TRIMMED AND CHANNEL SUPPORT ASSEMBLY—L.H.S.		1	only
706963	FACIA PANEL TRIMMED AND CHANNEL SUPPORT ASSEMBLY—R.H.S.	AT1	1	Fitted from Body No.
706962	FACIA PANEL TRIMMED AND CHANNEL SUPPORT ASSEMBLY—L.H.S.		1	up to Body No. HB1500 only
708102	FACIA PANEL TRIMMED AND CHANNEL SUPPORT ASSEMBLY—R.H.S.		1	Fitted from Body No. HB15001
708101	FACIA PANEL TRIMMED AND CHANNEL SUPPORT ASSEMBLY—L.H.S.		1	and future
703735	Support, channel, assembly	AT2	1	J
RB6406	Rivet		1	
F7404	Screw Channel support to facia	AT3	5	
N2044	Nut, fix	AT4	5	
J2444/9	Nut, fix, securing cubby box hinges		4	
02663	R.H.S. Normal Fitment		1)
02938	R.H.S. Temperature Gauge condition		1	Fitted up to
68489	L.H.S. Normal Fitment		1	> Body No.
66694	Panel, L.H.S. Temperature Gauge condition	AT5	1	only
	veneered, (U.S.A. and Canada)		•	J 5,
03365	assembly, R.H.S. Normal Fitment		1	4
03370	facia R.H.S. Temperature Gauge condition		1	Fitted from
68637	L.H.S. Normal Fitment		1	
568639	L.H.S. Temperature Gauge condition		1	> Body No. up to Body No. HB15000 only
,00037	(U.S A. and Canada)		,	Body 140. 11813000 only
03899	Panel, veneered assembly, facia—L.H.S.		1	4
03900	Panel, veneered assembly, facia—R.H.S.		1	Fitted from Body
69994	Panel, veneered assembly, facia—L.H.S.		1	≻ No. HB15001
	(U.S.A. and Canada)		•	and future
05451	Lid, cubby box—R.H.S.	AT6	1	J
05151	Lid, cubby box—L.H.S.	710	1	
511748	Bracket, striker, cubby box lid	AT7	1	
7F7404	Screw	A17	2	
N2044/9	Nut, fix > Striker bracket attachment		2	
A0142	Screw, wood	AT8	2	
11749	Bracket, tie	AT9	1	
A0142	Screw, wood, tie bracket attachment	,,,,	2	
511565	Hinge assembly, cubby box lid	AT10	2	
ΓW0402	Screw, wood \ Hinge	AT11	4	
ΓW0404	Screw, wood to facia	AT12	4	
Γ VV 0404 Γ V V0404	Screw, wood) to tacta Screw, wood, hinge to lid	AT12	6	
509745	Link, check, assembly	AT13	1	
TW0603	Screw, wood Check link	AT14	2	
TW0604	Screw, wood ∫ attachment	AT15	2	

Part No.	Description	Plate No.	No. per Unit	Remarks
	FACIA PANEL ASSEMBLY—continued			
509531	Screw	AT16	3	
CD24152	Washer, cup	AT17	3	
510485	Screw	AT18	2	
510 44 5	Screw Veneered facia	71110	1	
CD24152	Washer, cup panel attachment	AT19	3	
VP0003	Washer, plain	AT20	3	
VL0203	Washer, lock	AT21	3	
HN2053	Nut	AT22	3	
11584	Lock assembly, cubby box	AT23	1	
09463	Finger Pull, cubby box lock	AT24	1	
12988	Bracket, buffer, cubby box	AT25	2	
13863	Buffer, rubber	AT26	2	
W0402	Screw, wood, bracket attachment		4	
04289	Plate, reinforcement, assembly, centre facia—R.H.S.	AT27	1	Fitted up to Body
704288	Plate, reinforcement, assembly, centre facia—L.H.S.		1	No. only
513158	Bracket, wiper switch—L.H.S. only		1	Fitted from Body No.
313159	Bracket, ignition switch—R.H.S. only	AT28	1	f up to Body No. HB15000 only
03764	Cover, demister outlet	AT29	2	
09070	Clip, cover to facia panel		4	
12074	Finisher, facia—Centre	AT30	1	
06151	Finisher, facia—Outer, R.H.	AT31	1	
06150	Finisher, facia—Outer, L.H.		1	
U2544/9	Clip, spire		7	
510913	Screw > Facia and finisher attachment		3	
09161	Screw		4	_
607927	Bracket, stay, assembly, facia bottom rail—R.H.S.	AT32	1	Fitted up to Body
607928	Bracket, stay, assembly, facia bottom rail—L.H.S.		1	∫ No. only
607870	Bracket, stay, facia bottom rail—R.H.S.		1	Fitted from Body No.
607871	Bracket, stay, facia bottom rail—L.H.S.		1	∫ up to Body No. HB15000 only
7F7504	Screw Stay bracket		2	
C2805/9	Nut, fix ∫ to body		2	5
510553	Bracket, stay, facia to dash	AT33	1	Fitted up to
7F7504	Screw Stay to		1	Body No.
U2549/4	Nut, fix \int dash panel	4.72.4	1	J only
1U0706/P	Screw, set	AT34	4	
₩P0007	Washer, plain Channel support assembly to body	AT35	4	
WL0207	Washer, lock	AT36	4	2. No. 2. 1. 1.
12185	Plate, name, "Vitesse"	AT37	1	Not required
·P1002	Fix, push on, nameplate to facia	AT38	2	∫ for U.S.A.
12310	FACIA ASH TRAY ASSEMBLY		1)
11371	Handle, ash tray		1	1
L5308	Screw, handle attachment		2	Fitted up to
1U0504	Screw. set		2	Body No.
1N2005	Nut Ash tray		2	only
WM0055	Washer, plain (to facia		2	/
WL0205	Washer, lock		2	J
706908	FACIA ASH TRAY ASSEMBLY	AT39	1) Fitted from
11371	Handle, ash tray	AT40	1	> Body No.
M0308		A170	2	and future
1110300	Screw, handle attachment		4	J and lucure

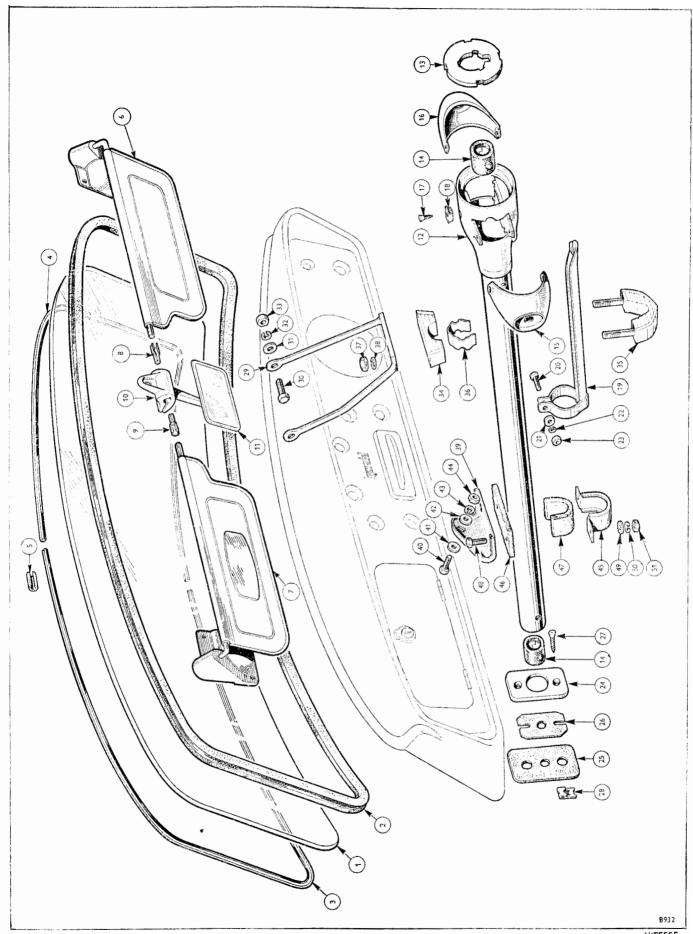


Part No.	Description	Plate No.	No. per Unit	Remarks
901433	WINDSCREEN GLASS (LAMINATED)	AU1	1)
901432	WINDSCREEN GLASS (TOUGHENED)	AU1	1	
903945	WINDSCREEN GLASS (ZONE TOUGHENED)—L.H.S.		1	Alternative fitment
903946	WINDSCREEN GLASS (ZONE TOUGHENED)—R.H.S.		1	
805856	Weatherstrip, windscreen	AU2	1	
805858	Finisher, windscreen—L.H.	AU3	1	↑ Fitted up to Body
805859	Finisher, windscreen—R.H.	AU4	1	No. only
613956	Finisher, windscreen	.,	1	Fitted from Body No.
013730	Tillianer, Williasereen		•	and future
611437	Cover, joint, finisher	AU5	2	Fitted up to Body No. only
611437	Cover, joint, finisher	,,,,,	1	Fitted from Body No. and future
806545	SUN VISOR ASSEMBLY-R.H.S. SALOON ONLY-R.H.	AU6	1	
806533	SUN VISOR ASSEMBLY-R.H.S. SALOON ONLY-L.H.	AU7	1	
806537	SUN VISOR ASSEMBLY—L.H.S. SALOON ONLY—R.H.		1	
806541	SUN VISOR ASSEMBLY—L.H.S. SALOON ONLY—L.H.		1	
704976	SUN VISOR ASSEMBLY—R.H.S. CONVERTIBLE—R.H.		1	
704975	SUN VISOR ASSEMBLY—R.H.S. CONVERTIBLE—L.H.		1	
704978	SUN VISOR ASSEMBLY—L.H.S. CONVERTIBLE—R.H.		1	
704977	SUN VISOR ASSEMBLY—L.H.S. CONVERTIBLE—L.H.		1	
51 0995	Screw, sun visor to header panel (Saloon only)		4	
509611	Screw, sun visor to header panel (Convertible only)		2	
612130	Retainer, sun visor-R.H.	AU8	1	
612129	Retainer, sun visor-L.H.	AU9	1	
612162	Mirror and bracket assembly	AU10	1	
609672	Rim, safety	AU11	1	
FU2544	Nut, spire Mirror and visor		2	
502476	Screw, self-tapping bracket attachment		2	

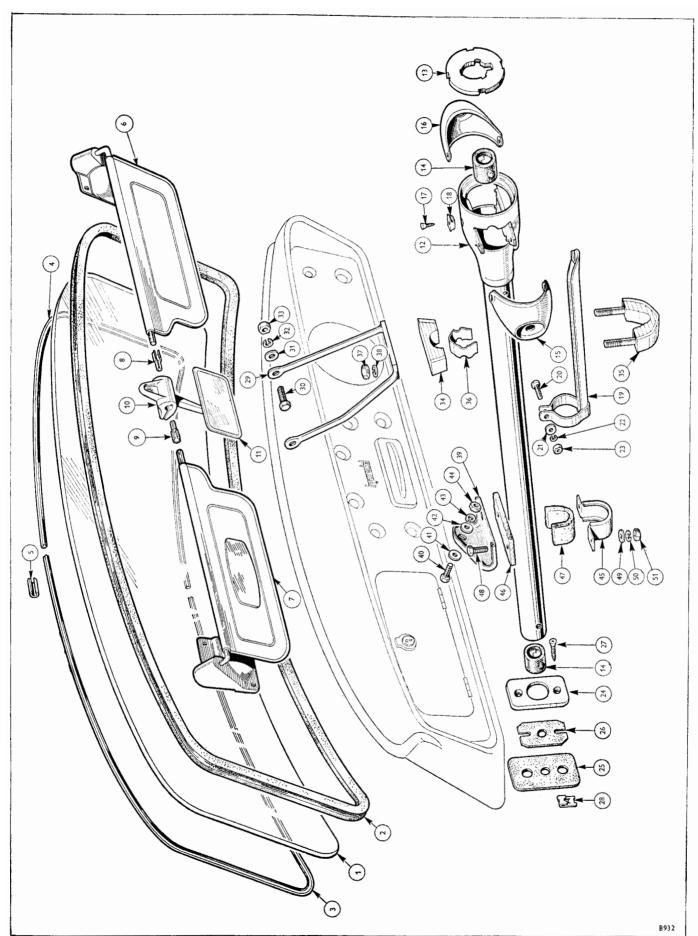


Part No.	Description	Plate No.	No. per Unit	Remarks
14122	STEERING COLUMN COWL ASSEMBLY —R.H.S.		1	Special Order only
11952	STEERING COLUMN COWL ASSEMBLY —L.H.S.		1	Germany and Special Order only
11364	STEERING COLUMN COWL ASSEMBLY	AU12	1	
08136	Channel, mounting column switches		2	
08462	Slip, ring and insulator assembly	AU13	1	
8139	Insulator, slip ring		1	
6630	Bearing assembly, steering column	AU14	2	
1365	Escutcheon, dipswitch	AU15	1	Fitted up to Body
1366	Escutcheon, trafficator	AU16	1	No. only
8479	Escutcheon, flasher and lighting switch, black		2	Fitted from Body No. and future
0273	Screw } Escutcheons to	AU17	2	
2803/9	Nut, fix steering column cowl	AU18	2	
1369	Cover, harness assembly, steering column	AU19	1	
20504	Screw, set	AU20	1	
/P0138	Washer, plain Harness cover to steering	AU21	1	
/L0205	Washer, lock column cowl assembly	AU22	1	
N2005	Nut	AU23	1	
1597	Plate, retaining, steering column	AU24	1	
1598	Pad, sealing (rubber)	AU25	1	
8770	Seal, secondary (rubber), steering column	AU26	1	
F7464	Screw Sealing pad	AU27	2	
2444/9	Nut, spire ∫ attachment	AU28	2	
03748	SUPPORT, STEERING COLUMN (UPPER)—R.H.S.	AU29	1	Fitted up to
	` ,			≻ Body No. HB15000
03747	SUPPORT, STEERING COLUMN (UPPER)—L.H.S.		1	only
08098	SUPPORT, STEERING COLUMN—R.H.S.		1	Fitted from Body
08097	SUPPORT, STEERING COLUMN—L.H.S.		1	No. HB15001 and future
16054	Bracket, facia support—upper		1	
U0706	Setscrew	AU30	2	J
/P0007	Washer, plain Support	AU31	2	
/L0207	Washer, lock to body	AU32	2	
N2007	Nut	AU33	2	
11368	Clamp, steering column, upper half	AU34	1	
11367	Clamp, steering column, lower half	AU35	1	
9636	Spring, steering column clamp	AU36	1	
N2007	Nut	AU37	2	
VL0207	Washer, spring clamp attachment	AU38	2	


Part No.	Description	Plate No.	No. per Unit	Remarks
609641	SUPPORT BRACKET, STEERING COLUMN BODY (LOWER)	AU39	1	
HU0704	Setscrew	AU40	1	
WP0007	Washer, plain	AU41	1	
WP0120	Washer, plain > Support bracket to body	AU42	1	
WL0207	Washer, lock	AU43	1	
HN2007	Nut	AU44	1	
608185	Clamp, support bracket, steering column (lower)	AU45	1	
608222	Strip, felt, support bracket	AU46	1	
608223	Strip, felt, support bracket	AU47	1	
HB0704	Bolt	AU48	2	
WP0042	Washer, plain Support bracket	AU49	2	
WL0207	Washer, lock clamp attachment	AU50	2	
HN2007	Nut	AU51	2	

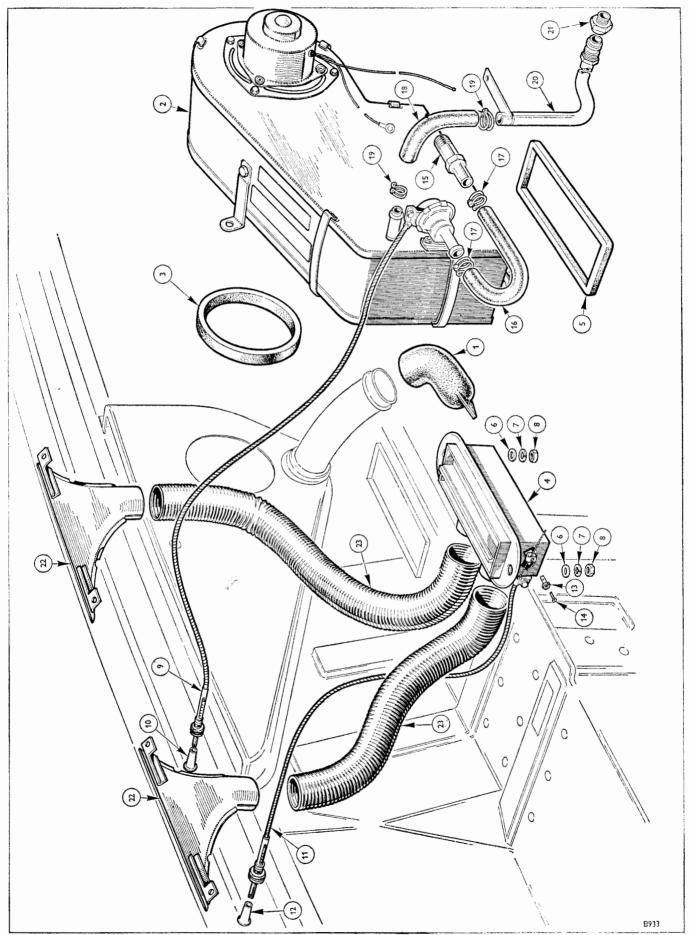

Part No.	Description	Plate No.	No. per Unit	Remarks
	HEATER DETAILS (SMITHS)			
	Panel assembly, air box			
	(For details see Dash and Windscreen Assembly)			
609156 616206	Valve elbow, air box drain tube Drainflap, air box	AV1	1 1	Fitted up to Body No. only Fitted from Body No.
00/350	Alleston combin	A)/2	4	and future
806359	† Heater assembly	AV2	1	Fitted up to Body No. HBC5641
510395	Motor unit, heater		1 1	and HBD15761 only Fitted from Body No. HBC5642
809043 514426	†Heater assembly Motor unit, heater		1	and HBD15762 and future
511774	Valve, water		1	and HBD13762 and future
612238	Seal, blower	AV3	1	
706122	Duct assembly, outlet	AV4	1	Alternative to 707350
707350	Duct assembly, outlet	AVI	1	Alternative to 70/330 Alternative to 70/330 Fitted up to Body No. HB15000 only
708507	Duct assembly, outlet		1	Fitted from Body No. HB15001 and future
608149	Gasket, outlet duct	AV5	1	
WP0007	Washer, plain	AV6	2	
WL0207	Washer, lock > Heater box to dash shelf	AV7	2	
HN2007	Nut, hexagon	AV8	2	
HU0505	Screw, set		1	
WP0005	Washer, plain Heater box to air box		1	
WL0205	Washer, lock		1	
612263	Push/Pull control assembly, water valve $(1\frac{1}{2}''$ travel)	AV9	1	Fitted up to Body No.
614579	Push/Pull control assembly, water valve—L.H.S./R.H.S.		1	only Fitted from Body No. up to Body No. HB15000 only
614579	Push/Pull control assembly, water valve—L.H.S.		1	Fitted from Body No. HB15001
616059	Push/Pull control assembly, water valve—R.H.S.		1	and future
704884	Knob, 'Heat'	AV10	1	
609996	Push/Pull control assembly, outlet duct (.88" travel)	AV11	1	Alternative to 614575
614575	Push/Pull control assembly, outlet duct		1	Alternative to 609996
704881	Knob, 'Air Distribution'	AV12	1	
614556	Washer, leather, switch bezel		2	Fitted up to Body No. HB15000 only
616050	Washer, P.V.C.		3	Fitted from Body No. HB15001 and future
609123	Trunnion	AV13	2	
559980	Screw, securing cable to trunnion	AV14	2	
608372	Clamp, cable		1	
131273	Switch, toggle, heater blower		1	Fitted up to Body No. HB15000 only
139536	Switch, toggle		1	Fitted from Body No. HB15001 and future
609795	Bezel		1	
128089	Washer		1	
127751	Adaptor, cylinder head	AV15	1	
612160	Hose, heater connection, inlet	AV16	1	Fitted up to Body No. HB15000 only
141999	Hose, heater connection, inlet		1	Fitted from Body No. HB15001 and future
CS4011	Clip, supergrip, inlet hose attachment	AV17	2	

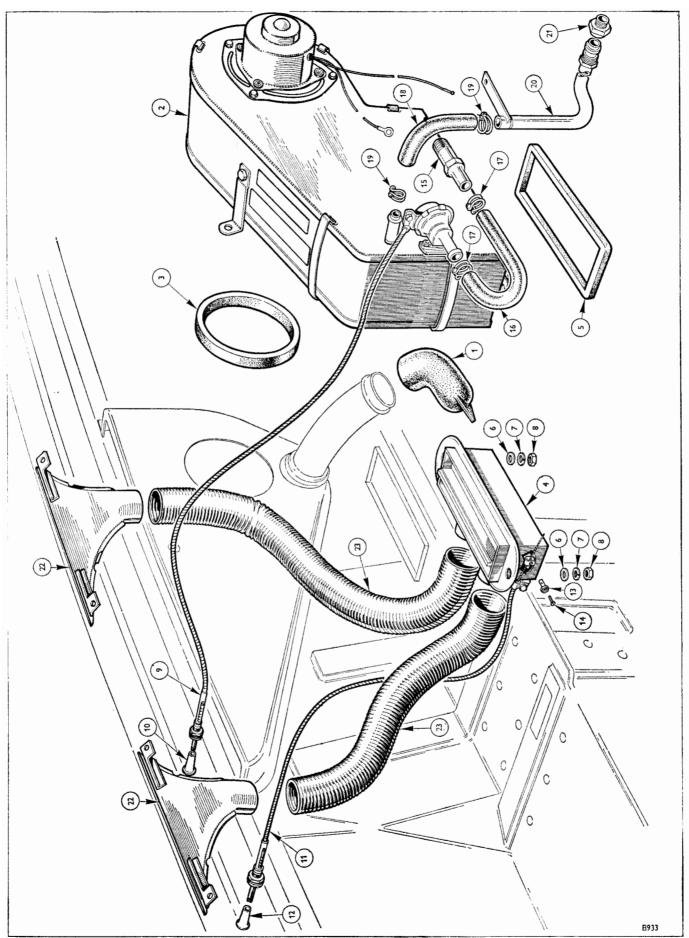

Part No.	Description	Plate No.	No. per Unit	Remarks
612159	Hose, heater connection, outlet	AV18	1	Fitted up to Body No. HB15000 only
141998	Hose, heater connection, outlet		1	Fitted from Body No. HB15001 and future
CS4011	Clip, supergrip, outlet hose attachment	AV19	2	
305588	Pipe, water return, assembly, heater	AV20	1	
101343	Adaptor, water pump body	AV21	1	
	The Fresh Air Kit listed below is fitted as an alternative to Heater			
567272	FRESH AIR INTAKE KIT WITH BLOWER UNIT		1	Fitted up to Body No. HBC564' and HBD15761 only
514560	FRESH AIR INTAKE KIT WITH BLOWER UNIT		1	Fitted from Body No. HBC5642 and HBD15762 and future
306846	Unit, fresh air		1	Fitted up to Body No. HBC564
809309	Unit, fresh air		1	and HBD15761 only Fitted from Body No. HBC5642
707350	Duct assembly, outlet		1	and HBD15762 and future
608149	Gasket, duct, outlet		1	
612238	Seal, blower		1	
609996	Push/Pull control assembly, air duct		1	
704880	Knob		1	
613314	Bezel		1	
614556	Washer, leather		i	
131273	Switch, toggle		1	
563857	Lead, switch to blower, 55" long		1	
602621	Hose, demister		2	
608372	Cable, clamp		1	
609123	Trunnion		2	
559980	Screw		1	
559178	Screw, hex. hd.		1	
559182	Washer, lock		3	
559183	Washer, shakeproof		1	
WP0007	Washer, plain Heater box		2	
WL0207	Washer, lock to		2	
HN2007	Nut, hex. dash shelf		2	
WL0205	Washer, lock Heater box		1	
HU0505	Screw, set > to		1	
VVP0005 114774	Washer, plain ∫ air box Plug, cylinder head		1 1	
	•			
609725	DEMISTER NOZZLE ASSEMBLY	AV22	2	
602621	Hose, demister	AV23	2	
508250 EL13584	Screw, self-tapping Demister nozzles Nut, fix to body		4 4	
FU2584 608164	COVER PLATE, HEATER OUTLET,		1	
000107	DASH SHELF		'	
YF7404	Screw Cover plate		2	
FN2044/9	Nut, fix attachment		2	
609438	Button \ Facia		3	Fitted up to Body
609439	Button plate) blanking		3	No. only
613075	Screw, set, special		3	Fitted from
613176	Nut Facia blanking		3	Body No.
WN0712	Washer, shakeproof		3	and future
	Note:-Only required when no heater or fresh air kit			-
	is fitted			

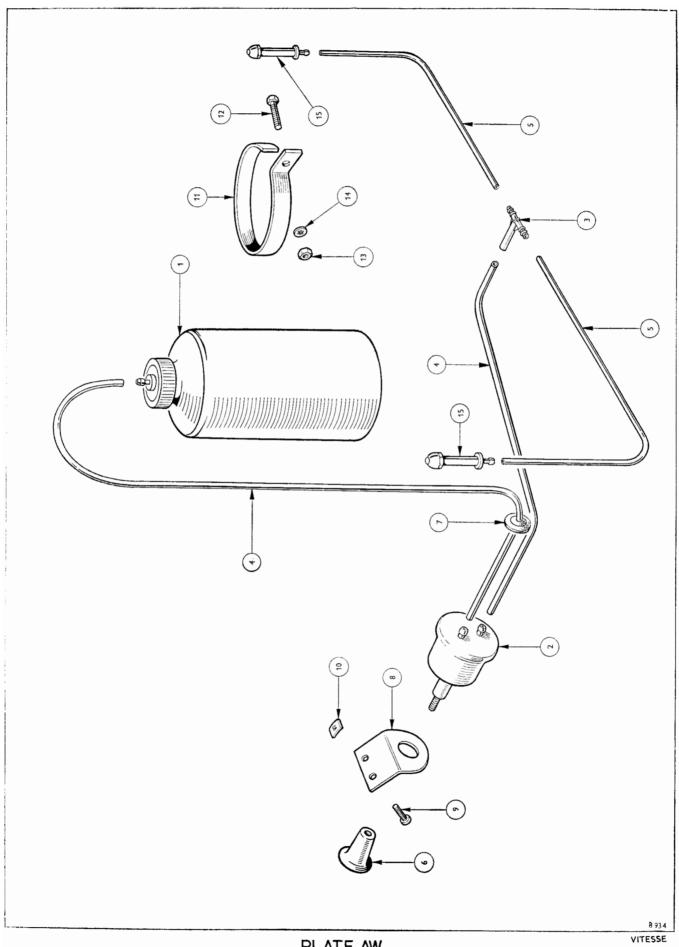

Part No.	Description	Plate No.	No. per Unit	Remarks
	WINDSCREEN WASHER DETAILS			
608319	Container, water	AW1	1	
609173	Plunger, Tudor	AW2	1	Alternative to 608316
608316	Plunger, John Sydney		1	Alternative to 609173
612601	'T' Piece	AW3	1	
604146	Tubing, delivery (sold in feet)	AW4	A/R	
604148	Tubing, suction (sold in feet)	AW5	A/R	
609946	Knob, body, washer	AW6	1	
61917	Grommet, washer tube	AW7	1	
609157	Bracket, screen washer plunger mounting	AW8	1	Fitted up to
YF7504	Screw \ Washer plunger	AW9	2	≻ Body No. HB15000
FN2045/9	Nut bracket to facia	AW10	2	only
609919	Bezel		1	Fitted from Body
609526	Spacer, screen washer		1	≻ No. HB15001
616048	Washer, P.V.C., screen washer control		1	and future
607730	Clip, screen washer container	AW11	1	
HU0704	Screw, set	AW12	1	
HN2007	Nut Clip attachment	AW13	1	
WN0707	Washer, shakeproof	AW14	1	
609175	Jet, mounting, assembly, Tudor	AW15	2	Alternative to 608554
608554	Jet, mounting, assembly, John Sydney		2	Alternative to 609175
562617	Nipple, detachable, jet mounting		2	

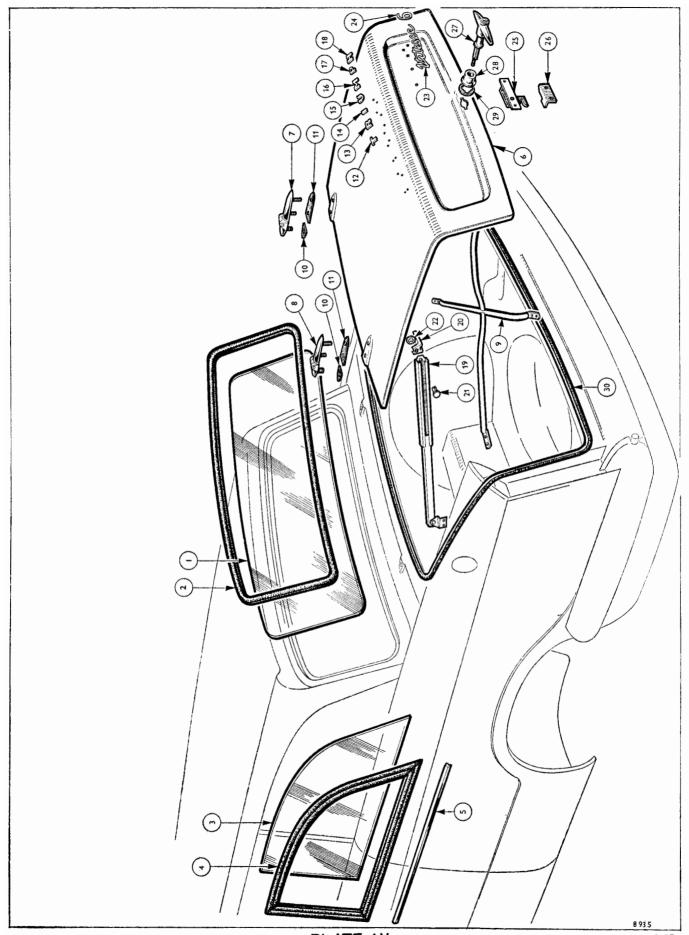


PLATE AX

VITESSE

Part No.	Description	Plate No.	No. per Unit	Remarks
803355	BACKLIGHT GLASS (Toughened)	AX1	1	
803357	Weatherstrip, backlight	AX2	1	
803358	QUARTER LIGHT GLASS	AX3	2	
805763	Moulding, rubber—R.H.		1	
805762	Moulding, rubber—L.H.	AX4	1	
611439	Finisher, weatherstrip, quarter light	AX5	2	Fitted up to Body No.
61 44 06	Finisher, weatherstrip, quarter light		2	Fitted from Body No. and future
805815	TRUNK LID ASSEMBLY	AX6	1	
604917	Hinge assembly—R.H.	AX7	1	
604918	Hinge assembly—L.H.	AX8	1	
562714	Tube assembly, trunk lid panel	AX9	1	
608643	Packing, rubber, trunk lid tubes		4	
603213	Washer, fibre, hinge to deck	AX10	2	
603212	Washer, fibre, trunk lid hinge (male)	AX11	2	
HN2007	Nut		2	
WM0067	Washer, plain > Hinges to lid and tubes, rear fixing		2	
WP0007	Washer, plain		2	
HN2007	Nut \(\) Hinges to lid		2	
WL0207	Washer, lock ∫ front fixing		2	
YN2908	Nut \ Hinges		2	
WM0058	Washer ∫ to rear deck		4	
703862	Ţ	AX12	1	
703863	R	AX13	1	
703864	I	AX14	1	
703865	Letter ∪	AX15	1	
703866	M	AX16	1	
703867	P	AX17	1	
703868	Ĺн	AX18	1	
FP1012/9	Plate, fix, letter to trunk lid		14	

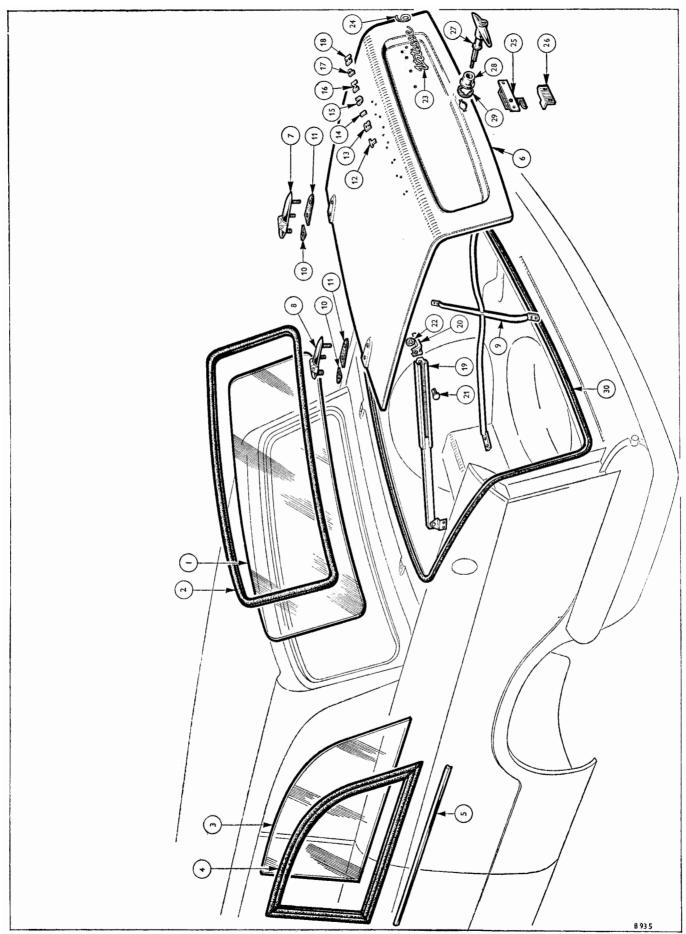


PLATE AX

VITESSE

Part No.	Description	Plate No.	No. per Unit	Remarks
	TRUNK LID DETAILS			
508192	Stay assembly, trunk lid	AX19	1	
03877	Bracket, stay mounting	AX20	i	
(X4504	Screw, self-tapping	70,20	4	
WP0156	Washer, plain Tubes and stay bracket		4	
₩L0205	Washer, lock to trunk lid panel		4	
HN2005	Nut		4	
508237	Pin, pivot	AX21	1	
557923	Clip > Trunk stay to bracket	AX22	1	
550026	Washer, waved		1	
608633	Channel, top tank mounting bracket		1	
UL2704	Screw \ Top mounting channel		1	
FA3057	Nut, fix to tank		1	
YF7504	Screw, self-tapping) Stay and channel		2	
FJ2465	Nut, spire fix to body		2	
612190	Name plate, "Vitesse"	AX23	1	Not required for U.S.A.
613292	Name plate, "Sports"		1	U.S.A. only
611899	Badge ('6')	AX24	1	·
FP1012/9	Fix, push on name plate and badge attachment		5	
511226	Lock, budget, trunk lid	AX25	1	
62926	Screw, T/C Budget lock to		2	
SP49CS/C	Washer, lock frunk lid		2	
611225	Plate, catch, budget lock	AX26	1	
PT0504	Setscrew		2)
WN0705	Washer, lock Catch plate to		2	Fitted up to Body
WM0055	Washer, plain rear valance		2	No. only
HN2005	Nut		2	J
513249	Screw, set		2)
505259	Washer, lock (Catch plate to rear		2	Fitted from Body
506155	Nut valance centre		2	No. and future
5139 4 8	Washer, plain ∫		4	J
607978	Handle, trunk lid, assembly	AX27	1	
557046	Barrel, locking		1	
YN2907	Nut, nyloc \ \ Handle		1	
WP0007	Washer, plain ∫ attachment		1	
600635	Escutcheon, handle	AX28	1	
600949	Washer, seating, rubber	AX29	1	
610953	Seal, trunk lid	AX30	1	
613074	Clip, trunk lid seal attachment		4	

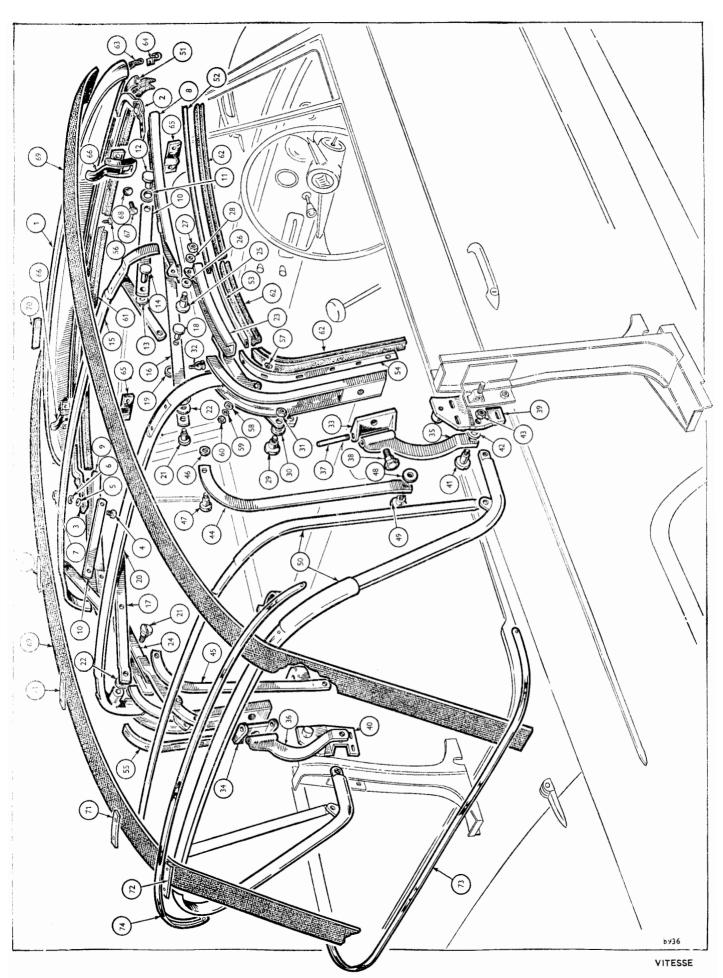



PLATE AY

Part No.	Description	Plate No.	No. per Unit	Remarks
902261	FOLDING HEAD ASSEMBLY COMPLETE (TRIMMED WHITE) CONVERTIBLE ONLY		1	
902260	FOLDING HEAD ASSEMBLY COMPLETE (TRIMMED BLACK) CONVERTIBLE ONLY		1	
563132	FRONT STICK ASSEMBLY, TRIMMED	AY1	1	
	Pivot bracket assembly—R.H. Pivot bracket assembly—L.H. Front stick to cantrail	AY2		Not Serviced
LCT 470.4		AY3)
KT4706	Screw, set	AY4	4	
WP0120	Washer, plain Pivot bracket to front	AY5 AY6	4	
WL0207 HN2007	Washer, lock cantrail	AY7	4 4	
11112007		717	•	
563044	INTERMEDIATE STICK ASSEMBLY		1	
70 44 07	Cantrail assembly, front—R.H.	AY8	1	
704406	Cantrail assembly, front—L.H.	AY9	1	
609228	Link, front cantrail	AY10	2	
509289	Washer \ Front cantrail link	AY11	2	
609615	Rivet ∫ to front cantrail	AY12	2	
500 2 25	Washer, plain \ Front cantrail link	AY13	2	
609615	Rivet \int to front intermediate stick	AY14	2	
70 44 12	Stick assembly, front intermediate	AY15	1	
609251	Link, front cantrail to intermediate stick—R.H.	AY16	1	
609250	Link, front cantrail to intermediate stick—L.H.	AY17	1	
PT0807	Screw, set		2	
WP0153	Washer, plain Intermediate stick		2	
JN2108	Nut, jam link to cantrail		2	
TN3208	Nut, nyloc		2	
509289	Washer Front intermediate	AY18	2	
609617	Rivet	AY19	2	
803782	Stick, intermediate, and 'B' post upper, assembly	AY20	1	
609242	Bolt, shouldered	AY21	2	
WP0153	Washer, plain	AY22	2	
704458 704457	Cantrail assembly, rear—R.H.	AY23	1	
70 44 57	Cantrail assembly, rear—L.H.	AY24	1	
609243 WP0131	Bolt, shouldered Washer plain Front cantrail to	AY25	2	
VVEUL31	Washer, plain Front cantrail to	AY26	2	
610649	Nut, special rear cantrail	AY27	2	


Part No.	Description	Plate No.	No. per Unit	Remarks
	INTERMEDIATE STICK ASSEMBLY—cont.			
609241	Bolt, shouldered	AY29	2	
WP0153	Washer, plain Rear cantrail to "B" post upper	AY30	2	
JN2108	Nut, jam	AY31	2	
CD25340	Buffer, rubber, rear cantrail	AY32	2	
609215	Hinge, 'B' post—R.H.	AY33	1	
609215	Hinge, 'B' post—L.H.	AY34	1	
704402	Link, hinge—R.H.	AY35	1	
70 44 01	Link, hinge—L.H.	AY36	1	
609216	Pin, hinge	AY37	2	
609243	Bolt, shouldered, hinge link to 'B' post upper	AY38	2	
704394	Bracket, pivot mounting, assembly—R.H.	AY39	1	
704393	Bracket, pivot mounting, assembly—L.H.	AY40	1	
6092 44	Bolt, shouldered	AY41	2	
WM0079	Washer, plain → Hinge link to pivot mounting bracket	AY42	2	
JN2108	Nut, jam	AY43	2	
704452	Link, control, rear cantrail to body-R.H.	AY44	1	
704451	Link, control, rear cantrail to body-L.H.	AY45	1	
WP0153	Washer, plain Control link	AY46	2	
610564	Bolt , shouldered \(\int \) to rear cantrail	AY47	2	
WP0153	Washer, plain Control link to	AY48	2	
609242	Bolt, shouldered pivot mounting bracket	AY49	2	
HU0705	Screw, set		8	
WP0042	Washer, plain Pivot mounting bracket to body		8	
WL0207	Washer, lock		8	

Part No.	Description	Plate No.	No. per Unit	Remarks
	FOLDING HEAD COMPLETE—cont.			
09292	REAR STICK AND REAR INTERMEDIATE STICK ASSEMBLY	AY50	1	
VP0131	Washer, plain		2	
√P0153	Washer, plain Rear stick assembly to body		2	
IN2008	Nut		2	
04418	Retainer, weatherstrip—Front Stick	AY51	1	
09333	Retainer, weatherstrip—Front Cantrail	AY52	2	
09334	Retainer, weatherstrip—Rear Cantrail	AY53	2	
04464	Retainer, weatherstrip-'B' Post upper, R.H.	AY54	1	
04463	Retainer, weatherstrip—'B' Post upper, L.H.	AY55	1	
Z3324	Screw, weatherstrip retainer to front stick inner panel	AY56	9	
T0453	Screw, set	AY57	12	
№P0004	Washer, plain Weatherstrip retainer	AY58	12	
NN0704	Washer, shakeproof of to 'B' post	AY59	12	
HN2054	Nut	AY60	12	
T0453	Screw, set		6	
✓P0004	Washer, plain Weatherstrip retainer		6	
MN0704	Washer, shakeproof of to rear cantrail		6	
1N2054	Nut		6	
T0453	Screw, set		12	
✓P0004	Washer, plain (Weatherstrip retainer		12	
MN0704	Washer, shakeproof to front cantrail		12	
∃N2054	Nut		12	
09366	Weatherstrip, front stick	AY61	1	
609340	Weatherstrip, hood sides	AY62	2	
09602	Finisher, roof header—Black	AY63	1	
09603	Finisher, roof headerSebring White	AY64	1	
09769	End Finisher, front stick—R.H.		1	
09770	End Finisher, front stick—L.H.		1	
09332	Head Catch assembly, screen header	AY65	2	
09331	Head Catch assembly, front stick rear panel	AY66	2	
09210	Screw, set \ \ Catch	AY67	8	
08605	Washer, special ∫ attachment	AY68	8	

Part No.	Description	Plate No.	No. per Unit	Remarks
	FOLDING HEAD COMPLETE—cont.			
563868	HOOD WEBBING	AY69	2	
602030	Plate \(\) Webbing	AY70	2	
561210	Rivet, imex		4	
609998	Plate \(\text{Webbing} \)	AY71	6	
561210	Rivet, imex		12	
609825	Plate \(\bar{\}\) Webbing	AY72	2	
561210	Rivet, imex		4	
705737	HOOD ASSEMBLY (BLACK)		1	
705738	HOOD ASSEMBLY (SEBRING WHITE)		1	
560839	Backlight		1	
560840	Light, rear quarter		2	
705666	Strip, finishing, hood cover, rear deck	AY73	1	
509688	Screw, set		12	
61062 4	Stud, durable Hood cover and		12	
WN0703	Washer, shakeproof > finishing strip to		12	
WP0003	Washer, plain rear deck flange		12	
HN2053	Nut		12	
804066	Finisher, rear hood stick	AY74	1	
509224	Screw		2	
609402	Clip, finisher > Finisher to rear hood stick		5	
561210	Rivet, imex		5	
609699	HOOD COMPARTMENT COVER ASSEMBLY (BLACK)		1	
609706	HOOD COMPARTMENT COVER ASSEMBLY (SEBRING WHITE)		1	
562133	Button Hood		28	
562134	Socket compartment cover		28	
610624	Stud Finisher to		10	
563769	Rivet, pop tonneau support rail		10	

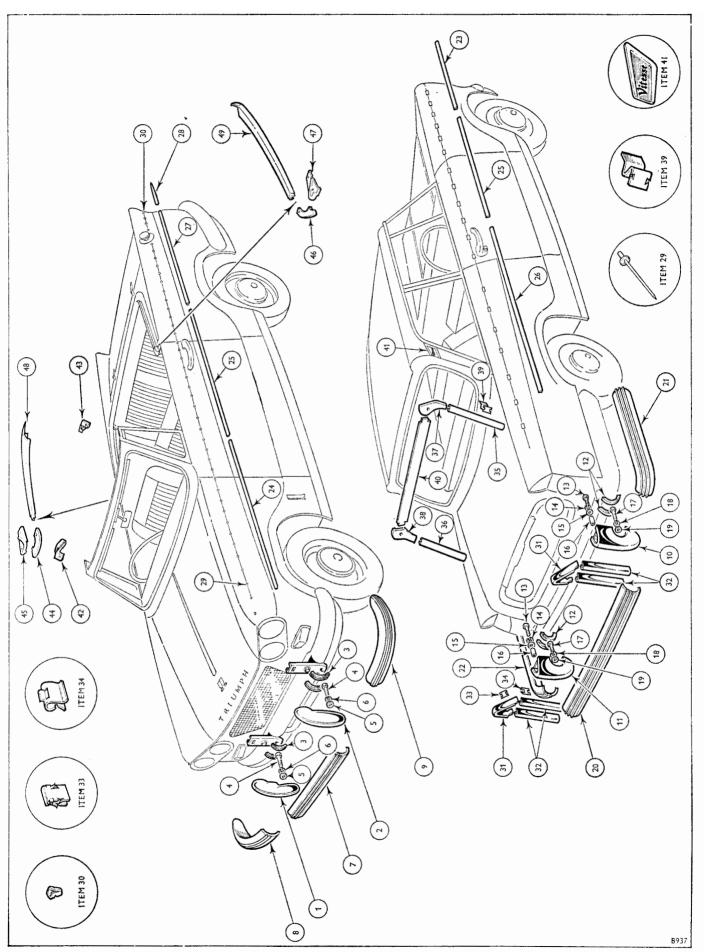

Part No.	Description	Plate No.	No. per Unit	Remarks
	OVERIDER DETAILS			
706155	FRONT OVERIDER ASSEMBLY—R.H.	AZ1	1	
70615 4	FRONT OVERIDER ASSEMBLY—L.H.	AZ2	1	
608491	Moulding, front overider—Black	AZ3	4	
HU0807/P	Setscrew	AZ4	4	
WP0008	Washer, plain > Front overiders to mounting bracket	AZ5	4	
WL0208	Washer, lock	AZ6	4	
706220	Bumper, front, centre	AZ7	1	
806528	Bumper, front, outer—R.H.	AZ8	1	
806527	Bumper, front, outer—L.H.	AZ9	1	
567894	Rivet, pop, bumper attachment		6	
703709	REAR OVERIDER ASSEMBLY—R.H.	AZ10	1	
703708	REAR OVERIDER ASSEMBLY—L.H.	AZ11	1	
608503	Moulding, rear overider—Black	AZ12	4	Alternative to 614041
614041	Moulding, rear overider—Black		4	Alternative to 608503
HB0915	Bolt	AZ13	2	, 1120 Matrix 25 000000
WL0209	Washer, lock Rear overider	AZ14	2	
WP0164	Washer, plain upper attachments	AZ15	2	
608858	Tube, spacer	AZ16	2	
HB09 44	Bolt	AZ17	2	
WL0209	Washer, lock Rear overider lower attachments	AZ18	2	
WP0009	Washer, plain	AZ19	2	
503467	Screw, self-tapping, end finishers to front valances	7417	2	
806501	Bumper, rear, centre	AZ20	1	
806503	Bumper, rear side—R.H.	AZ21	i	
	• •		*	
806502 547004	Bumper, rear side—L.H.	AZ22	1 4	
567894	Rivet, pop, bumper attachment		4	
70/4/5	BODY MOULDINGS AND FITTINGS	4 700	4	
706165	Moulding, waist, bonnet—R.H.	AZ23	1	
706164 703733	Moulding, waist, bonnet—L.H.	AZ24	1	
703733	Moulding, waist, door	AZ25	2	
806995	Moulding, waist, tonneau side—R.H.	AZ26	1	
706652	Moulding, waist, tonneau side—L.H.	AZ27	1	· ·
613141	Moulding, waist, tonneau side—L.H. rear	AZ28	1	
567228	Clip and rivet \(\) Moulding to bonnet, door	AZ29	42	
557922	Imex \int and tonneau waist		42	
559176	Clip, tubular, side mouldings to tonneau, rear end	AZ30	2	
704724	Moulding, rear lamp surround, upper	AZ31	2	
70 4 782	Moulding, rear lamp surround, lower	AZ32	4	
612628	Clip, moulding, upper, rear lamp surround to body	AZ33	8	Alternative to 609742
609742	Clip, moulding, upper, rear lamp surround to body		8	Alternative to 612628
612211	Clip, moulding, lower, rear lamp surround to body	AZ34	12	
	Note:—For details of chrome finisher, roof to rear deck, see page 78.			

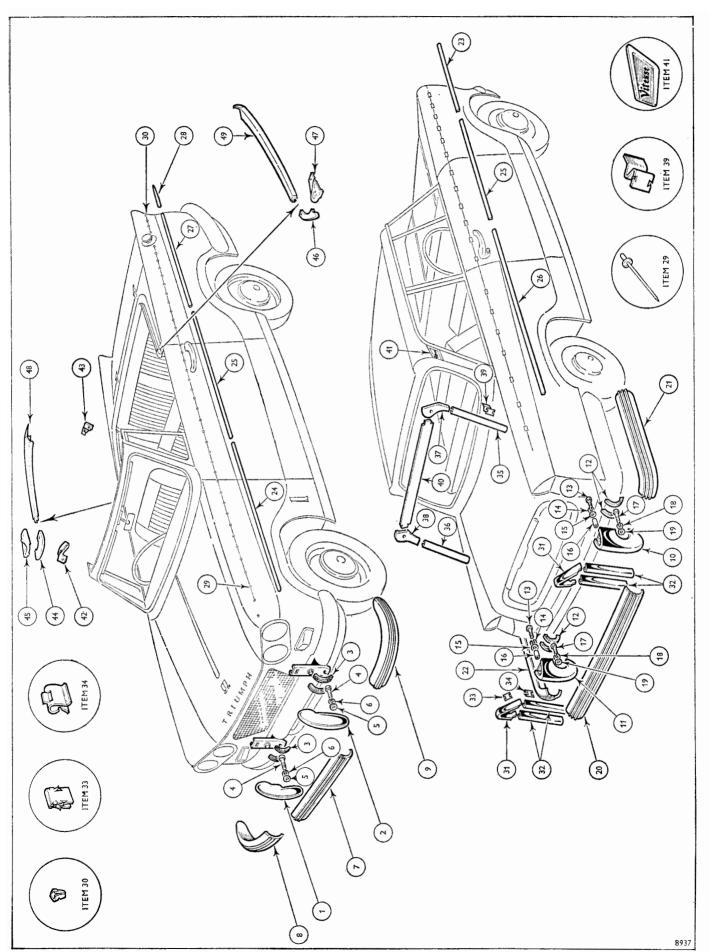

Part No.	Description	Plate No.	No. per Unit	Remarks
	ROOF MOULDINGS AND FITTINGS			
609758	Capping, rear side—R.H.	AZ35	1	
609757	Capping, rear side—L.H.	AZ36	1	
704744	Capping, rear corner, roof—R.H.	AZ37	1	
704743	Capping, rear corner, roof—L.H.	AZ38	1	
609891	Clip, capping, rear side to roof	AZ39	6	
704026	Capping, rear, upper	AZ40	1	
FC2803/4	Nut, spire Capping, rear,		5	
502658	Screw, self tapping upper, to roof		5	
612166	Cover plate, 'Vitesse' roof joint-R.H.	AZ41	1	Not required for U.S.A.
612165	Cover plate, 'Vitesse' roof joint—L.H.		1	Fitted up to Body No. HBD285
613294	Cover plate, 'Triumph' roof joint-R.H.		1 '	only. All other markets All U.S.A.
613293	Cover plate, 'Triumph' roof joint—L.H.		1	Fitted from Body No. HBD 285
FW1105	Fix, cover attachment		4	and future. All other markets
	CAPPINGS—CONVERTIBLE ONLY			
610149	Capping, door seal, 'A' post, top-R.H.	AZ42	1	
610148	Capping, door seal, 'A' post, top-L.H.	AZ43	1	
YA0303	Screw, capping attachment		2	
611238	Capping, 'B' post—R.H.—Front	AZ44	1	
611258	Capping, 'B' post—R.H.—Rear	AZ45	1	
611237	Capping, 'B' post—L.H.—Front	AZ46	1	
611257	Capping, 'B' post—L.H.—Rear	AZ47	1	
509191	Screw, cappings to 'B' post		4	
610624	Stud \ Cappings to		6	
563769	Rivet sonneau support		6	
704684	Finisher, squab rail (Pink Wistaria)—R.H.	AZ48	1	
704683	Finisher, squab rail (Pink Wistaria)-L.H.	AZ49	1	
807312	Board assembly, trunk closing		1	
609482	Bracket, trunk closing board support		1	
WM0081	Washer, plain, bracket and access hole cover to floor		2	

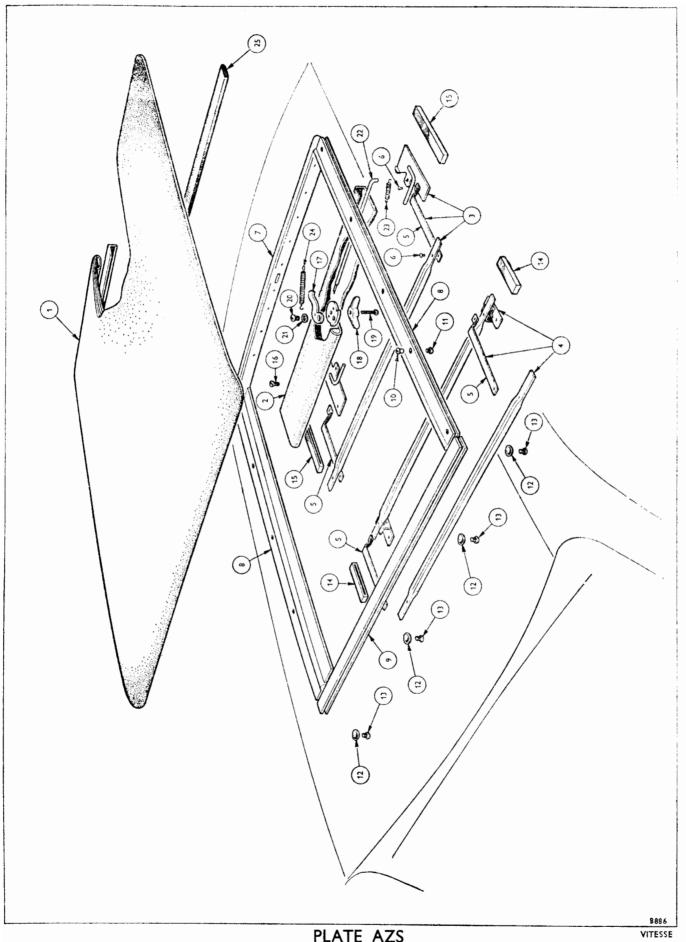


PLATE AZS

Part No.	Description	Plate No.	No. per Unit	Remarks
	SLIDING ROOF			Special Orders Only
807524	Sliding roof complete—Black		1	special Orders Only
707325	Cover assembly, sliding roof—Black	AZS1	1	
707320	Control channel, trimmed assembly	AZS2	1	
614071	Front side assembly	AZS3	1	
500225	Washer, plain (Brass), fitted on front slide	723	2	
707244	Listing rail assembly, intermediate	AZS4	1	
614017	Spring, lifting	AZS5	4	
RF2403	Rivet	AZS6	8	
707260	Front angle assembly	AZS7	1	
707216	Side rail	AZS8	2	
707264	Rear rail	AZS9	1	
564998	Rivet, pop, front rail to roof	,,_,,	2	
55 44 07	Rivet, rear and front rails to roof		14	
613969	Sleeve)	AZS10	10	
613970	Screw Side rail to roof	AZS11	10	
614022	Washer, disc, chrome plated \ Rear cover	AZS12	4	
512216	Screw, set plate to roof	AZS13	4	
617314	Washer, sealing—Rear cover plate assembly to roof		4	
614019	Slide, intermediate	AZS14	2	
61 4 029	Slide, front	AZS15	2	
512381	Screw, front cover plate assembly to control box assembly	AZS16	2	
614051	Hook, locking	AZS17	1	
613973	Handle	AZS18	1	
512466	Screw, handle to control box	AZS19	1	
5692 4 7	Screw		1	
506751	Washer, shakeproof → Hook to cam	AZS20	1	
512 4 67	Washer, plain	AZS21	1	
614013	Push rod	AZS22	1	
PC0007	Pin, cotter, securing push rod to front slide		1	
614040	Spring, front slide	AZS23	2	
614010	Tension, spring	AZS24	1	
569237	Rubber, strip, front	AZS25	1	

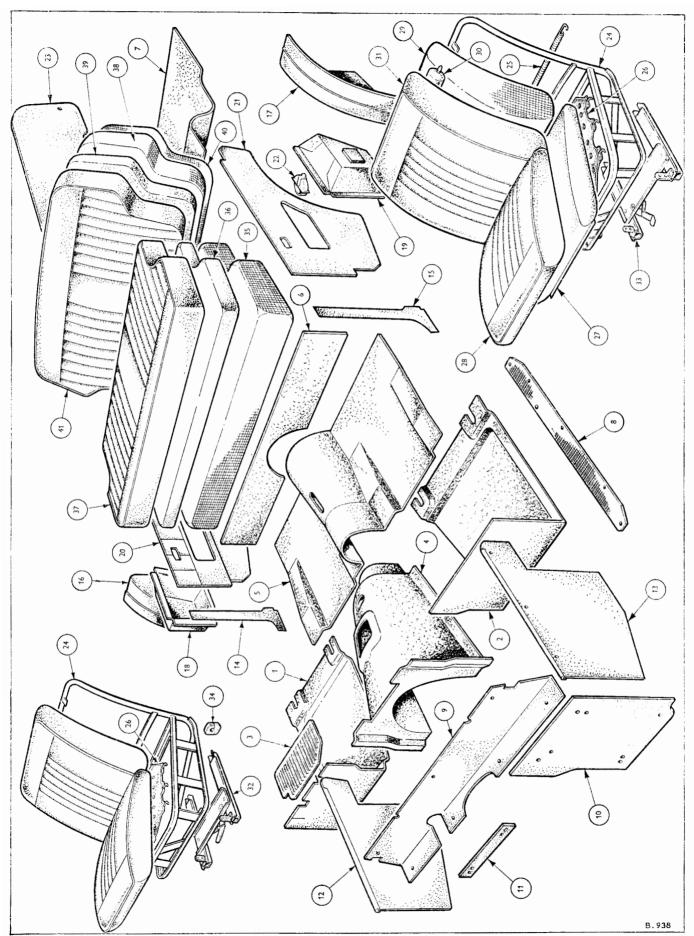


PLATE BA

Remarks

Part No.	Description	Plate No.	No. per Unit	
	Note: —Due to wide variation in colour combinations,			
	and possible deterioration in storing, trim			
	assemblies are not held in stock but are manu-			
	factured when ordered. To facilitate the matching			
	of trim assemblies, a sample of the material			
	should be sent together with the commission			
	number of the vehicle.			
705026	HEADLINING ASSEMBLY		1	
703988	Listing Rail, No. 1		1	
703989	Listing Rail, No. 2		1	
703990	Listing Rail, No. 3		1	
703991	Listing Rail, No. 4		1	
704008	Listing Rail, No. 5		1	
608307	Clip, locating listing rail		2 1	
566061 566063	Headlining, screen header, Sebring White Headlining, 'A' post, Sebring White—R.H.		1	
566062	Headlining, 'A' post, Sebring White—L.H.		1	
300002	readming, A post, seeing white Lin.			
	CARPETS AND RUBBER MATS	- 1.1		
805055	Carpet, front floor, Smoke Grey and Black mottle —R.H.—R.H.S.	BA1	1	
805047	Carpet, front floor, Smoke Grey and Black mottle	BA2	1	
	—L.H.—R.H.S.			
805071	Carpet, front floor, Smoke Grey and Black mottle		1	
805063	R.HL.H.S. Carpet, front floor, Smoke Grey and Black mottle		1	
003003	-L.HL.H.S.		·	
611022	Carpet, front floor, Smoke Grey and Black mottle		1	
	—L.H.—L.H.S. (U.S.A. only)			
612174	Mat, heel—R.H.S.	BA3	1	
608588	Mat, heel-L.H.S.		1	3
567609	Mat, rubber, front—R.H.S.		1	Export
567616 YA0366	Mat, rubber, front—L.H.S. Screw \ Carpet or		1 2	∫ only
CD24152	Washer, cup mat attachment		2	
805080	Carpet, gearbox cover, Smoke Grey and Black mottle—R.H.S.	BA4	1	
805079	Carpet, gearbox cover, Smoke Grey and Black mottle—L.H.S.	2711	1	
612108	Carpet, rear floor, Smoke Grey and Black mottle—Saloon	BA5	1	
	only			
612098	Carpet, rear floor, Smoke Grey and Black mottle		1	
	Convertible only			_
568116	Mat, rubber, rear floor—Saloon only		1	-
568123	Mat, rubber, rear floor—Convertible only		1	Export
YA0366 CD2 4 152	Screw Rear mat Washer, cup to floor		2 2	only
611069/Sal.	Mat, heelboard, saloon only—Phantom Grey	BA6	1	J
611068/Sal.	Mat, heelboard, saloon only—Matador Red	27.0	1	
611072/Sal.	Mat, heelboard, saloon only-Black		1	
806491 [°]	Mat assembly, luggage floor—Saloon only	BA7	1	
806493	Mat assembly, luggage floor—Convertible only		1	
553252	Button		5	
554517	Socket Luggage floor		5	
CD26337	Stud mat attachment		5	
YA0164	Screw }		5	

Part No.	Description	Plate No.	No. per Unit	Remarks
	CARPETS AND RUBBER MATS—cont.			
06598	Plate, tread, sill	BA8	2	
11546	Screw, tread plate attachment	D/ (0	14	
04987	Retainer, carpet and weatherstrip to sill		2	
A0366	Screw, retainer attachment		12	
12183	Piece, packing, rubber mats to sill		2	
	DASH MILLBOARDS			
04032	Millboard, dash upper—R.H.S.	BA9	1	
04031	Millboard, dash upper—L.H.S.		1	
06231	Pad, sound insulation, dash upper—R.H.S.—R.H.		1	
06230	Pad, sound insulation, dash upper—R.H.S.—L.H.		1	
06236	Pad, sound insulation, dash upper—L.H.S.—R.H.		1	
06235	Pad, sound insulation, dash upper—L.H.S.—L.H.		1	
09412	Button, spring, dash upper millboard to dash side, front		4	
09413	Button, spring, dash upper millboard to dash centre, front		2	
03987	Millboard, dash lower—R.H.S.	BA10	1	
06244	Millboard, dash lower—L.H.S.		1	
06233	Pad, sound insulation, dash lower—R.H.S.—R.H.		1	
6232	Pad, sound insulation, dash lower—R.H.S.—L.H.		1	
06238	Pad, sound insulation, dash lower—L.H.S.—R.H.		1	
06237	Pad, sound insulation, dash lower—L.H.S.—L.H.		1	
09412	Button, spring, dash lower millboard to dash		4	
08270	Strip, sound deadening (driver's side)—R.H.S.	BA11	1	
11052	Strip, sound deadening (driver's side)—L.H.S.		1	
09412	Button, spring, sound deadening strip to dash		4	
05465	Millboard, dash side—R.H.—Matador Red	D A 4 2	1	1
05467 05475	Millboard, dash side—R.H.—Phantom Grey	BA12	1	
)5464	Millboard, dash side—R.H.—Black Millboard, dash side—L.H.—Matador Red		1	1
)5466	Millboard, dash side—L.H.—Phantom Grey	BA13	1	Fitted up to Commission No.
05474	Millboard, dash side—L.H.—Black	BAIS	1	HB15000 only
)5479	Millboard, dash side—R.H.—Cactus		i	11515000 0111)
05477	Millboard, dash side—R.H.—Midnight Blue		1	İ
05478	Millboard, dash side—L.H.—Cactus		1	
05476	Millboard, dash side—L.H.—Midnight Blue		1	
08203	Millboard, dash side and map pocket assembly,		1 1	í
	L.H.—R.H.S.—Matador Red			
08201	Millboard, dash side and map pocket assembly,		1	1
	L.H.—R.H.S.—Black			
08207	Millboard, dash side and map pocket assembly,		1	
	L.H.—R.H.S.—Midnight Blue			Fitted from Commission
08205	Millboard, dash side and map pocket assembly,		1	No. HB15001 and future
	L.H.—R.H.S.—Cactus			
08209	Millboard, dash side and map pocket assembly,		1	
	R.H.—L.H.S.—Matador Red			
08202	Millboard, dash side and map pocket assembly,		1	
	R.H.—L.H.S.—Black			1

Part No.	Description	Plate No.	No. per Unit	Remarks
	DASH MILLBOARDS—continued			
308208	Miliboard, dash side and map pocket assembly,		1)
100200	R.H.—L.H.S.—Midnight Blue		•	
308206	Millboard, dash side and map pocket assembly,		1	}
108208	R.H.—L.H.S.—Cactus		'	1
05465	Millboard, dash side—R.H.—R.H.S.—Matador Red		1	1
05405	Millboard, dash side—R.H.—R.H.S.—Black		1	Fitted from Commission
05479	Millboard, dash side—R.H.—R.H.S.—Cactus		1	No. HB15001 and future
05477	Millboard, dash side—R.H.—R.H.S.—Midnight Blue		1	140. TIBISOOT and future
05464	Millboard, dash side—L.H.—L.H.S.—Matador Red		1	
05474	Millboard, dash side—L.H.—L.H.S.—Black		1	
05474	ŕ		1	
	Millboard, dash side—L.H.—L.H.S.—Cactus		1	
705476 704334	Millboard, dash side—L.H.—L.H.S.—Midnight Blue		1	J
706234	Pad, sound insulation, dash side		6	
500895	Screw Millboard to Washer, cup ('A' post		6	
CD13515	Washer, cup ∫ 'A' post		0	
	TRIM PADS AND COVERS			
704483	Cover, 'B' post trim—Phantom Grey—R.H.		1	
70 44 82	Cover, 'B' post trimPhantom GreyL.H.		1	
′0 44 81	Cover, 'B' post trim—Matador Red—R.H.	BA14	1	
704480	Cover, 'B' post trim—Matador Red—L.H.	BA15	1	
′0 44 91	Cover, 'B' post trim-Black-R.H.		1	
704490	Cover, 'B' post trim—Black—L.H.		1	
704493	Cover, 'B' post trim—Midnight Blue—R.H.		1	
04492	Cover, 'B' post trim-Midnight Blue-L.H.		1	
04495	Cover, 'B' post trim—Cactus—R.H.		1	
04494	Cover, 'B' post trim—Cactus—L.H.		1	
559642	Cover assembly, wheelarch—Phantom Grey—R.H.		1	
59641	Cover assembly, wheelarch—Phantom Grey—L.H.		1	
59640	Cover assembly, wheelarch—Matador Red—R.H.	BA16	1	
59639	Cover assembly, wheelarch—Matador Red—L.H.	BA17	1	
62310	Cover assembly, wheelarch-Black-R.H.		1	
62309	Cover assembly, wheelarch—Black—L.H.		1	
69366	Cover assembly, wheelarch—Midnight Blue—R.H.		1	
69365	Cover assembly, wheelarch-Midnight Blue-L.H.		1	
69368	Cover assembly, wheelarch—Cactus—R.H.		1	
69367	Cover assembly, wheelarch—Cactus—L.H.		1	
04042	Pocket assembly, rear quarter—Phantom Grey—R.H.		1)
04041	Pocket assembly, rear quarter—Phantom Grey—L.H.		1	
04040	Pocket assembly, rear quarter—Matador Red—R.H.	BA18	1	
04039	Pocket assembly, rear quarter—Matador Red—L.H.	BA19	1	
04050	Pocket assembly, rear quarter—Black—R.H.		1	
04049	Pocket assembly, rear quarter—Black—L.H.		1	Saloon only
04052	Pocket assembly, rear quarter—black—E.H. Pocket assembly, rear quarter—Midnight Blue—R.H.		1	1
04051	Pocket assembly, rear quarter—Midnight Blue—L.H.		1	
04054	Pocket assembly, rear quarter—Cactus—R.H.		1	
04053	Pocket assembly, rear quarter—Cactus—R.H.		1	
04033	Clip, slide on, pocket to trim pad		20	1

Part No.	Description	Plate No.	No. per Unit	Remarks
	TRIM PADS AND COVERS—continued			
806028	Trim Pad assembly, rear quarter—Phantom Grey—R.H.		1)
806027	Trim Pad assembly, rear quarter—Phantom Grey—L.H.		1	•
806026	Trim Pad assembly, rear quarter—Matador Red—R.H.	BA20	1	1
806025	Trim Pad assembly, rear quarter—Matador Red—L.H.	BA21	1	
806034	Trim Pad assembly, rear quarter—Hatador Red—E.H.	DAZI	1	Saloon
806033	Trim Pad assembly, rear quarter—Black—L.H.		1	only
806038	Trim Pad assembly, rear quarter—Midnight Blue—R.H.		1	J 31117
806037	Trim Pad assembly, rear quarter—Midnight Blue—L.H.		1	t
806040	Trim Pad assembly, rear quarter—Cactus—R.H.		1	
806039	Trim Pad assembly, rear quarter—Cactus—L.H.		1	
806053	Trim Pad assembly, rear quarter—Phantom Grey—R.H.		1	\prec
806053			1	1
806052 806051	Trim Pad assembly, rear quarter—Phantom Grey—L.H. Trim Pad assembly, rear quarter—Matador Red—R.H.		1	
	Trim Pad assembly, rear quarter—Matador Red—R.H. Trim Pad assembly, rear quarter—Matador Red—L.H.		1	
806050 806059			1	
	Trim Pad assembly, rear quarter—Black—R.H.		1	
806058 806063	Trim Pad assembly, rear quarter—Black—L.H.		1	Convertible only
	Trim Pad assembly, rear quarter—Midnight Blue—R.H.		1	Convertible only
806062	Trim Pad assembly, rear quarter—Midnight Blue—L.H.			
806065	Trim Pad assembly, rear quarter—Cactus—R.H.		1	
806064	Trim Pad assembly, rear quarter—Cactus—L.H.		1	
YJ2303	Screw		4	
WP0113	Washer, plain > Trim pad to inner attachment bracket		4	
FJ2443/9	Nut, fix		4	J
605811	Clip, trim Quarter trim pad		20	
608516	Clip, trim, longreach ∫ attachment		8	
610406	Trim assembly, quarter light pillar		2	Saloon only
612161	REVOLVING ASH TRAY ASSEMBLY (Fitted in rear quarter casing)	BA22	2	Saloon only
806567	REAR QUARTER BOOT MILLBOARD	BA23	1	
612167	Bracket, rear quarter millboard—Floor		1	
612168	Bracket, rear quarter millboard—Rear		1	
554407	Rivet		2	
505306	Washer		2	
YJ2304	Screw Rear quarter millboard attachment		2	
510127	Washer		2	
FU2543	Nut		2	
607774	COAT HOOK		1	
507946	Screw Coat hook		2	
	>		2	
FU2543/4	Fix, spire \int attachment		2	
	DOOR AND QUARTER CAPPING DETAILS			_
565291	Capping, door—R.H.		1	
565290	Capping, door—L.H.		1	Saloon and
508566	Screw Capping to		4	Convertible
CD24152	Washer, cup ∫ door		4	Į
565293	Capping, quarter—R.H.		1	
565292	Capping, quarter—L.H.		1	Saloon
508566	Screw Capping to		4	only
••••	Washer, cup ∫ quarter		4	

Part No.	Description	Plate No.	No. per Unit	Remarks
806645	FRONT SEAT TRIMMED ASSEMBLY (LESS SEAT SLIDES) P.V.C. TRIM—PHANTOM GREY		2	
806644	FRONT SEAT TRIMMED ASSEMBLY (LESS SEAT SLIDES) P.V.C. TRIM—MATADOR RED		2	
806646	FRONT SEAT TRIMMED ASSEMBLY (LESS SEAT SLIDES) P.V.C. TRIM—BLACK		2	
806647	FRONT SEAT TRIMMED ASSEMBLY (LESS SEAT SLIDES) P.V.C. TRIMMIDNIGHT BLUE		2	
806648	FRONT SEAT TRIMMED ASSEMBLY (LESS SEAT SLIDES) P.V.C. TRIM—CACTUS		2	
806651	FRONT SEAT TRIMMED ASSEMBLY (LESS SEAT SLIDES) LEATHER TRIM—PHANTOM GREY		2	
806650	FRONT SEAT TRIMMED ASSEMBLY (LESS SEAT SLIDES) LEATHER TRIM— MATADOR RED		2	Fitted up to Commission No. HB18763 only
306652	FRONT SEAT TRIMMED ASSEMBLY (LESS SEAT SLIDES) LEATHER TRIM—BLACK		2	
806653	FRONT SEAT TRIMMED ASSEMBLY (LESS SEAT SLIDES) LEATHER TRIM— MIDNIGHT BLUE		2	
806654	FRONT SEAT TRIMMED ASSEMBLY (LESS SEAT SLIDES) LEATHER TRIM—CACTUS		2	
806640	Frame assembly, front seat	BA24	2	
512273	Spring, cushion tension	BA25	2	
312251	Diaphragm assembly, seat base	BA26	2	
306643	Pad, front seat cushion	BA27	2	
666612	Cover assembly, front seat cushion, P.V.C. trim—Phantom Grey		2	
566611	Cover assembly, front seat cushion, P.V.C. trimMatador Red	BA28	2	
566613	Cover assembly, front seat cushion, P.V.C. trim—Black		2	
566614	Cover assembly, front seat cushion, P.V.C. trim— Midnight Blue		2	
566615	Cover assembly, front seat cushion, P.V.C. trim— Cactus		2	

Part No.	Description	Plate No.	No. per Unit	Remarks
	FRONT SEAT TRIMMED ASSEMBLY—cont.			
566618	Cover assembly, front seat cushion, leather trim— Phantom Grey		2	
566617	Cover assembly, front seat cushion, leather trim—Matador Red	BA28	2	
566619	Cover assembly, front seat cushion, leather trim-Black		2	1
566620	Cover assembly, front seat cushion, leather trim— Midnight Blue		2	
566621	Cover assembly, front seat cushion, leather trim— Cactus		2	
608862	Clip, trim		4	
608817	Clip, trim > Front seat cushion		32	
610520	Clip, trim		8	
806132	Board, squab		2	
806641	Case, spring, front seat squab	BA29	2	
705921	Roll, top, squab	BA30	2	
566624	Cover assembly, front seat squab, P.V.C. trim—Phantom Grey		2	Fitted up to Commission
566 623	Cover assembly, front seat squab, P.V.C. trim—Matador Red	BA31	2	No. HB18763 only
566625	Cover assembly, front seat squab, P.V.C. trim—Black		2	
566 62 6	Cover assembly, front seat squab, P.V.C. trim— Midnight Blue		2	
566627	Cover assembly, front seat squab, P.V.C. trim— Cactus		2	
566630	Cover assembly, front seat squab, leather trim—Phantom Grey		2	
566629	Cover assembly, front seat squab, leather trim—Matador Red	BA31	2	
566631	Cover assembly, front seat squab, leather trim—Black		2	
566632	Cover assembly, front seat squab, leather trim— Midnight Blue		2	
566633	Cover assembly, front seat squab, leather trim—Cactus		2	
608817	Clip, trim, front seat squab		20	J
808279	FRONT SEAT TRIMMED ASSEMBLY (LESS SLIDES) P.V.C. TRIM—MATADOR RED		2	
808280	FRONT SEAT TRIMMED ASSEMBLY (LESS SLIDES) P.V.C. TRIM—MIDNIGHT BLUE		2	
808281	FRONT SEAT TRIMMED ASSEMBLY (LESS SLIDES) P.V.C. TRIM—CACTUS		2	Fitted from Commission No. HB18764 and future
808282	FRONT SEAT TRIMMED ASSEMBLY (LESS SLIDES) P.V.C. TRIM—BLACK		2	
808289	FRONT SEAT TRIMMED ASSEMBLY (LESS SLIDES) LEATHER TRIM—MATADOR RED		2	

Part No.	Description	Plate N No.	No. per Unit	Remarks
808290	FRONT SEAT TRIMMED ASSEMBLY (LESS		2	<u> </u>
	SLIDES) LEATHER TRIM—MIDNIGHT BLUE			
808291	FRONT SEAT TRIMMED ASSEMBLY (LESS SLIDES) LEATHER TRIM—CACTUS		2	
808293	FRONT SEAT TRIMMED ASSEMBLY (LESS SLIDES) LEATHER TRIM—BLACK		2	
808162	Frame assembly, front seat		2	
612273	Spring, cushion tension		2	
708060	Diaphragm assembly, seat base		2	
708041	Pad, front seat cushion		2	1
566611	Cover assembly, front seat cushion, P.V.C. trim— Matador Red		2	
566614	Cover assembly, front seat cushion, P.V.C. trim— Midnight Blue		2	
566615	Cover assembly, front seat cushion, P.V.C. trim—Cactus		2	
566613	Cover assembly, front seat cushion, P.V.C. trim— Black		2	
566617	Cover assembly, front seat cushion, leather trim— Matador Red		2	
566620	Cover assembly, front seat cushion, leather trim— Midnight Blue		2	
566621	Cover assembly, front seat cushion, leather trim— Cactus		2	Fitted from Commission No. HB18764 and future
566619	Cover assembly, front seat cushion, leather trim— Black		2	
608862	Clip, trim		4	
608817	Clip, trim > Front seat cushion		32	
610520	Clip, trim		8	
806132	Board, squab		2	
808275	Case, spring, front seat squab		2	
705921	Roll, top, squab		2	
566623	Cover assembly, front seat squab, P.V.C. trim— Matador Red		2	
566626	Cover assembly, front seat squab, P.V.C. trim— Midnight Blue		2	
566627	Cover assembly, front seat squab, P.V.C. trim—Cactus		2	
566625	Cover assembly, front seat squab, P.V.C. trim— Black		2	
566629	Cover assembly, front seat squab, leather trim— Matador Red		2	
566632	Cover assembly, front seat squab, leather trim— Midnight Blue		2	
566633	Cover assembly, front seat squab, leather trim— Cactus		2	
566631	Cover assembly, front seat squab, leather trim—Black		2	
608817	Clip, trim, front seat squab		20	J

Part No.	Description	Plate No.	No. per Unit	Remarks
	FRONT SEAT TRIMMED ASSEMBLY—cont.			
806971	Slide assembly—R.H. seat	BA32	1)
806970	Slide assembly—L.H. seat	BA33	1	Alternative to 806952-3
806953	Slide assembly—R.H. seat	27.00	2	3
806952	Slide assemblyL.H. seat		2	Alternative to 806970-1
609966/H	Knob (Screw type)		2	,
609966/C	Knob (Clip type)		2	
HU0806	Screw, set		4	
WP0133	Washer, plain > Seat slides to seat		8	
YN2908	Nut, nyloc		4	
H∪0808P	Bolt		8)
WP0048	Washer, plain Seat slides		16	Saloon
FS2704	Nut, grip to floor		4	only
FQ3406	Retainer, nut		4	
HU0808P	Bolt		4	ĺ
H∪0812P	Bolt Seat slides		4	Convertible
WP0048	Washer, plain to floor		8	only
605744	Packing		4	}
608759	Block, seat adjusting (driver's side only)	BA34	2	
608777	Sleeve, rubber, split		1	
701384	Clip, spring, front seat slide		1	
608769	Packing, rubber, in spring clip		1	
PT0503	Screw		2	
WE0605	Washer, shakeproof > Spring clip to seat slide		2	
HN2005	Nut		2	
903111	REAR SEAT CUSHION TRIMMED ASSEMBLY, P.V.C. TRIM—PHANTOM GREY		1	
903110	REAR SEAT CUSHION TRIMMED ASSEMBLY, P.V.C. TRIM—MATADOR RED		1	
903112	REAR SEAT CUSHION TRIMMED ASSEMBLY, P.V.C. TRIM—BLACK		1	
903113	REAR SEAT CUSHION TRIMMED ASSEMBLY, P.V.C. TRIM—MIDNIGHT BLUE		1	Saloon only
903114	REAR SEAT CUSHION TRIMMED ASSEMBLY, P.V.C. TRIM—CACTUS		1	
902699	REAR SEAT CUSHION TRIMMED ASSEMBLY, LEATHER TRIM— PHANTOM GREY		1	
902698	REAR SEAT CUSHION TRIMMED ASSEMBLY, LEATHER TRIM— MATADOR RED		1	

Part No.	Description	Plate No.	No. per Unit	Remarks
902702	REAR SEAT CUSHION TRIMMED ASSEMBLY, LEATHER TRIM—BLACK		1	
902703	REAR SEAT CUSHION TRIMMED ASSEMBLY, LEATHER TRIM— MIDNIGHT BLUE		1	
9 02 70 4	REAR SEAT CUSHION TRIMMED ASSEMBLY, LEATHER TRIM—CACTUS		1	
02679	Case, spring, rear seat cushion	BA35	1	
05581	Pad, rear seat cushion	BA36	1	j
66285	Cover assembly, rear seat cushion, P.V.C. trim—Phantom Grey		1	
566284	Cover assembly, rear seat cushion, P.V.C. trim—Matador Red	BA37	1	Saloon only
66286	Cover assembly, rear seat cushion, P.V.C. trim-Black		1	1
66287	Cover assembly, rear seat cushion, P.V.C. trim— Midnight Blue		1	
566288	Cover assembly, rear seat cushion, P.V.C. trim— Cactus		1	
563469	Cover assembly, rear seat cushion, leather trim—Phantom Grey		1	
563468	Cover assembly, rear seat cushion, leather trim—Matador Red	BA37	1	
563472	Cover assembly, rear seat cushion, leather trim—Black		1	ļ
563473	Cover assembly, rear seat cushion, leather trim— Midnight Blue		1	
563474	Cover assembly, rear seat cushion, leather trim—Cactus		1	J
903172	REAR SEAT CUSHION TRIMMED ASSEMBLY, P.V.C. TRIM—PHANTOM GREY		1	
903171	REAR SEAT CUSHION TRIMMED ASSEMBLY, P.V.C. TRIM—MATADOR RED		1	
903174	REAR SEAT CUSHION TRIMMED ASSEMBLY, P.V.C. TRIM—MIDNIGHT BLUE		1	Convertible only
903175	REAR SEAT CUSHION TRIMMED ASSEMBLY, P.V.C. TRIM—CACTUS		1	
903173	REAR SEAT CUSHION TRIMMED ASSEMBLY, P.V.C. TRIM—BLACK		1	
902893	REAR SEAT CUSHION TRIMMED ASSEMBLY, LEATHER TRIM— PHANTOM GREY		1	

Part No.	Description	Plate No.	No. per Unit	Remarks
902892	REAR SEAT CUSHION TRIMMED ASSEMBLY, LEATHER TRIM—MATADOR RED		1	
902898	REAR SEAT CUSHION TRIMMED ASSEMBLY, LEATHER TRIM—BLUE		1	
902899	REAR SEAT CUSHION TRIMMED ASSEMBLY, LEATHER TRIM—CACTUS		1	
902896	REAR SEAT CUSHION TRIMMED ASSEMBLY, LEATHER TRIM—BLACK		1	
901986	Case, spring, rear seat cushion		1	
804136	Pad, rear seat cushion		1	
566670	Cover assembly, rear seat cushion, P.V.C. trim—Phantom Grey		1	Convertible only
566669	Cover assembly, rear seat cushion, P.V.C. trim—Matador Red		1	
566672	Cover assembly, rear seat cushion, P.V.C. trim— Midnight Blue		1	
566673	Cover assembly, rear seat cushion, P.V.C. trim— Cactus		1	
566671	Cover assembly, rear seat cushion, P.V.C. trim—Black		1	
563977	Cover assembly, rear seat cushion, leather trim—Phantom Grey		1	
563976	Cover assembly, rear seat cushion, leather trim—Matador Red		1	
563982	Cover assembly, rear seat cushion, leather trim— Midnight Blue		1	
563983	Cover assembly, rear seat cushion, leather trim— Cactus		1	
563980	Cover assembly, rear seat cushion, leather trim—Black		1	J
806554	REAR SEAT SQUAB TRIMMED ASSEMBLY, P.V.C. TRIM—PHANTOM GREY		1	
806553	REAR SEAT SQUAB TRIMMED ASSEMBLY, P.V.C. TRIM—MATADOR RED		1	
806556	REAR SEAT SQUAB TRIMMED ASSEMBLY, P.V.C. TRIM—MIDNIGHT BLUE		1	Saloon only
806557	REAR SEAT SQUAB TRIMMED ASSEMBLY, P.V.C. TRIM—CACTUS		1	
806555	REAR SEAT SQUAB TRIMMED ASSEMBLY, P.V.C. TRIM—BLACK		1	

Part No.	Description	Plate No.	No. per Unit	Remarks
806561	REAR SEAT SQUAB TRIMMED ASSEMBLY, LEATHER TRIM— PHANTOM GREY		1	
806560	REAR SEAT SQUAB TRIMMED ASSEMBLY, LEATHER TRIM— MATADOR RED		1	
306562	REAR SEAT SQUAB TRIMMED ASSEMBLY, LEATHER TRIM—BLACK		1	
806563	REAR SEAT SQUAB TRIMMED ASSEMBLY, LEATHER TRIM— MIDNIGHT BLUE		1	
806564	REAR SEAT SQUAB TRIMMED ASSEMBLY, LEATHER TRIM—CACTUS		1	
902748	Case, spring, rear seat squab	BA38	1	İ
303689	Pad, rear seat squab	BA39	1	
63732	Backing, rear seat squab	BA40	1	1
66641	Cover assembly, rear seat squab, P.V.C. trim—Phantom Grey		1	Saloon only
5666 4 0	Cover assembly, rear seat squab, P.V.C. trim—Matador Red	BA41	1	
566642	Cover assembly, rear seat squab, P.V.C. trim—Black		1	}
566643	Cover assembly, rear seat squab, P.V.C. trim— Midnight Blue		1	
566644	Cover assembly, rear seat squab, P.V.C. trim—Cactus		1	
566648	Cover assembly, rear seat squab, leather trim—Phantom Grey		1	
566647	Cover assembly, rear seat squab, leather trim—Matador Red	BA41	1	
566650	Cover assembly, rear seat squab, leather trim— Midnight Blue		1	
566651	Cover assembly, rear seat squab, leather trim— Cactus		1	
566649 400017	Cover assembly, rear seat squab, leather trim—Black		1	
608817 608942	Clip, trim Rear seat Clip, trim squab		12 14	J
806657	REAR SEAT SQUAB TRIMMED ASSEMBLY, P.V.C. TRIM—PHANTOM GREY		1	
806656	REAR SEAT SQUAB TRIMMED ASSEMBLY, P.V.C. TRIM—MATADOR RED		1	Convertible
806659	REAR SEAT SQUAB TRIMMED ASSEMBLY, P.V.C. TRIM—MIDNIGHT BLUE		1	

Part No.	Description	Plate No.	No. per Unit	Remarks
806660	REAR SEAT SQUAB TRIMMED ASSEMBLY, P.V.C. TRIM—CACTUS		1	
806658	REAR SEAT SQUAB TRIMMED ASSEMBLY, P.V.C. TRIM—BLACK		1	
806663	REAR SEAT SQUAB TRIMMED ASSEMBLY, LEATHER TRIM— PHANTOM GREY		1	
806662	REAR SEAT SQUAB TRIMMED ASSEMBLY, LEATHER TRIM— MATADOR RED		1	
806665	REAR SEAT SQUAB TRIMMED ASSEMBLY, LEATHER TRIM— MIDNIGHT BLUE		1	
806666	REAR SEAT SQUAB TRIMMED ASSEMBLY, LEATHER TRIM—CACTUS		1	
806664	REAR SEAT SQUAB TRIMMED ASSEMBLY, LEATHER TRIM—BLACK		1	Convertible
804092	Board, squab		1	only
804091	Pad, hair		1	,
804090	Channel, trim		1	
609635	Angle, trim—R.H.		1	İ
609634	Angle, trim—L.H.		1	ŀ
566658	Cover assembly, rear seat squab, P.V.C. trim—Phantom Grey		1	
566657	Cover assembly, rear seat squab, P.V.C. trim—Matador Red		1	
566660	Cover assembly, rear seat squab, P.V.C. trim— Midnight Blue		1	
566661	Cover assembly, rear seat squab, P.V.C. trim— Cactus		1	
566659	Cover assembly, rear seat squab, P.V.C. trim-Black		1	
566664	Cover assembly, rear seat squab, leather trim—Phantom Grey		1	
566663	Cover assembly, rear seat squab, leather trim—Matador Red		1	
566666	Cover assembly, rear seat squab, leather trim— Midnight Blue		1	
566667	Cover assembly, rear seat squab, leather trim— Cactus		1	
566665	Cover assembly, rear seat squab, leather trim—Black		1	
WP0120	Washer, plain Rear squab		2	
HN2007	Nut attachment		2	

2

MISCELLANEOUS BODY FITTINGS

Part No.	Description	Plate No.	No. per Unit	Remarks
	GROMMETS AND BLANKING PLUGS			
61917	Choke cable		2	
61917	Screen washer tube		1	
711353	Gear lever		1	
705789	GROMMET < Handbrake		1	
601661	Fuel filler		1	
602037	Speedo flex		1	
609113	Spare wheel cover		3	
607348	Spare wheel pan		1	
607348	Seat pan		2	
607517	BLANKING PLUGS \ Luggage floor		2	
607348	Luggage floor		2	
607348	Rear floor		2	
	JACK STOWAGE			
608430	Plate, fixing, jack retaining strap		2	
608429	Strap, retaining jack		1	
YT3707	Screw, self-tapping		2	
WL0221	Washer, lock Retaining strap and plates to seat pan		2	
WM0815	Washer, medium		1	

ACCESSORIES

art No.	Description	Plate No. per No. Unit	Remarks
	TOUCH IN PAINT DETAILS		
D31433	Black—Pencil	1	
56052	Black—Spray	1	
D31445	Signal Red-Pencil	1	
56047	Signal Red—Spray	1	
D31597	Lichfield Green-Pencil	1	
57880	Lichfield Green—Spray	1	
D31642 57883	Powder Blue—Pencil	1	
57516	Powder Blue—Spray Sebring White—Pencil	1	
67515	Sebring White—Spray	1	
D31641	Pale Yellow-Pencil	1	
7884	Pale Yellow—Spray	1	
80008	Phantom Grey—Pencil	1	
57887	Phantom Grey—Spray	1	
55408	Renoir Blue—Pencil	1	
55407	Renoir Blue—Spray	1	
01702	FOG LAMP—SMALL TYPE	1	
1703	SPOT LAMP—SMALL TYPE	1	
2072	FOG LAMP—RANGER TYPE	1	
12073	SPOT LAMP—RANGER TYPE	1	
00482	PETROL FILLER CAP	1	
9844	DEFROSTER	1	Saloon only
02459	WING MIRROR—ROUND TYPE	2	
50632	WING MIRROR—'D' TYPE	2	
05825	WING MIRROR BEZEL	2	
59930	EXTERIOR SUN VISOR	1	
68993	BADGE BAR	1	
30071	ROOF RACK	1	Saloon only
	SEAT COVERS	1 set	
54449	FIRE EXTINGUISHER	1	
22744	†THERMOSTAT UNIT (Winter Setting)	1	Fitted up to Commission No. only
40038	TAIL PIPE FINISHER	1	
7245	WOOD RIMMED STEERING WHEEL	1	

ACCESSORIES

Part No.	Description	Plate No. per No. Unit	Remarks
511125	ENGINE GASKET SET KIT	1	
105321	Oil retaining cover	1	
205457	Front engine plate	1	
201312	Timing cover	1	
104939	Washer Distributor pedestal	2	
204731	(For high and low Oil sump	1	
119322	compression < Rocker cover	i	
207857	engines) Manifold	i	
126902	Joint, carburettor	4	
126901	Insulating, carburettor	2	
119542	Water pump to cylinder head	1	
22707	Petrol pump	1	
7103	Water elbow	1	
100847	Gasket Bearing housing to water	1	
	(For high and low pump body		
123 4 15	compression \prec Exhaust pipe to manifold	1	
208652	engines) Cylinder head	1	
125531	Oil filter	1	
511614	CONTINENTAL TOURING KIT	1	
509675	TOW BAR KIT (WITTER)	1	
509792	REVERSING LAMP KIT	1	
128192	Lamp, reverse	2	
609909	Washer, reverse lamp	2	
128265	Lead, feed, reverse lamp switch		
128266	Harness, reverse lamp to switch	1	
128267	Lead, earth, reverse lamp	1	
509572	Clip	1	
127380	Switch, isolator	1	
1267 4 6	Bracket assembly (reverse light switch)	1	
126750	Arm, operating, assembly	1	
562116	BONNET LOCK KIT	1	
609924	Lock, bonnet (with keys)	2	
UV//41	mostly bottlet (titel Roys)	_	
563992	SAFETY BELT KIT—SALOON	1	
563993	SAFETY BELT KIT CONVERTIBLE	1	
512581	OIL PRESSURE GAUGE KIT (lbs./sq. in.)	1	
512582	OIL PRESSURE GAUGE KIT (Metric)	1	
133120	Gauge, oil, pressure (lbs./sq. in.)	1	
133121	Gauge, oil, pressure (Metric)	1	
608490	Ring, reinforcement	1	
126022	Bulb, holder and cable, oil pressure gauge illumination	1	
59492	Bulb, 12 volt, 2·2 watt.	1	
12626 4	Lead, earth, oil gauge	1	
138 4 77	Pipe, oil, assembly	1	
138 4 76	Adaptor	1	

ACCESSORIES

Part No.	Description	Plate No.	No. per Unit	Remarks
306133	SKID PLATE ASSEMBLY		4	
133319	Bracket)		•	
HB0909	Bolt		2	
HN2009	Skid plate to frame		2	
	Nut, hex.		2	
WL0209	Washer, lock		2	
511462	TOOL KIT		1	
122746	Pouch		1	
509361	Spanner		1	
101089	Spanner		1	
122745	Spanner		1	
59426	Spanner		1	
125505	Gauge		1	
514191	BOTTOM TRUNNION CONVERSION KIT		1	
140892	Bearing		4	
140893	Piece, distance		2	
140894	Water shield		4	
140895	Water shield		4	

OVERDRIVE

Part No.	Description	Plate No.	No. per Unit	Remarks
511 4 01	OVERDRIVE KIT		1	
132115	Stud, 3/16"	BB1	7	
208142	Mainshaft	BB2	1	
305137	Adaptor	BB3	1	
106437	Gasket	BB4	1	
WL0208	Washer > Adaptor to gearbox case	BB5	7	
HN2008	Nut	BB6	7	
306553	Overdrive Unit	BB7	1	For details see Pages 120 to 124
112626	Gasket)	BB8	1	
WL0207	Washer > Overdrive unit to gearbox adaptor	BB9	8	
HN2007	Nut	BB10	8	
127740	Shaft, actuator		1	
133771	Arm, operating		1	
52 4 13	Pin, Mills, securing arm to actuator shaft		1	
134216	Bracket, overdrive support	BB11	1	
134219	Platform, mounting assembly	BB12	1	
134229	Mounting, flexible, rear engine mounting	BB13	1	
HU0807	Screw, set \ Support bracket to	BB14	2	
WL0208	Washer overdrive	BB15	2	
HU0805	Screw	BB16	2	
WL0208	Washer Flexible mounting to	BB17	2	
HN2008	Nut support bracket	BB18	2	
HU0806	Screw, set	BB19	2	
WP0008	Washer, plain Flexible mounting to	BB20	2	
WL0208	Washer, lock mounting platform	BB21	2	
HN2008	Nut	BB22	2	
HU0805	Screw, set	BB23	4	
WL0208	Washer Mounting platform to chassis frame	BB24	4	
HN2008	Nut	BB25	4	
611974	Escutcheon, flasher and overdrive switches	BB26	1	
130879	Switch, overdrive, R.H. steering	BB27	1	
130546	Switch, overdrive, L.H. steering		1	
609792	Bezel, overdrive switch	BB28	1	
502146	Washer, bezel	BB29	1	
134329	Harness, overdrive	BB30	1	Fitted up to Commission No. HB7370 R.H.S. & HB7462 L.H.S only
139243	Harness, overdrive		1	Fitted from Commission No. HB7371 R.H.S. & HB7463 L.H.S and future
134330	Harness, gearbox	BB31	1	
511345	Clin	BB32	1	
505031	Clip Harness attachment	BB33	1	
126792	Relay	BB34	1	

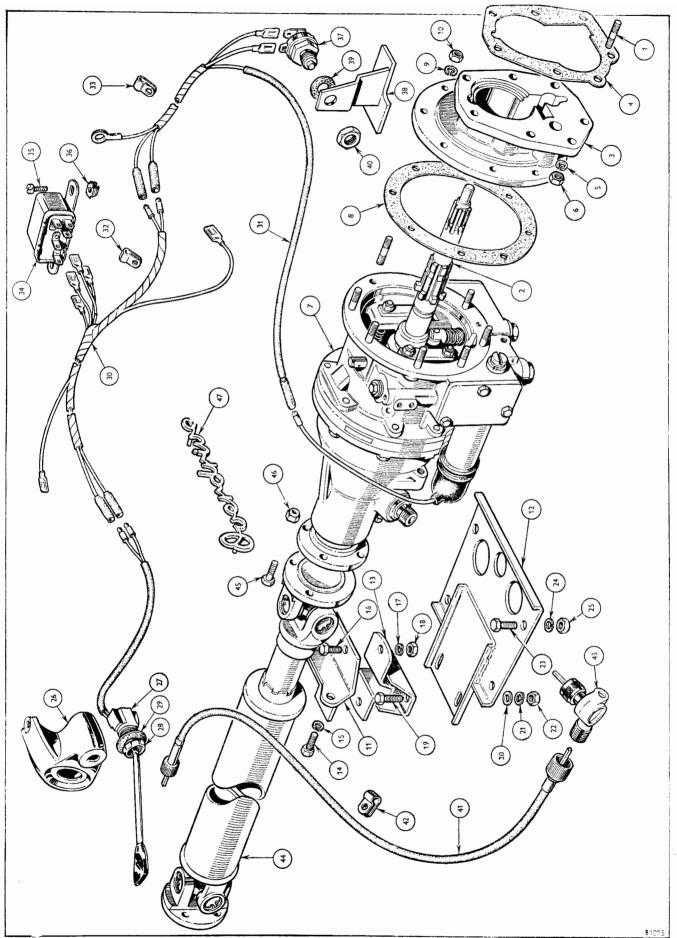



PLATE BB

VITESSE

OVERDRIVE

Part No.	Description	Plate No.	No. per Unit	Remarks
•	OVERDRIVE KIT—continued			
¥×5504	Screw	BB35	1	Alternative to YA0504
YA0504	Screw > Relay to L.H. side of bulkhead		1	Alternative to YX5504
FC2805	Nut, spire	BB36	1	
127380	Switch, overdrive inhibitor	BB37	1	
133770	Bracket assembly, switch mounting	BB38	1	
502146	Washer, packing \ Overdrive switch	BB39	1	
59474	Nut ∫ to bracket	BB40	1	
511355	Speedometer cable assembly	BB41	1	
100148	Clip, speedometer cable	BB42	1	
120694	Angle, drive, speedometer cable	BB43	1	
611938	Plate, cover, rear floor		1	
YZ3403	Screw Cover plate		3	
FJ2444	Nut, fix attachment		3	
208338	Propellor shaft	BB44	1	
129361	Bolt, propellor shaft attachment	BB45	4	
TN3208	Nut, nyloc	BB46	8	
603906	Nameplate, overdrive	BB47	1	
FP1012/9	Plate, fix, attaching nameplate		3	



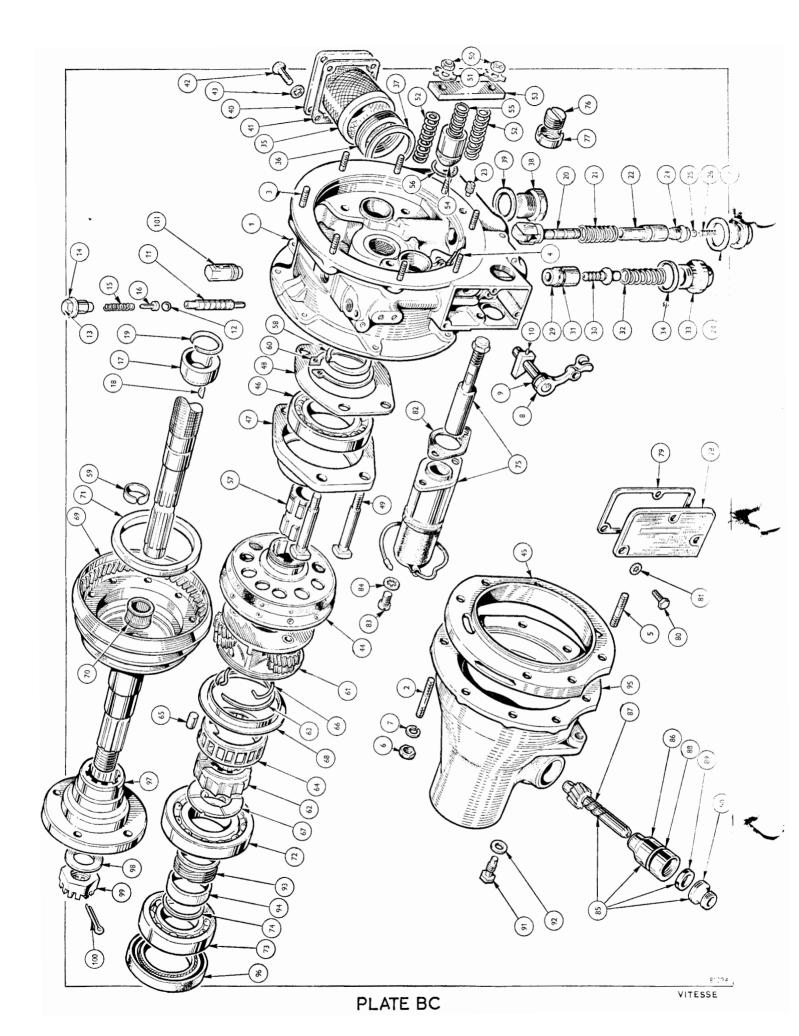

OVERDRIVE

Part No.	Description	Plate No.	No. per Unit	Remarks
306553	OVERDRIVE UNIT		1	
51517A	FRONT CASING ASSEMBLY	BC1	1	
506082	Stud, $\frac{1}{4}$ ", rear casing to main casing	BC2	6	
506083	Stud, $\frac{1}{4}$ Main casing to	BC3	7	
506105	Stud, ¼" ∫ gearbox	BC4	1	
506103	Stud, $\frac{1}{4}$, rear casing to main casing	BC5	2	
HN2007	Nut, $\frac{1}{4}$ Rear case to maincase and	BC6	16	
WL0207	Washer, spring, $\frac{1}{4}''$ maincase to gearbox	BC7	16	
506101	Joint, paper		1	
506064	OPERATING VALVE LEVER ASSEMBLY	BC8	1	
500594	'O' ring	BC9	1	
52413	Mills pin	BC10	1	
138926	Operating valve	BC11	1	
BL0020	Ball, <u>5</u> "	BC12	1	
506117	Plug, valve	BC13	1	
500568	Washer, valve plug	BC14	1	
50 6 070	Spring, valve	BC15	1	
500591	Plunger, ball valve	BC16	1	
513216	Cam, oil pump operating	BC17	1	
KW0316	Woodruff key	BC18	1	
137308	Spring, ring Securing cam	BC19	1	
12196	OIL PUMP PLUNGER ASSEMBLY	BC20	1	
500633	Spring, for plunger	BC21	1	
513222	Body, pump	BC22	1	
506076	Screw, retaining pump body	BC23	1	
513192	Body Assembly, non-return valve	BC24	1	
BL0014	Ball, 7/16, in valve body	BC25	1	
513207	Spring, valve	BC26	1	
513206	Plug, valve	BC27	1	
506118	Washer, for plug	BC28	1	
513193	RELIEF VALVE KIT		1	
Not Serviced	Body, valve	BC29	1	
Not Serviced	Plunger	BC30	1	
506129	'O' ring	BC31	1	
Not Serviced	Spring	BC32	1	
Not Serviced	Plug	BC33	1	
06118	Washer, plain, on plug	BC34	1	
13202	Oil filter	BC35	1	
13205	Magnet, filter	BC36	1	
06107	Plate, sealing, oil filter to casing	BC37	1	
06114	Plug, drain	BC38	1	
06118	Washer, drain plug	BC39	1	
506097	Side cover plate	BC40	1	
84.	Joint for plate	BC41	1	
-1U0706	Screw, set, $\frac{1}{4}''$ Side cover plate	BC42	4	
1 ∪0707	Washer, shakeproof to casing	BC43	4	

OVERDRIVE

Part No.	Description	Plate No.	No. per Unit	Remarks
	OVERDRIVE HAUT (see:			
513200	OVERDRIVE UNIT (continued) CLUTCH SLIDING MEMBER ASSEMBLY	BC44	1	
	(with linings)	0045		
513228	Ring, clutch brake	BC45	1	
506112	Bearing, ball, clutch thrust	BC46	1	
506081	Housing, clutch thrust bearing	BC47	1	
506104	Plate, retainer, clutch thrust bearing	BC48	1	
13203	Bolt	BC49	4	
513227	Nut Securing thrust bearing housing	BC50	4	
500642	Washer, tab	BC51	5	
513199	Spring, clutch	BC52	4	
506084	Bridge piece, clutch	BC53	2	
513220	Piston	BC54	2	
513219	Spring, piston > Operating clutch	BC55	2	
506130	'O' ring, on piston ∫	BC56	2	
506044	SUNWHEEL ASSEMBLY	BC57	1	
506091	Snap ring Securing sunwheel	BC58	1	
513223	Spring, ring	BC59	1	
	Circlip	BC60	1	
513194	PLANET CARRIER ASSEMBLY	BC61	1	
513224	Bearing, needle roller		6	
500 4 12	Mills, pin, securing bearings		3	
513209	Freewheel inner member	BC62	1	
51321 0	Spring, ring	BC63	1	
502559	Cage, roller	BC64	1	
506063	Rollers, steel, in cage	BC65	Set	
513208	Spring, for cage	BC66	1	
500613	Washer, thrust	BC67	1	
513215	Plate, retaining	BC68	1	
513195	ANNULUS ASSEMBLY	BC69	1	
506113	Bearing, needle roller	BC70	1	
Not Serviced	Outer, member freewheel	BC71	1	
506111	Bearing, ball, front \ Annulus support	BC72	1	
513229	Bearing, ball, rear in rear casing	BC73	1	
513214/1	Adjustment washer, correcting end float, .105"	BC74	A/R	
513214/2	Adjustment washer, correcting end float, .100"	BC74	A/R	
513214/4	Adjustment washer, correcting end float, .090"	BC74	A/R	
512114	SOLENOID ASSEMBLY	BC75	1	
514200	Adjusting screw assembly, (comprising items BC76 & BC77)		1	
06109	Side cover plate	BC78	1	
13204	Washer, joint, side cover plate	BC79	1	
513226	Screw, hex. Securing side	BC80	3	
WN0705	Washer, shakeproof ∫ cover plate	BC81	3	
51 32 01	Washer, joint, solenoid to casing	BC82	1	
13225	Screw, set, securing solenoid	BC83	2	
			_	

OVERDRIVE

Part No.	Description	Plate No.	No. per Unit	Remarks
	OVERDRIVE UNIT—continued			
67	SPEEDOMETER DRIVE ASSEMBLY	BC85	1	
56	Bearing assembly, speedometer	BC86	1	
5061 19	Gear, driven	BC87	1	
506115	'O' Ring	BC88	1	
Not Serviced	Seal, oil	BC89	1	
Not Serviced	End, screwed	BC90	1	
501606	Pin, mills, 16"		1	
506071	Screw, locking	BC91	1	
506108	Washer, on locking screw	BC92	1	
506099	Gear, driving, on mainshaft	BC93	1	
513211	Tube, spacing, on mainshaft	BC94	1	
513198	REAR CASING ASSEMBLY	BC95	1	
513231	Oil seal	BC96	1	
513212	Coupling, flange	BC97	1	
WP0024	Washer, plain) Securing coupling	BC98	1	
60405	Nut, slotted > flange to	BC99	1	
PC0012	Cotter annulus	BC100	1	





Page No.	Section	Nature of Modification	
1.	Engine	46549. Plug, core, front face and R.H. side of block. 5. 46172. Plug, core, front face of cylinder block. 1. 56712. Plug, core, rear face and L.H. side of block. 3. Bracket above items together and amend note in remarks column to read:- "Fitted up to Engine No	
		Add the following new details:- 144688. Plug, core (Bucket type) front face and R.H. Side of block. 144686. Plug, core, (Bucket type) rear face and 3.	
		L.H. side of block. 144687. Plug, core, (Bucket type) front face of cylinder block. Add in remarks column:- "Fitted from Engine Noand future".	
1.	Engine	132873. Stud, gearbox and rear engine plate. Add in remarks column:- "Fitted up to Engine No. HB24430E only".	
		139836. Stud, gearbox and rear engine plate. Add in remarks column:- "Fitted from Engine No. HB24431E and future".	
3.	Engine	208833. Rear engine plate. Add in remarks column:- "Fitted up to Engine No. HB24430E only".	
		211514. Rear engine plate. Add in remarks column:- "Fitted from Engine No. HB24431E and future".	
		HU0806. Screw, set. 7. Add in remarks column:- "Fitted up to Engine No. HB24430E only".	
		HU0807. Screw, set. 7. Add in remarks column:- "Fitted from Engine No. HB24431E and future".	
4.	Engine	27378. Plug, core, in rear of head. 1. Add in remarks column:- "Fitted up to Engine Noonly".	
		Add the following new detail:- 144648. Plug, core, (Bucket type) in rear face of head. 1. Add in remarks column:- "Fitted from Engine Noand future".	
5.	Engine	104823. Valve, tappet. 12. Amend part number to read:- 144343. Add in remarks column:- "Fitted up to Commission Noonly".	
5.	Engine	Add the following new detail:- 143552. Valve, tappet. Add in remarks column:- "Fitted from Commission Noand future".	ĭ

Page No.	Section	Nature of Modification	
5.	Engine	138176. Cap, oil filler. Amend note in remarks column to read:- Only required when Closed Circuit Breather is fitted. "Fitted from Engine No. HB27986E all countries except U.S.A. and Canada". "Fitted from Engine No. HB27986E up to Engine No U.S.A. and Canada only" for future use 144393.	• 1
5.	Engine	Add the following new detail:- 143393. Cap, oil filler. Add in remarks column:- "Fitted from Engine NoU.S.A. and Canada only". Note:- Part No. 143373 has been corrected to read:- 143393.	
5.	Engine	Correction to Amendment No. 4. 143373. Cap oil filler. Amend Part No. to read: - 143393.	
6.	Engine	133238. Adaptor, fan. DP0508. Dowel, fan adaptor. HB1316. Bolt. 108496. Bush. 108499. Sleeve. 108495. Washer. 107858. Piece, distance. HB0810. Bolt. 107857. Washer, tab. Add in remarks column: "Fitted up to Commission Noonly". 211986. Fan Assembly. Amend note in remarks column to read: "Fitted from Engine No. HB20506E up to Engine Noonly". Add the following new details:- HB1314. Bolt, crankshaft. 307154. Fan. WM0831. Washer. 1.41712. Disc. DP0510. Dowel. 1.42118. Adaptor. Add in remarks column:- "Fitted from Engine Noand future".	
10.	Engine	WL0209. Washer, lock. Amend part number to read: - WP0036. Amend description to read: - Washer, plain. 2nd issue herewith.	
10.	Engine g	305273. Manifold, exhaust to HN2009 Nut. Amend note in remarks column by adding:- "Engine No. HB27986E". 100498. Nut, to 101436. Amend note in remarks column by adding:- "Engine No. HB27985E".	

Page No.	Section	Nature of Modification	
10 A	Engine	lst issue herewith.	
	• • • • • • • • • • • • • • • • • • • •	306483. Manifold, exhaust to HN0913. Bolt. Amend note in remarks column by adding:- "Engine No. HB27986E".	
10A	Engine	138350. Adaptor, to CS4018. Clip. Amend note in remarks column by adding:- "Engine No. HB27986E".	
		306483. Manifold exhaust. Add in remarks column:- "Fitted from Engine No. HB27986E up to Engine Noonly".	1.
		Add the following new details:- 144642. Manifold, exhaust. 118557. Stud, 5/16" UNF x 1. Add in remarks column:- "Fitted from Engine Noand future".	1. 2.
10A	Engine	307390. Manifold, inlet. Add note in remarks column:- "Fitted from Engine No. HB27986E and future". All countries except U.S.A. and Canada. "Fitted from Engine No. HB27986E up to Engine No. U.S.A. and Canada only". for future use 212770.	1.
		Add the following new details:- 212770. Manifold inlet. 143407. Emission control valve. HB0707. Bolt. TN3207. Nut, nyloc, thin. 138530. Adaptor, emission valve hose. WF0513. Washer, fibre on adaptor. 143313. Bracket valve. (Manifold attach. stud). 143706. Hose, valve to manifold. 143323. Hose, valve to rocker cover. CS4012. Clip, hose, attachment. Add in remarks column:- "Fitted from Engine No	1. 1. 1. 1. 1. 1. 1. 4. a only".
10A	Engine	140947. Adaptor Assembly. 140950. Bolt, banjo. Bracket above items together and add in remarks col "Fitted up to Engine Noonly".	1. 1. umn:-
10A	Engine	Add the following new details:- 145407. Adaptor, water heater. 145155. Bolt, banjo. 145156. Washer, large. 144988. Washer, small. Add in remarks column:- "Fitted from Engine Noand future". 2 144988. Washer, copper. Add in remarks column:- "Fitted up to Engine Noonly".	1. 1. 1. 1.

Page No.	Section	Nature of Modification
13,	Engine	To follow Part No. 511827 Body Assembly, Rear add:- 514782. Body Assembly, Rear. To follow Part No. 511828. Spindle Throttle Assembly Rear, Carburettor, add the following:- 514781. Spindle Throttle Assembly, Rear Carburector. 1.
		Amend Lever Throttle Stop. Rear Carburettor to read:- Abutment Throttle Stop, Rear Carburettor and add:- Part No. 58330.
		Add the following new details to follow Part No. 58330:- 58331. Screw, stop. 1. 58329. Nut, screw stop.
		2nd issue herewith.
		210957. Carburettor Assembly, Front. Amend note in remarks column by adding:- "Engine No. HB27985E".
		211737. Carburettor Assembly, Rear. Amend note in remarks column by adding:- "Engine No. HB27985E".
13.	Engine	513757. Gasket Set, Carburettor. Amend note in remarks column by adding:- "Engine No. HB27985E".
		512655. Body Assembly, Front. Amend note in remarks column by adding:- "Engine No. HB27985E".
		514782. Body Assembly Rear. Amend note in remarks column by adding:- "Engine No. HB27985E".
		59669. Disc Throttle. Amend note in remarks column by adding:- "Engine No. HB27985E".
		514781. Spindle Thottle Assembly. Rear Carburettor. Amend note in remarks column by adding:- "Engine No. HB27985E".
		57409. Screw, throttle disc to spindle. Amend note in remarks column by adding:- "Engine No. HB27985E".
13.	Engine	58330. Abutment. 58331. Screw. 58329. Nut. Amend note in remarks column by adding:- "Engine No. HB27985E".
		511415. Screw, slow running. Amend note in remarks column by adding:- "Engine No. HB27985E".
		57413. Spring, slow running screw. Amend note in remarks column by adding:- "Engine No. HB27985E".

Page No.	Section	Nature of Modification
13.	Engine	140104. Lever, carburettor operating. Amend note in remarks column by adding:- "Engine No. HB27985E".
13.	Engine	502619. Screw, volume control. Amend note in remarks column by adding:- "Engine No. HB27985E".
		57413/1. Spring, volume control screw. Amend note in remarks column by adding:- "Engine No. HB27985E".
13.	Engine	502619. Screw, volume control. Amend part number to read: - 502169.
14.	Engine	511816. Emulsion Block. 510553. Tube, emulsion. Add in remarks column:- "Fitted up to Engine No. HB6798E only".
		Add the following new details:- 512657. Emulsion Block. 512086. Tube, emulsion. Add in remarks column:- "Fitted from Engine No. HB6799E and future".
		2nd issue herewith.
		509947. Float Carburettor to 509956. Valve Needle. Amend note in remarks column by adding:- "Engine No. HB27985E".
14.	Engine	512658. Washer, needle valve. Amend note in remarks column by adding:- "Engine No. HB27985E".
14.	Engine	509958. Gasket, to 511818. Bleed air econstat. Amend note in remarks column by adding:- "Engine No. HB27985E".
		512567. Emulsion Block. Amend note in remarks column by adding:- "Engine No. HB27985E".
		59719/105. Jet, main. Amend note in remarks column by adding:- "Engine No. HB27985E".
14.	Engine	57430. Holder, main jet. 57431. Washer, main jet holder. Amend note in remarks column by adding:- "Engine No. HB27985E".
		512086. Tube, emulsion. Amend note in remarks column by adding:- "Engine No. HB27985E".
		57918/160. Jet, air correction. 59720/35. Jet, pilot. 501997. Screw, bleed, pilot jet. Amend note in remarks column by adding:- "Engine No. HB27985E".

Pag No		Section	Nature of Modification	
14	4.	Engine	509954. Gasket, emulsion block. 59682. Screw, emulsion block to main body. Amend note in remarks column by adding:- "Engine No. HB27985E".	
1	5.	Engine	2nd issue herewith.	
1	5.	Engine	511819. Starter Assembly, front, to 509978. Cover Starter rear. Amend note in remarks column by adding:- "Engine No. HB27985E".	
			57416. Spring, locating ball. Amend note in remarks column by adding:- "Engine No. HB27985E".	
			57415. Ball, locating starter lever. Amend note in remarks column by adding:- "Engine No. HB27985E".	
		,	134882. Link and Lever Assembly. Amend note in remarks column by adding:- "Engine No. HB27985E".	
			509946. Connection, flexible assembly, link attachment. to 128262. Sleeve, connecting. Amend note in remarks column by adding:- "Engine No. HB27985E".	
1	6.	Engine	2nd issue herewith.	
			138892. Clip, securing suction pipe to petrol pipe. Amend note in remarks column by adding:- "Engine No. HB27985E".	
1	6A.	Engine	1st issue herewith.	
			Amend note in remarks column by adding:- "Engine No. HB27986E".	
1	6B.	Engine	1st issue herewith.	
			Amend note in remarks column by adding:- "Engine No. HB27986E".	
1	6C.	Engine	1st issue herewith.	
			Amend note in remarks column by adding:- "Engine No. HB27986E".	
1	6C.	Engine	137887. Washer, insulating. Amend part number to read: - 137882.	
			306769. Petrol Pipe Assembly, Pump to Carb. Amend part number to read: - 307471.	
1 •	7.	Engine	2nd issue herewith.	
•			Amend note in remarks column by adding:- "Engine No. HB27986E".	

Page No.	Section	Nature of Modification	
17A.	Engine	lst issue herewith.	
	**	Amend note in remarks column by adding:- "Engine No. HB27986E".	
17A.	Engine	Part No. 211453. Air Cleaner Assembly, to Part No. 138099. Hose, inclusive:— Amend note in remarks column to read:— "Fitted from Engine No. HB27986E and future". All countries except U.S.A. and Canada. "Fitted from Engine No. HB27986E up to Engine No U.S.A. and Canada only". For future use 210945.	•••••
18.	Engine	128404. Plug, sparking. Alter part number to read: - 143378.	6.
		126322. Pulley, fan. Add in remarks column:- "Fitted up to Engine Noonly".	
		Add the following new details:-	
		104897. Dynamo pulley. 102986. Dynamo Ventilator Assembly. Add in remarks column:-	1.
		"Fitted from Engine Noand future".	
		Note: - 104897. Dynamo pulley with 102987 Ventilator fan may be used for all replacements.	
18.	Engine	126322. Pulley, dynamo. Amend note in remarks column to read:- "Fitted up to Commission No. HB27610 only".	1.
		104897. Pulley, dynamo. 102986. Dynamo Ventilator Assembly. Amend note in remarks column to read:- "Fitted from Commission No. HB27611 and future". May be used for all replacements.	1.
19.	Clutch	136824. Clutch Cover Assembly. 116535. Driven Plate Assembly. Add in remarks column:- "Fitted up to Engine Noonly".	1.
19.	Clutch	Add the following new details:-	
		213148. Cover Assembly. 144863. Driven plate.	1. 1.
		515174. Plate pressure.	1.
		515173. Spring, thrust. (Cream and Light Green) Add in remarks column:- "Fitted from Engine Noand future".	9.
19.	Clutch	136824. Clutch Cover Assembly. 116535. Driven Plate Assembly. Amend note in remarks column to read: "Fisted up to Engine No. HB3050E only".	1.
		213148. Clutch Cover Assembly.	1.
		144836. Driven Plate. 515174. Plate Pressure.	1. 1.
		515174. Trate Tressure. 515173. Spring, thrust, cream and light green. Amend note in remarks column to read:- "Fitted from Engine No. HB30351E and future".	9.

Page No.	Section	Nature of Modification	
21.	Gearbox	HB0811. Bolt, transmission Unit to Engine. plate and block. Add in remarks column:- "Fitted up to Engine No. HB24430E only".	9.
		HB0812. Bolt, transmission unit to engine. plate and block. Add in remarks column:- "Fitted from Engine No. HB24431E and future".	9.
24.	Gear Shift Mechanism	113053. Seal, oil. Add in remarks column:- "Fitted up to Commission Noonly".	1.
25.	Engine Mounting	132669. Front Engine Mounting. Add in remarks column:- "Fitted up to Commission Noonly".	2.
25.	Engine Mounting	Add the following new details:- 144310. Front Engine Mounting. "Fitted from Commission Noand future".	2.
27.	Front Suspension	Part No. 132667. Retainer, felt seal. Delete the above item from the catalogue.	1.
31.	Rear Axle	Pinion037/.039.	A/R.
		145282. Washer, thrust, spherical differential Pinion033/.035.	A/R.
32.	Rear Axle	128133. Unit Package. Amend part number to read: - 513800.	2.
32.	Rear Axle	144099. Circlip056/.057. Blue. 144100. Circlip057/.058. Green. 144101. Circlip058/.059. No. colour. 144102. Circlip059/.060. Yellow. 144103. Circlip060/.061. Orange. 144104. Circlip061/.062. Magenta. 144105. Circlip062/.063. Black. 144106. Circlip063/.064. Pink.	A/R. A/R. A/R. A/R. A/R. A/R. A/R. A/R.
32.	Rear Axle	141135. Seal, dirt. Amend part number to read:- 141185.	4.
32.	Rear Axle	119571. Bearing, nylon, inner hub. 119572. Piece, distance. Add note in remarks column:- "Fitted up to Commission No. HB208054 only".	4. 2.
	Ā	514370. Rear Bearing and Sealing Kit. May be used for all replacements purposes on vehicles up to Commission No. HB28054 only".	1.

Page No.	Section	Nature of Modification	
3 2.	Rear Axle	141218. Bearing, rear hub inner. 141221. Piece, distance.	4. 2.
		141443. Shim, rear inner hub. (Outer). 141444. Shim, rear inner hub. (Inner). 141435. Seal, dirt. Add in remarks column:-	4. 4. 4.
33.	Rear Suspension	"Fitted from Commission No. HB28055 and future". 123100. Damper, rear. Add in remarks column:- "Fitted up to Commission Noonly".	2.
		Add the following new detail:- 123100/4. Damper, rear. Add in remarks column:- "Fitted from Commission Noand future". Note:- Latest part may be used for all replacements.	2.
34.	Propellor Shaft and Road Wheels	303804. Road Wheel. Amend note in remarks column to read:- "Fitted from Commission No. HB892 up to Commission HB24515 only".	5. No.
		Add the following new details:- 304259. Road Wheel. (Heavy Duty). Add in remarks column:-	5.
		"Fitted from Commission No. HB891 up to Commission HB24515 only".	No.
		307401. Road Wheel. 307406. Road Wheel (Heavy Duty). Add in remarks column:- "Fitted from Commission No. HB24516 and future".	5. 5.
		128133. Unit Package. Amend part number to read: - 513800.	2.
			40. 20.
			60.
34.	Propellor Shaft and Road Wheels	142701. Nut, adaptor attachment. Amend part number to read: - 144504.	16.
	Road Wheels	307134. Wheel trim. Add in remarks column:- "Fitted up to Commission Noonly".	4.
34.	Propellor Shaft and Road Wheels	Add the following new detail:- 307583. Wheel trim. Add in remarks column:- "Fitted from Commission Noand future".	4.
34.	Propellor Shaft and Road Wheels	514931. Spoke, long.	1. 1. 40. 20. 60.

Page No.	Section	Nature of Modification	
35.	Steering	110961. Flexible Joint Assembly. 110959. Steering Column Adaptor. 109438. Bolt. YN2907. Nut, nyloc. Add in remarks column:- "Fitted up to Commission No. HB27699 only".	1. 2. 2. 2.
		Add the following new details:- 142140. Flexible Joint Assembly. 142139. Steering Column Adaptor. HU0810. Bolt. TN3208. Nut, nyloc. Add in remarks column:- "Fitted from Commission No. HB27700 and future".	1. 2. 2. 2.
35.	Steering	Add the following new detail:- To follow Part No. 128002. 145108. Plug, nylon. (Fitted in rack and pinion body). Add in remarks column:- "Fitted from Commission Noand future".	1.
36.	Steering	133874. Ring, clamp. Add note in remarks column:- "Fitted up to Commission Noonly".	2.
		Add the following new detail:- 136885. Clamp Assembly Rack and Pinion. Add note in remarks column:- "Fitted from Commission Noand future".	2.
38.	Acceleration Control	2nd issue herewith. 139918. Accelerator Pedal and Support Bracket	.H.S.
		Amend note in remarks column by adding:- "Commission No. HB20860". YT3706. Screw to PC0008 Pin. Amend note in remarks column by adding:- "Commission No. HB20860".	
39.	Acceleration Control	2nd issue herewith.	
39.	Acceleration Control	140106. Link to TN3207. Nut. Amend note in remarks column by adding:- "Commission No. HB20860".	
39A.	Acceleration Control	1st issue herewith.	
39A.	Acceleration Control	Amend note in remarks column to read:- "Fitted from Commission No. HB20861 up to Commission Noonly".	
		212680. Accelerator Cross Shaft Assembly. R.H.S. Amend to read:- L.H.S.	
		212679. Accelerator Cross Shaft Assembly. L.H.S.	

Amend to read: - R.H.S.

Page No.	Section	Nature of Modification	
46.	Radiator	101416. Tap, drain.	
46.	Radiator	Alter part number to read:- 132565. 305306. Radiator Block Assembly. Amend note in remarks column to read:- "Fitted up to Commission No. HB26149 only". See page 47 fir future.	
		136402. Header Tank Assembly. Amend note in remarks column to read:- "Fitted up to Commission No. HB26149 only".	
47.	Radiator	512958. Screw. set. Add in remarks column:- "Fitted from Commission Noand future".	2.
		Add the following new details:- HU0708. Screw, set. 105291. Packing piece. Add in remarks column:- "Fitted from Commission Noup to Commission Noand future".	2.
47.	Radiator	307125. Radiator Block Assembly. Amend note in remarks column to read:- "Fitted from Commission No. HB26150 and future".	
		209014. Water, elbow. Amend note in remarks column to read:- "Fitted from Commission No. HB26150 and future". 137632. Radiator overflow bottle. Amend note in remarks column to read:- "Fitted from Commission No. HB26150 and future".	
47.	Radiator	Accumulative Amendment No. 3 Page 3. 512958. Screw, set. Page 4.	1.
		HU0708. Screw, set. 105291. Packing Piece. Delete the above items from the amendment.	2. 1.
		512958. Screw, set. Amend part number to read: - HU0708. Amend note in remarks column to read: - "Fitted from Commission No. HB26150 and future".	2.
47.	Radiator	Add the following new detail:- 105291. Packing Piece. Add in remarks column:- "Fitted from Commission No. HB26150 and future".	
49.	Petrol System	115783. Connector petrol pipe, front. 134057. Pipe Assembly, Front Connector to pump. Add in remarks column:- "Fitted up to Commission Noonly".	1.
		Add the following new details:- 122796. Connector Petrol pipe, front. 144587. Pipe Assembly, (Bent) Add in remarks column:- "Fitted from Commission Noand future".	l. 1.

Page No.	Section	Nature of Modification	
49.	Petrol System	125170. Connector, petrol pipe, centre, and rear. 2. Add note in remarks column to read:- "Fitted up to Engine No. HB27985E only".	
53.	Electrical Equipment	 2nd issue herewith. 211414. Distributor Assembly. Amend note in remarks column by adding:- "Engine No. HB27985E". 212873. Distributor Assembly. Amend note in remarks column by adding:- "Engine No. HB27986E". 513996. Mainshaft and Cam Assembly. Amend note in remarks column by adding:- "Engine No. HB27986E". 514954. Mainshaft and Cam Assembly. Amend note in remarks column by adding:- "Engine No. HB27986E". 513997. Spring, set, advance weight. Amend note in remarks column by adding:- "Engine No. HB27986E". 	
54.	Electrical Equipment	"Engine No. HB27986E". 514002. Spring, set, advance weight. Amend note in remarks column by adding:- "Engine No. HB27986E". 200535. Starter Motor. Add in remarks column:-	
54.	Electrical Equipment	"Lucas No. 25022 or 25079B". 501714. Armature Assembly. 500927. Bush, driving end bracket. 501704. Cap, shaft end. 1. 500892. Pinion and Sleeve Assembly. 501709. Nut, locating. Against above items add in remarks column:- "For use with Lucas 25022. only".	
54.	Electrical Equipment	Add the following new details:- 514026. Armature. 514025. Bushing and bearing. 514023. Sleeve, screwed. 511290. Cup, shaft. Add in remarks column:- "For use with Lucas No. 25079B only".	
62.	Electrical Equipment	Part No. 121400 to Part No. 508546, inclusive:- Amend note in remarks column to read as follows:- All countries except U.S.A. and Canada. "Fitted up to Commission No. HB25738 and intermittant from HB25739 up to HB26125 only". U.S.A. and Canada. "Fitted up to Commission No. HB26353 only".	
63.	Electrical Equipment	WP0004. Washer, plain. FC2803. Nut, spire. Bracket together and add in remarks column:- "Fitted up to Commission No. HB26289 only".	

Page	Section	Nature of Modification	
 No.			
63.	Electrical	Add the following new details:-	0
	Equipment	WM0055. Washer, plain. WL0205. Washer, lock.	8. 8.
		HN2005. Nut.	8.
		Bræket together and add in remarks column:- "Fitted from Commission No. HB26290 and future".	
63.	Electrical	FC2803/9. Nut, spire.	8.
	Equipment	WP0004. Washer, plain.	8.
		YF7306. Set screw.	8.
		Amend note in remarks column to read:- "Only required when stop tail flasher lamps without studs in base are fitted".	
		WM0055. Washer, plain.	8.
		WL0205, Washer, lock.	8.
		HN2005. Nut. Amend note in remarks column to read:-	8.
		"Only required when stop tail flasher lamps with studs in base are fitted".	
64.	Electrical	606241. Courtesy Light Switch.	
	Equipment	Delete line in remarks column.	
		606242. Courtesy Light Switch.	
		Delete line completely.	
65.	Electrical	139529. Stop light switch.	1.
	Equipment	Amend part number to read: - 134529.	
66.	Electrical	116012. Battery, dry. (Export).	1.
	Equipment	Add in remarks column:-	
		"Fitted up to Commission No. HB27413 only".	
66.	Electrical	Add the following new detail:-	
	Equipment	514124. Battery, dry.	1.
		Add in remarks column:- "Fitted from Commission No. HB27414 and future".	
		(Not Canadian Market).	
		Add the following new detail:-	
		515189. Battery, dry. (Exide).	1.
		Add in remarks column: - Alternative to	1
		514124. Battery dry. (Lucas)	1.
68.	Electrical	128027. Washer.	1.
	Equipment	Delete the above item.	
69.	Electrical	128089. Washer.	1.
	Equipment	Delete the above item.	
		402339. Cable, inner. R.H.S.	1.
		Amend part number to read: - 402449.	
		402337. Cable, outer, primary R.H.S.	1.
		Amend part number to read: - 401832.	
69.	Electrical	401816. Cable, outer, secondary R.H.S.	1.
٥,٠	Equipment	Amend part number to read: - 402450.	•
		402341. Cable, inner. L.H.S.	1.
		Amend part number to read: - 402453.	

Page No.	Section	Nature of Modification	
69.	Electrical Equipment	402340. Cable, outer, primary L.H.S. Amend part number to read: - 401836.	1.
	**	401816. Cable, outer, secondary L.H.S. Amend part number to read: 402450.	1.
69.	Electrical E q uipment	Part No. 401831. Cable, inner, to part number 401833, Cable outer secondary L.H.S. only inclusive. Amend note in remarks column to read: "Fitted from Commission No. HB15001 up to Commission No. HB27985 only".	ion
69.	Electrical E q uipment	Part No. 402449. Cable inner, to part number 402450. Cable, outer, seconadry L.H.S. only inclusive. Amend note in remarks column to read:- "Fitted from Commission No. HB27986 and future".	
70.	Body & Fittings	568042. Amend description to read:- Body complete, painted and trimmed, Saloon. Complete with front seat.	1.
		568044. Amend description to read:- Body complete, Painted and trimmed, Convertible. Complete with front seats.	1.
70.	Body & Fittings	Add the following new details:- 570486. Body complete, painted and trimmed. less seat (Saloon).	1.
		570487. Body complete, painted and trimmed less seat (Convertible).	1.
71.	Body & Fittings	Add the following new detail:- 903600. Roof Panel Assembly. (Sliding Roof). Add in remarks column:- (Special Orders)	1.
73.	Body & Fittings	607670. Support angle rear foor seal. 708548. Support angle rear door seal. L.H. 708549. Support angle rear door seal R.H. Delete body notes in remarks column and add alternative	2. 1. 1. ves.
74.	Body & Fittings	YH8506. Screw, S/T, gearbox cover to dash side. front lower and front floor. Add in remarks column:- "Fitted up to Commission Noonly".	10.
		Add the following new detail:- YH6507. Screw, S/T. Add in remarks column:- "Fitted from Commission Noand future"	12.
75.	Body & Fittings	601553. Angle battery, retaining. 607847. Rod, battery fixing. Bracket above together and add in remarks column:- "Fitted up to Commission No. HB27413 only". (Not Canadian Markets).	1. 2.
75.	Body & Fittings	Add the following new details:- 142087. Angle, battery, retaining. 618434. Rod, battery fixing. Bracket together and add in remarks column:- "Fitted from Commission No. HB27414 and future".	1. 2.

Page No.	Section	Nature of Modification	
75.	Body & Fittings	602053. Rubber battery. Add in remarks column:- "Fitted up to Commission Noonly".	1.
		Add the following new detail:- 613155. Rubber pad, battery. Add in remarks column:- "Fitted from Commission Noand future". May be used for all replacements.	1.
78.	Body & Fittings	705803. Finisher, seal, roof to deck. 613957. Finisher, seal, roof to deck. Delete body notes in remarks column and add alternative fitment.	2.
78.	Body & Fittings	902289. Roof Panel Assembly. Amend Part No. to read; - 903083.	
79.	Body & Fittings	WF0504. Washer, fibre. Amend part number to read: - 618955.	2.
80.	Body & Fittings	WM0067. Washer, medium. Amend quantity to read: - 4 off.	2.
80.	Body & Fittings	HU0706. Screw, set. Alter part number to read: - HU0708.	2.
82.	Body & Fittings	806607. Valance Panel Assembly R.H Amend note in remarks column to read:- "Fitted up to Commission No. HB26149 only".	1.
82.	Body & Fittings	808954. Valance Panel Assembly. R.H. Amend note in remarks column to read:- "Fitted from Commission No. HB26150 and future".	1.
86.	Body & Fittings	YF7503. Screw, S/T. remote control to door. Alter part number to read: - YZ3504.	6.
88.	Body & Fittings	FJ2444/9. Nut, fix. Add in remarks column:- "Fitted up to Body Noonly".	4.
		903899. Panel Veneered Assembly Facia L.H.S. 903900. Panel Veneered Assembly Facia R.H.S. 569994. Panel Veneered Assembly Facia L.H.S. (U.S.A. and Canada). Amend note in remarks column to read:- "Fitted from Body No. HB15001 up to Body No	1. 1. 1.
		705451. Lid cubby box R.H.S. 705450. Lid cubby box L.H.S. Add note in remarks column:- "Fitted up to Body Noonly".	1.
•		Part No. 611565 to Part No. TW0604 inclusive. Bracket together and add in remarks column:- "Fitted up to Commission No	

Page No.	Section	Nature of Modification	
88.	Body & Fittings	Add the following new details:- 905201. Panel Veneered Assembly Facia L.H.S. 905202. Panel Veneered Assembly Facia R.H.S. 573447. Panel Veneered Assembly Facia L.H.S. (U.S.A. and Canada). Add note in remarks column to read:- "Fitted from Body Noand future". May for all replacements.	l. l. l. be used
88.	Body & Fittings	710446. Veneered lid cubby box L.H.S. 710447. Veneered lid cubby box R.H.S. 619419. Hinge assembly cubby box lid, TW0403. Woodscrew, countersunk head. Add note in remarks column:- "Fitted from Body Noand future".	1. 1. 1. 8.
93.	Body & Fittings	127751. Adaptor, cylinder head. Add in remarks column:- "Fitted up to Body Noonly".	1.
94.	Body & Fittings	101343. Adaptor, water pump body. Add in remarks column:- ''Fitted up to Body Noonly''.	1.
94.	Body & Fittings	101343. Adaptor, water pump body. Amend note in remarks column to read:- "Fitted up to Body No. HB27985 only".	1.
96.	Body & Fittings	Add the following new detail:- 571380. Backlight glass (Heated). Add in remarks column:- "Special Orders Only".	1.
96.	Body & Fittings	611439. Finisher weatherstrip quarterlight (Aluminium). 614406. Finisher weatherstrip quarterlight	2. 2.
		(Plastic). Delete body notes from remarks column and add alt fitment.	ernative
97.	Body & Fittings	703877. Bracket stay mounting. Add in remarks column:- "When stocks are exhausted use 618192".	1.
97.	Body & Fittings	Add the following new details:- 618192. Bracket Assembly, Stay Mounting. 608237. Pin, Pivot. Add in remarks column against 608237 only:- "For use with 703877 Bracket Assembly only".	1.
		Add the following new detail:- 618193. Pin Pivot. Add in remarks column:- "For use with 618192 Bracket Assembly only".	1.
97.	Body & Fittings	618192. Bracket Assembly Stay Mounting. Add in remarks column:- "Fitted from Body No. HB26700 and future". May be used for all replacements.	1.

101.	Body & Fittings		
101.			
		Add the following new details:- 562132. Tonneau Cover Kit. R.H.S. (Sebring White)	1.
	Tittings		1.
		562131. Tonneau Cover Kit. L.H.S. (Sebring White)	1.
		562920. Tonneau Cover Kit. R.H.S. (Black).	1.
		562919. Tonneau Cover Kit. L.H.S. (Black).	
		610125. Bracket Assembly. (Outer	6.
		610124. Tonneau to Facia. (Inner.	1.
		704961. Cover Assembly, Seating Compartment. R.H.S. Sebring White).	1.
	ļ	704952. Cover Assembly, Seating Compartment L.H.S. Sebring White).	1.
		704960. Cover Assembly, Seating Compartment R.H.S. (Black).	1.
		704951. Cover Assembly, Seating Compartment L.H.S. (Black).	1.
		561335. Fastener Zip.	1.
		562133 Frateres)	24.
		562134. Durable dot.) Button socket.	24.
102.	Body &	Add the following new detail:-	
102.	Fittings	572566. Clip, tubular.	2.
104.	Body &	703988. Listing rail. No. 1.	1.
	Fittings	703989. Listing rail. No. 2.	1.
		703990. Listing rail. No. 3. Bracket above items together and add in remarks colu Not required when sliding roof is fitted.	l. imn:-
		Add the following new detail:- 707288. Headling Assembly. Add in remarks column:- Sliding roof condition (Special Orders).	1.
105.	Body & Fittings	808209. Millboard das side and map pocket assembly R.H. L.H.S. Matador Red. Amend part number to read:- 808204.	
117. A	Accessories	Add the following new detail:- 569116. Cigarette lighter.	1.
117. A	Accessories	122744. Thermostat Unit. (Winter Setting). Amend note in remarks column to read:- "Fitted up to Commission No. HB23300 only". for future use see page 9.	1.
118. A	Accessories	512581. Oil Pressure Gauge Kit. lbs/sq/in. Amend part number to read:- 514833.	1.
		512582. Oil Pressure Gauge Kit. Metric. Amend part number to read:- 514834.	1.
		138477. Pipe Oil Assembly. Amend part number to read:- 143944.	1.
		138476. Adaptor. Amend part number to read:- 143943.	1.

Page
No.

Section

118.	Accessories	Add the following new details:- 143167. Harness eye bolt, mounting bracket assembly. 615970. Washer Assembly. 612531. Eye Bolt. WL0210. Washer, lock. 550960. Rivet pop. 511654. Washer, plain. Add in remarks column:- "Fitted from Commission No	2. 2. 4. 4. 4.
122.	Overdrive	513197. Front Casing Assembly. Add in remarks column:- "For use with unit 25/3316".	1.
122.	Overdrive	138926. Operating valve. Add in remarks column:- "For use with unit 25/3330".	1.
122.	Overdrive	513192. Body Assembly, Non-return valve. Add in remarks column:- "Fitted up to Gearbox No. 25/50009 only".	1.
		Add the following new details:- 514836. Front Casing Assembly. Add in remarks column:- "For use with unit 25/3330".	1.
		513218. Valve, operating. Add in remarks column:- "For use with unit 25/3316".	1.
		Note:- Front casing 514836 Operating Valve 138926 If fitted together may be used for all replacements.	
		Add the following new details:- 513207. Spring. 514888. Body. 514889. Support, pin. BL0014. Steel, ball. Add in remarks column:- "Fitted from Gearbox No. 25/5010".	1. 1. 1.

Page No.	Section	Nature of Modification	
1.	Engine	46549. Plug, core, front face and R. H. side of block. 46172. Plug, core, front face of cylinder block. 56172. Plug, core, rear face and L. H. side of block. Bracket above items together and amend note in remarks column:	5. 1. 3.
		"Fitted up to Engine Noonly". Add the following new details:- 144688. Plug, core (Bucket type) front face and R. H. side of block.	5.
		144686. Plug, core (Bucket type) rear face and L.H. side of block. 144687. Plug, core (Bucket type) front face of cylinder block. Add in remarks column:-	3. 1.
1.	Engine	"Fitted from Engine Noand future". 132873. Stud, gearbox and rear engine plate. Add in remarks column:- "Fitted up to Engine No. HB24430E only".	
		139836. Stud, gearbox and rear engine plate. Add in remarks column:- "Fitted from Engine No. HB24431E and future".	
2.	Engine	137374. Oil retaining cover. Add note in remarks column:- "Fitted up to Engine Noonly". Add the following new details:-	1.
		212262. Oil seal housing, rear. 143456. Seal, oil fitted in housing. Add in remarks column:- "Fitted from Engine Noand future".	1. 1.
2.	Engine	127400. Oil Pump Assembly. Add in remarks column:- "Fitted up to Engine No. HB20877E only".	1.
		Add the following new detail:- 139289. Cil Pump Assembly. Add in remarks column:- "Fitted from Engine No. HB20878E and future".	1.
2.	Engine	137374. Oil Retaining Cover Rear. Amend note in remarks column to read:- "Fitted up to Engine No. HB32487E only".	•
		212262. Housing Oil Seal. 143456. Seal, oil. Amend note in remarks column to read:- "Fitted from Engine No. HB32488E and future".	·
3.	Engine	208833. Rear Engine Plate. Add in remarks column:- "Fitted up to Engine No. HB24430E only".	1.
3	Engine	211514. Rear Engine Plate. Add in remarks column:- "Fitted from Engine No. HB24431E and future".	1.
3.	Engine	HU0806. Screw, set. Add in remarks column:- "Fitted up to Engine No. HB24430E only".	7.

Page No.	Section	Nature of Modification	
3.	Engine	HU0807. Screw, set. Add in remarks column:- "Fitted from Engine No. HB24431E and future".	7.
4.	Engine	27378. Plug, core, in rear of head. Add in remarks column:- "Fitted up to Engine Noonly".	1.
		Add the following new detail:- 144648. Plug, core, (Bucket type) in rear face of head. Add in remarks column:- "Fitted from Engine Noand future".	1.
5.	Engine	104823. Valve, tappet. Amend part number to read: - 144343. Add in remarks column: - "Fitted up to Commission No	12.
5.	Engine	Add the following new detail:- 143552. Valve, tappet. Add in remarks column:- "Fitted from Commission Noand future".	12.
5.	Engine	138176. Cap, oil filler. Amend note in remarks column to read:- Only required when Closed Circuit Breather is fitted. "Fitted from Engine No. HB27986E all countries except U. S. A. and Canada". "Fitted from Engine No. HB27986E up to Engine No U. S. A. and Canada only". For future use 144393.	1.
5.	Engine	Add the following new detail:- 144393. Cap, oil filler. Add in remarks column:- "Fitted from Engine No	1. y''.
5.	Engine	144343. Tappet, push rod. Amend note in remarks column to read:- "Fitted up to Engine No. HB28903 except HB28896 and HB28956 to HB28959 only".	12.
		143552. Tappet. Amend note in remarks column to read:- "Fitted on Engine No. HB28896 and from Engine No. HB28904 and future. With the exception of Engine No. HB28956 to HB28959".	12.
5.	Engine	143393. Cap oil filler. Amend note in remarks column to read:- "Fitted from Engine No. HB31829 U.S.A. and Canada onl	y''.
6.	Engine	Add the following new details:- To follow Part No. 119389. 142575. Shim.) Between crankshaft 145176. Shim.) and chain wheel. Add in remarks column:- "Fitted from Engine Noand future".	A/R. A/R.
6.	Engine	304950. Crankshaft. Amend note in remarks column to read:-	

"Fitted up to Engine No. HB32487E only".

Page No.	Section	Nature of Modification	
6.	Engine	Add the following new detail:- 307718. Crankshaft. Amend note in remarks column to read:- "Fitted from Engine No. HB32488E and future".	
9.	Engine	500921. Circlip between seal and washer. Add in remarks column:- "Fitted up to Engine Noonly".	1. "
		Add the following new detail to follow Part No. 500921:- 500047. Circlip water pump spindle. Add in remarks column:- "Fitted from Engine Noand future".	1.
9.	Engine	Add the following new detail:- 146431. Thermostat Unit. 88° C. opening. Add note in remarks column:- "Winter Setting. (Special Orders)".	1.
10.	Engine	WL0209. Washer, lock. Amend part number to read: - WP0036. Amend description to read: - Washer, plain.	
		2nd issue herewith.	
10.	Engine	305273. Manifold, exhaust to HN2009. Nut. Amend note in remarks column by adding:- "Engine No. HB27986E".	
		100498. Nut to 101346. Amend note in remarks column by adding:- "Engine No. HB27985E".	
10A.	Engine	lst issue herewith.	
10A.	Engine	307390. Manifold, inlet. Add note in remarks column:- "Fitted from Engine No. HB27986E and future". All countries except U.S.A. and Canada. "Fitted from Engine No. HB27986E up to Engine No	1.
		Add the following new details:- 212770. Manifold inlet. 143407. Emission control valve. HB0707. Bolt.) Bracket TN3207. Nut, nyloc, thin.) to valve. 138530. Adaptor, emission valve hose. WF0513. Washer, fibre on adaptor. 143313. Bracket, valve, (Manifold attach. stud). 143706. Hose, valve to manifold. 143323. Hose, valve to rocker cover. CS4012. Clip, hose, attachment. Add in remarks column:- "Fitted from Engine No. HB31829 U.S.A. and Canada or	1. 1. 1. 1. 1. 1. 1. 1. 4.
10A.	Engine	306483. Manifold exhaust. Amend note in remarks column to read:- "Fitted from Engine No. HB27986E and future".	1.

Page No.	Section	Nature of M odification	
10A.	Engine	140947. Adaptor. 140950. Bolt.) Adaptor to 144988. Washer.) manifold. Against the above items, add note in remarks column:- "Fitted up to Engine No. HB32362 only".	1. 1. 2.
		Add the following new details:- 145407. Adaptor water heater. 145155. Bolt.) Adaptor 145156. Washer, large hole.) to 144988. Washer, small hole.) Heater. Add in remarks column:- "Fitted from Engine No. HB32363 and future".	1. 1. 1.
13.	Engine	To follow Part No. 511827. Body Assembly, Rear add:-514782. Body Assembly, Rear. To follow Part No. 511828. Spindle Throttle Assembly, Rear, Carburettor, add the following:- 514781. Spindle Throttle Assembly, Rear Carburettor.	1.
		Amend Lever Throttle Stop, Rear Carburettor to read:- Abutment Throttle Stop, Rear Carburettor and add:- Part No. 58330.	
		Add the following new details to follow Part No. 58330:-58331. Screw, stop. 58329. Nut, screw, stop.	1. 1.
		2nd issue herewith. 210957. Carburettor Assembly, Front. Amend note in remarks column by adding:- "Engine No. HB27985E".	
13.	Engine	211737. Carburettor Assembly, Rear. Amend note in remarks column by adding:- "Engine No. HB27985E".	
13.	Engine	513757. Gasket Set, Carburettor. Amend note in remarks column by adding:- "Engine No. HB27985E".	
		512655. Body Assembly, Front. Amend note in remarks column by adding:- ''Engine No. HB27985E''.	
		514782. Body Assembly Rear. Amend note in remarks column by adding:- "Engine No. HB27985E".	
		59669. Disc throttle. Amend note in remarks column by adding:- "Engine No. HB27985E".	
		514781. Spindle Throttle Assembly, Rear Carburettor. Amend note in remarks column by adding:- "Engine No. HB27985E".	
13.	Engine	57409. Screw, throttle disc to spindle. Amend note in remarks column by adding:- "Engine No. HB27985E".	

Page No.	Section	Nature of Modification
13.	Engine	58330. Abutment. 58331. Screw. 58329. Nut. Amend note in remarks column by adding:- "Engine No. HB27985E".
		511415. Screw, slow running. Amend note in remarks column by adding:- "Engine No. HB27985E".
13.	Engine	57413. Spring, slow running screw. Amend note in remarks column by adding:- "Engine No. HB27985E".
13.	Engine	140104. Lever, carburettor operating. Amend note in remarks column by adding:- "Engine No. HB27985E".
13.	Engine	502619. Screw, volume control. Amend note in remarks column by adding:- "Engine No. HB27985E".
		57413/1. Spring, volume control screw. Amend note in remarks column by adding:- "Engine No. HB27985E".
13.	Engine	502619. Screw, volume control. Amend part number to read: - 502169.
14.	Engine	511816. Emulsion Block. 510553. Tube, emulsion. Add in remarks column:- "Fitted up to Engine No. HB67985E only".
		Add the following new details:- 512657. Emulsion Block. 512086. Tube, emulsion. Add in remarks column:- "Fitted from Engine No. HB6799E and future".
14.	Engine	2nd issue herewith.
		509947. Float Carburettor to 509956. Valve needle. Amend note in remarks column by adding:- "Engine No. HB27985E".
14.	Engine	512658. Washer, needle valve. Amend note in remarks column by adding:- "Engine No. HB27985E".
14.	Engine	509958. Gasket to 511818. Bleed air econstat. Amend note in remarks column by adding:- "Engine No. HB27985E".
		512567. Emulsion Block. Amend note in remarks column by adding:- "Engine No. HB27985E".
		59719/105. Jet, main. Amend note in remarks column by adding:- "Engine No. HB27985E".

Page No. ₌	Section	Nature of Modification
14.	Engine	57430. Holder, main jet. 57431. Washer, main jet holder. Amend note in remarks column by adding:- "Engine No. HB27985E".
14.	Engine	512086. Tube, emulsion. Amend note in remarks column by adding:- "Engine No. HB27985E".
14.	Engine	57918/160. Jet, air correction. 59720/35. Jet, pilot. 501997. Screw, bleed pilot jet. Amend note in remarks column by adding:- "Engine No. HB27985E".
14.	Engine	509954. Gasket, emulsion block. 59682. Screw, emulsion block to main body. Amend note in remarks column by adding:- "Engine No. HB27985E".
14.	Engine	509956. Membrane Assembly, Pump. Amend part number to read:- 509966.
15.	Engine	2nd issue herewith.
15.	Engine	511819. Starter Assembly, front to 509978 Cover starter rear. Amend note in remarks column by adding:- "Engine No. HB27985E".
		57416. Spring, locating ball. Amend note in remarks column by adding:- "Engine No. HB27985E".
		57415. Ball, locating starter lever. Amend note in remarks column by adding:- "Engine No. HB27985E".
		134882. Link and Lever Assembly. Amend note in remarks column by adding:- "Engine No. HB27985E".
15.	Engine	509946. Connection, flexible assembly, link. attachment to 128262 Sleeve, connecting. Amend note in remarks column by adding:- "Engine No. HB27985E".
16.	Engine	2nd issue herewith.
	**	138892. Clip, securing suction pipe to petrol pipe. Amend note in remarks column by adding:- "Engine No. HB27985E".
16A.	Engine	lst issue herewith.
		Amend note in remarks column by adding:- "Engine No. HB27985E".
16B.	Engine	lst issue herewith.
		Amend note in remarks column by adding:- ''Engine No. HB27986E''.
16C.	Engin e	ist issue herewith.

Page No.	Section	Nature of Modification	
16C.	Engine	Amend note in remarks column by adding:- "Engine No. HB27986E".	
1,6 C.	Engine	137887. Washer, insulating. Amend part number to read: - 137882.	
		306769. Petrol Pipe Assembly, Pump to Carb. Amend part number to read: - 307471.	1.
17.	Engine	2nd issue herewith.	
		Amend note in remarks column by adding:- "Engine No. HB27986E".	
17A.	Engine	lst issue herewith.	
		Amend note in remarks column by adding:- ''Engine No. HB27986E''.	
17A.	Engine	Part No. 211453. Air Cleaner Assembly, to Part No. 138099. Hose, inclusive. Amend note in remarks column to read:- "Fitted from Engine No. HB27986E and future". All countries except U. S. A. and Canada. "Fitted from Engine No. HB27986E up to Engine NoU. S. A. and Canada only". For future use 210945.	
18.	Engine	128404. Plug, sparking. Alter part number to read: - 143378.	6.
		Note:- 104897. Dynamo pulley with 102987. Ventilator fan may be used for all replacements.	
18.	Engine	126322. Pulley, dynamo. Add note in remarks column:- "Fitted up to Commission No. HB27610 only".	1.
		Add the following new details:- 104897. Pulley, dynamo. 102986. Dynamo Ventilator Assembly. Add note in remarks column:- "Fitted from Commission No. HB27611 and future". May be used for all replacements.	1. 1.
19.	Clutch	Add the following new details:- 213148. Clutch Cover Assembly. 144863. Driven Plate. 515174. Plate, pressure. 515173. Spring, thrust, cream and light green. Add note in remarks column:- "Fitted from Engine No. HB30351E and future".	1. 1. 1. 9.
19.	Clutch	To follow Part No. WL0208. Washer, spring. Add the following new detail:- 510250. Repair Kit. (Slave Cylinder).	1.
19.	Clutch *	511947. Plate, release lever. Amend part number to read:- 511497.	1.
19.	Clutch	136824. Clutch Cover Assembly. 116535. Driven Plate Assembly. Amend note in remarks column to read:- "Fitted up to Engine No. HB30350E only".	1. 1.

Page No.	Section	Nature of Modification	
19.	Clutch	507004. Plate, pressure. 512970. Spring thrust Yellow and Black. Against above items, add in remarks column:- "Fitted up to Engine No. HB30350 only".	1. 9.
21.	Gearbox	HB0811. Bolt, transmission Unit to Engine. plate and block Add in remarks column:- "Fitted up to Engine No. HB24430E only".	9.
		HB0812. Bolt, transmission unit to engine plate and block. Add in remarks column:- "Fitted from Engine No. HB24431E and future".	9.
24.	Gear Shift Mechanism	113053. Seal, oil. Add in remarks column:- "Fitted up to Commission Noonly".	1.
27.	Front Suspension	Part No. 132667. Retainer, felt seal. Delete the above item from the catalogue.	1.
31.	Rear Axle	Add the following new details:- 142562. Washer, thrust, spherical differential pinion037/.039".	A/R.
		145282. Washer, thrust, spherical differential pinion033/.035".	A/R.
32.	Rear Axle	128133. Unit Package. Amend part number to read: - 513800.	2.
32.	Rear Axle	Add the following new details:- 144098. Circlip055/.056. Red. 144099. Circlip056/.057. Blue. 144100. Circlip057/.058. Green. 144101. Circlip058/.059. No colour. 144102. Circlip059/.060. Yellow. 144103. Circlip060/.061. Orange. 144104. Circlip061/.062. Magenta. 144105. Circlip062/.063. Black. 144106. Circlip063/.064. Pink. 144107. Circlip064/.065. Violet.	A/R. A/R. A/R. A/R. A/R. A/R. A/R. A/R.
32.	Rear Axle	141135. Seal, dirt. Amend part number to read:- 141185.	4.
32.	Rear Axle	119571. Bearing, nylon inner hub. 119572. Piece, distance. Add note in remarks column:- "Fitted up to Commission No. HB208054 only".	4. 2.
32.	Rear Axle	514370. Rear Bearing and Sealing Kit. May be used for all replacements purposes on vehicles up to Commission No. HB208054 only".	1.
32.	Rear Axle	141218. Bearing, rear hub inner. 141221. Piece, distance. 141443. Shim, rear inner hub. (Outer) 141444. Shim, rear inner hub. (Inner) 141435. Seal, dirt. Add in remarks column:- "Fitted from Commiss on No. HB28055 and future".	4. 2. 4. 4.
33.	Rear Suspension	123100. Rear damper. Add note in remarks column:- Writted up to Commission No. HR31397 only!!	2.

Page No.	Section	Nature of Modification	
33.	Rear Suspension	Add the following new details:- 123100/4. Rear damper. Add note in remarks column:- "Fitted from Commission No. HB31388 and future".	2.
34.	Propellor Shaft and Road Wheels	303804. Road Wheel. Amend note in remarks column to read:- "Fitted from Commission No. HB892 up to Commission No. HB24515 only".	5.
		Add the following new detail:- 304259. Road Wheel (Heavy Duty) Add in remarks column:- "Fitted from Commission No. HB891 up to Commission No. HB24515 only".	5.
		307401. Road Wheel. 307406. 'Road Wheel (Heavy Duty) Add in remarks column:- "Fitted from Commission No. HB24516 and future".	5. 5.
		128133. Unit Package. Amend part number to read: 513800.	2.
		Add the following new details:- 514930. Spoke, short. 514931. Spoke, long. 502650. Spoke, nipple.	40. 20. 60.
34.	Propellor Shaft and Road Wheels	142701. Nut, adaptor attachment. Amend part number to read:- 144504.	16.
34.	Propellor Shaft and Road Wheels	307134. Wheel Trim. Add in remarks column:- "Fitted up to Commission Noonly".	4.
34.	Propellor Shaft and Road Wheels	Add the following new detail:- 307583. Wheel Trim. Add in remarks column:- "Fitted from Commission Noand future".	4.
35.	Steering	110961. Flexible Joint Assembly. 110959. Steering column adaptor. 109438. Bolt. YN2907. Nut, nyloc. Add in remarks column:- "Fitted up to Commission No. HB27699 only".	1. 2. 2. 2.
35.	Steering	Add the following new details:- 142140. Flexible Joint Assembly. 142139. Steering Column Adaptor. HU0810. Bolt. TN3208. Nut, nyloc. Add in remarks column:- "Fitted from Commission No. HB27700 and future".	1. 2. 2. 2.
35.	Steering	Add the following new detail:- To follow Part No. 128002. 145108. Plug, nylon (fitted in rack and pinion body) Add in remarks column:- "Fitted from Commission Noand future".	1.

Page No.	Section	Nature of Modification		1
36.	Steering	133874. Ring, clamp. Add note in remarks column:- "Fitted up to Commission Noonly".		2.
36.	Steering	Add the following new details:- 136885. Clamp Assembly Rack and Pinion. Add note in remarks column:- "Fitted from Commission Noand future	e''.	2.
37.	Acceleration Control	131294. Accelerator control cable inner R. H. S. Delete R. H. S. from description.		
		131295. Accelerator control cable outer R. H. S. Delete R. H. S. from description.		
		132752. Accelerator control cable outer L. H. S. Delete complete line.		
		132751. Accelerator control cable outer L. H. S. Delete complete line.		
			11.	1.
		Amend to read:- 134533. Trunnion. X	11.	1.
		TR6452. Setscrew. X	12.	1.
		Amend to read:- HU0504. Setscrew. X	12.	1.
		Below 134533. Trunnion, add the following line:- WP0020. Washer, plain.		1.
38.	Acceleration Control	2nd issue herewith.		
	Gontror	139918. Accelerator Pedal and Support Bracket. Assembly, R. H. S. to 139909 Clip. accelerator L. H. S. Amend note in remarks column by adding:- "Commission No. HB20860".		
		134998. Bracket Assembly, Accelerator Mounting to PC0007. Pin, cotter. Amend note in remarks column by adding:- "Commission No. HB20860".	Stop	
		YT3706. Screw to PC0008 Pin. Amend note in remarks column by adding:- "Commission No. HB20860".		
39.	Acceleration Control	2nd issue herewith.		•
39.	Acceleration Control	140106. Link to TN3207. Nut. Amend note in remarks column by adding:- "Commission No. HB20860".		
39A.	Acceleration Control	lst issue herewith.		
39A.	Acceleration Control	Against all items. Amend note in remarks column to read:- "Fitted from Commission No. HB20861 up to Commission Noonly".		

Page No.	Section	Nature of Modification	
39A.	Acceleration Control	212680. Accelerator Cross Shaft Assembly. R. H. S. Amend to read: - L. H. S.	
	*\	212679. Accelerator Cross Shaft Assembly. L. H. S. Amend to read: - R. H. S.	
40.	Clutch & Brake Pedals	205593. Clutch Pedal Assembly. (Complete with mounting Bracket).	1.
		119581. Bracket Assembly Pedal Mounting. 122252. Pedal Clutch Assembly. Bracket above items together and add in remarks column:- "Fitted up to Commission No. HB3140 only".	1.
		Add the following new details:- 210864. Clutch Pedal Mounting Assembly. R. H. S. 137842. Bracket Assembly Pedal Mounting. 137009. Pedal Clutch Assembly. 210863. Clutch Pedal Mounting Assembly. L. H. S. 137842. Bracket Assembly Pedal Mounting. 122252. Pedal Clutch Assembly. Against each of the following new details add note in remarks column:- "Fitted from Commission No. HB3141 and future".	1. 1. 1. 1.
45.	Brakes	508433. Rear wheel cylinder service kit. Amend part number to read:- 515155.	1.
46.	Radiator	101416. Tap, drain. Alter part number to read:- 132565.	
46.	Radiator	305306. Radiator Block Assembly. Amend note in remarks column to read:- "Fitted up to Commission No. HB26149 only". See Page 47 for future. 136042. Header Tank Assembly. Amend note in remarks column to read:-	
47.	Radiator	"Fitted up to Commission No. HB26149 only". Add the following new details:- HU0708. Screw, set. 105291. Packing piece. Add in remarks column:- "Fitted from Commission Noup to Commission Noand future".	2. 1.
47.	Radiator	307125. Radiator Block Assembly. Amend note in remarks column to read:- "Fitted from Commission No. HB26150 and future". 209014. Water, Elbow. Amend note in remarks column to read:- "Fitted from Commission No. HB26150 and future".	
47.	Radiator	137632. Radiator overflow bottle. Amend note in remarks column to read:- "Fitted from Commission No. HB26150 and future".	
47.	Radiator	512958. Screw, set. Amend part number to read:- HU0708. Add note in remarks column:- "Fitted from Commission No. HB26150 and future".	2.

Page No.	Section	Nature of Modification	
47.	Radiator	Add the following new detail:- 105291. Packing piece. Add in remarks column:- "Fitted from Commission No. HB26150 and future".	
49.	Petrol System	115783. Connector petrol pipe, front. 134057. Pipe Assembly, front connector to pump. Add in remarks column:- "Fitted up to Commission Noonly".	1.
		Add the following new details:- 122796. Connector petrol pipe, front. 144587. Pipe assembly, (Bent). Add in remarks column:- "Fitted from Commission Noand future".	1. 1.
49.	Petrol System	125170. Connector, petrol pipe, centre and rear. Add note in remarks column to read:- "Fitted up to Engine No. HB27985E only".	2.
50.	Service Kits	122745. Spanner open ended. 59426. Spanner open ended. 509361. Spanner open ended. 125505. Feeler Gauge Assembly. Against the above items add note in remarks column:- "Not required for U. S. A.".	1. 1. 1.
		Add the following new detail:- 134336. Nave plate removal tool.	1.
52.	Electrical Equipment	134891. Arm Clamp Assembly. Amend part number to read:- 511862.	1.
53.	Electrical Equipment	2nd issue herewith.	
		211414. Distributor Assembly. Amend note in remarks column by adding:- "Engine No. HB27985E".	
		212873. Distributor Assembly. Amend note in remarks column by adding:- "Engine No. HB27986E".	
		513996. Mainshaft and Cam. Assembly. Amend note in remarks column by adding:- "Engine No. HB27986E".	
		514954. Mainshaft and Cam. Assembly. Amend note in remarks column by adding:- "Engine'No. HB27986E".	
		513997. Spring, set, advance weight. Amend note in remarks column by adding:- "Engine No. HB27986E".	
		514002. Spring, set advance weight. Amend note in remarks column by adding:- "Engine No. HB27986E".	
53.	Electrical Equipment	134891. Arm Clamp Assembly. Amend part number to read:- 511862.	

Page No.	Section	Nature of Modification	
54.	Electrical Equipment	200535. Starter Motor. Add in remarks column:- "Lucas No. 25022 or 25079B".	
54.	Electrical Equipment	501714. Aramture Assembly. 500972. Bush, driving end bracket. 501704. Cap, shaft end. 500892. Pinion and Sleeve Assembly. 501709. Nut, locating. Against above items add in remarks column:- "For use with Lucas 25022 only".	1. 1. 1. 1.
54.	Electrical Equipment	Add the following new details:- 514026. Armature. 514025. Bushing and bearing. 514023. Sleeve, screwed. 511290. Cup, shaft. Add in remarks column:- "For use with Lucas No. 25079B only".	1. 1. 1.
54.	Electrical Equipment	509308. Bracket Assembly driving end (less Bush) Add in remarks column:- "For Lucas No. 22716 A to H only". Add the following new details:- 515590. Bracket Assembly Driving End (Less Bush) 515591. Plate retaining drive end bearing. 515592. Circlip. 515593. O Ring (Oil Seal) Add in remarks column against the above items:- "For use with Lucas No. 22716 J".	1. 1. 1. 1.
56.	Electrical Equipment	Add the following new details:- 146712. Horn, super post R.H. 146713. Horn, super post L.H. (Fitted as a pair). Add in remarks column:- "Alternative to 209250 and 209251".	1. 1.
57.	Electrical Equipment	 130034. Wiper Arm. R. H. S. 130035. Wiper Arm. L. H. S. 130036. Wiper Blade. Delete the note in remarks column against the above item. 130034. (Tex) Wiper Arm. R. H. S. 130035. (Tex) Wiper Arm. L. H. S. Delete the above items from the catalogue and amend note in remarks column against Wiper Blade part number 130036 (Tex) to read:- Alternative fitment to 130036 Wiper Blade listed above. 	2. 2. 2. 2.
59.	Electrical Equipment	305574. Headlamp Assembly, Outer, Sweden. 511612. Light Unit. Against the above items add note in remarks column:- "Fitted up to Commission Noonly".	2. 2.
59. \$	Electrical Equipment	Add the following new detail:- 515739. Headlamp Assembly, Outer, Sweden. 515737. Light Unit. Add in remarks column:- "Fitted from Commission Noto Commission Noto	2. 2.

Page No.	Section	Nature of Modification	
59.	Electrical Equipment	305575. Headlamp Assembly, Outer, Sweden. 511610. Light Unit. Add in remarks column:- "Fitted from Commission Noand future".	2. 2.
62.	Electrical Equipment	Part No. 121400 to Part No. 508546 inclusive:- Amend note in remarks column to read as follows:- All countries except U.S.A. and Canada. "Fitted up to Commission No. HB25738 and intermittant from HB25739 up to HB26126 only". U.S.A. and Canada. "Fitted up to Commission No. HB26353 only".	
63.	Electrical Equipment	WP0004. Washer, plain. FC2803. Nut, spire. Bracket together and add in remarks column:- "Fitted up to Commission No. HB26289 only".	8. 8.
63.	Electrical Equipment	FC2803/9. Nut, spire. WP0004. Washer, plain. YF7306. Set, screw. Amend note in remarks column to read:- "Only required when stop tail flasher lamps without studs in base are fitted".	8. 8. 8.
		Add the following new details:- WM0055. Washer, plain. WL0205. Washer, lock. HN2005. Nut. Add note in remarks column:- "Only required when stop tail flasher lamps without sutds in base are fitted".	8. 8. 8.
64.	Electrical Equipment	606241. Courtesey light switch. Delete line in remarks column.	
64.	Electrical Equipment	616242. Courtesey Light Switch. Delete line completely.	
65.	Electrical Equipment	139529. Stop light switch. Amend part number to read:- 134529.	1.
66.	Electrical Equipment	116012. Battery, dry. (Export) Add in remarks column:- "Fitted up to Commission No. HB27413 only".	1.
66.	Electrical Equipment	Add the following new detail:- 514124. Battery, dry. Add in remarks column:- "Fitted from Commission No. HB27414 and future". (Not Canadian Market)	1.
		Add the following new detail:- 515189. Battery dry. (Exide) Add in remarks column:- Alternative to 514124. Battery dry. (Lucas)	1. 1.
67.	Electrical Equipment	601847. Bracket speedo cable R. H. S. Add in remarks column:- "Vitesse models only".	1.
	— 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 -	614690. Clip, cable. Amend quantity to read:- l off. Add in remarks column:- Vitesse Models Only.	2.

Page No.	Section	Nature of Modification	
67.	Electrical Equipment	Add the following new details:- 614690. Clip cable L. H. S. only. 551490. Clip cable R. H. S. only. Add in remarks column:- "Vitesse 2 litre models only".	1.
68.	Electrical Equipment	128027. Washer. Delete the above item.	1.
68.	Electrical Equipment	Add the following new details:- 618290. Washer, plate (Ignition switch) 619931. Washer, spring (Ignition switch)	1. 1.
69.	Electrical Equipment	128089. Washer. Delete the above item.	1.
		402239. Cable, inner. R. H. S. Amend part number to read: - 402449.	1.
		402337. Cable, outer primary R. H. S. Amend part number to read: 401832.	1.
69.	Electrical Equipment	401816. Cable, outer, secondary R. H. S. Amend part number to read: 402450.	1.
		402341. Cable, inner. L.H.S. Amend part number to read: 402453.	1.
69.	Electrical Equipment	402340. Cable, outer primary L. H. S. Amend part number to read: - 401836.	1.
		401816. Cable, outer, secondary L. H. S. Amend part number to read: - 402450.	1.
69.	Electrical Equipment	Part No. 401831. Cable, inner, to part number 401833. Cable outer secondary L. H. S. only inclusive. Amend note in remarks column to read:- "Fitted from Commission No. HB15001 up to Commission No. HB27985 only".	
69.	Electrical Equipment	Part No. 402449. Cable inner, to part number 402450. Cable, outer, secondary L. H. S. only inclusive. Amend note in remarks column to read:- "Fitted from Commission No. HB27986 and future".	
69.	Electrical Equipment	402449. Cable Inner.) 401832. Cable Outer Primary.) R. H. S. only. 402450. Cable Outer Secondary.)	1. 1. 1.
		402453. Cable Inner.) 401836. Cable Outer Primary.) L. H. S. only. 402450. Cable Outer Secondary. Amend note in remarks column to read:- "Fitted from Commission No. HB27986E up to Commission No	1. 1. 1.
69.	Electrical Equipment	117400. Sleeve, connecting. FX3203. Clip locking. 704873. Knob. Bracket above items together and add in remarks column:- "Fitted up to Commission Noonly".	1. 2. 1.

Page No. :	Section	Nature of Modification	
69.	Electrical Equipment	610573. Clip securing knob. 616050. Washer P. V. C. Amend note in remarks column to read:- "Fitted from Commission No. HB15001 up to Commission Noonly".	
69.	Electrical Equipment	61917. Grommet choke cable. Add in remarks column:- "Fitted up to Commission Noonly".	
		Add the following new details:- 146821. Cable inner.) 1 146822. Cable outer primary.) L. H. S. 1 146819. Cable outer secondary.)	
		146817Cable inner.) 1 146818. Cable outer primary.) R. H. S. only. 1 146819. Cable outer secondary.) 1	
		117400. Sleeve connecting. 1 FX3203/9. Clip locking. 2 704783. Knob chrome. 1 146987. Chrome bezel. 1 WN0711. Internal S/P washer. 1 515789. Nut, lock. • 61917. Grommet choke cable. 2 Add in remarks column:- "Fitted from Commission No and future".	
70.	Body & Fittings	568042. Amend description to read:- Body complete, painted and trimmed Saloon complete with front seat.	
		568044. Amend description to read:- Body complete, painted and trimmed Convertible l complete with front seat.	
70.	Body & Fittings	Add the following new details:- 570486. Body complete, painged and trimmed less seats (Saloon). 570487. Body complete, painted and trimmed less seats (Convertible).	
71.	Body & Fittings	Add the following new detail:- 903600. Roof Panel Assembly. (Sliding Roof) l Add in remarks column:- (Special Orders).	
73.	Body & Fittings	708548. Support angle rear door seal. L.H.	:.
73.	Body & Fittings	903187. Floor Assembly Rear Saloon. 1 Amend part number to read:- 903184.	
73.	Body & Fittings		 -
			 -

Page No.	Section	Nature of Modification	
73.	Body & Fittings	612073. Plate tapped safety harness fixing. Add in remarks column:- "Fitted up to Commission Noonly".	2.
		Add the following new details:- 610668. Angle support squab side. L. H. 610669. Angle support squab side. R. H. 802839. Panel wheelarch inner. L. H. 802840. Panel wheelarch inner. R. H. Add in remarks column:- Convertible Cnly.	1. 1. 1.
		621112. Plate Assembly, safety harness wheelarch. 615980. Plate tapped safety harness fixing. Add in remarks column:- "Fitted from Commission Noand future".	1. 1.
74.	Body & Fittings	YH8506. Screw, S/T. Gearbox cover to dash side. front lower and front floor. Add in remarks column:- "Fitted up to Commission Noonly".	10.
		Add the following new detail:- YH6507. Screw, S/T. Add in remarks column:- "Fitted from Commission Noand future".	12.
75.	Body & Fittings	601553. Angle battery, retaining. 607847. Rod, battery fixing. Bracket above together and add in remarks column:- "Fitted up to Commission No. HB27413 only". (Not Canadian Markets).	1. 2.
75.	Body & Fittings	Add the following new details:- 142087. Angle, battery, retaining. 618434. Rod, battery fixing. Bracket together and add in remarks column:- "Fitted from Commission No. HB27414 and future".	1. 2.
75.	Body & Fittings	602053. Rubber battery. Add in remarks column:- "Fitted up to Commission Noonly".	1.
		Add the following new detail:- 613155. Rubber pad, battery. Add in remarks column:- "Fitted from Commission Noand future". May be used for all replacements.	1.
78.	Body & Fittings	705803. Finisher seal, roof to deck. 613957. Finisher seal, roof to deck. Delete body notes in remarks column and add:- Alternative fitment.	2.
78.	Body & Fittings	902289. Roof Panel Assembly. Amend part number to read: - 903083.	
79.	Body & Fittings	WF0504. Washer, fibre. Amend part number to read:- 618955.	2.
80.	Body & Fittings	WM0067. Washer, medium. Amend quantity to read:- 4 off.	2.
80.	Body & Fittings	HU0706. Screw, set. Alter part number to read: - HU0708.	2.

Page No.	Section	Nature of Modification	
80.	Body & Fittings	HU0706. Setscrew. Anchor brackets to wheelarch amend part number to read:- HU0705.	8.
		HU0706. Setscrew. Anchor brackets front to wheelarch amend part number to read:- HU0705.	2.
82.	Body & Fittings	806607. Valance Panel Assembly. L. H. Amend note in remarks column to read:- "Fitted up to Commission No. HB26149 only".	1.
82.	Body & Fittings	808954. Valance Panel Assembly. R. H. Amend note in remarks column to read:- "Fitted from Commission No. HB26150 and future".	1.
86.	Body & Fittings	YF7503. Screw, S/T. remote control to door. Alter part number to read:- YZ3504.	6.
86.	Body & Fittings	567024. E clip, securing push button in handle. Add note in remarks column:- Alternative fitment to WM0705.	2.
86.	Body & Fittings	Add the following new detail:- WN0705. Washer, shakeproof. Add note in remarks column:- "Alternative fitment to 567024.	2.
86.	Body & Fittings	YL5506. Screw, fitted in remote control. (Drivers side) YA0403. Screw, fitted in remote control. (Drivers side) Delete the above lines and note in remarks column from the catalogue.	1. 1.
		Add the following new detail:- PC0062. Pin, split in remote control.	1.
88.	Body & Fittings	FJ2444/9. Nut, fix. Add in remarks column:- "Fitted up to Body Noonly".	4.
		903899. Panel Veneered Assembly Facia. L. H. S. 903990. Panel Veneered Assembly Facia. R. H. S. 56994. Panel Veneered Assembly Facia. L. H. S. (U. S. A. and Canada). Amend note in remarks column to read:- "Fitted from Body No. HB15001 up to Body No	1. 1. 1. only".
		705451. Lid cubby box. R. H. S. 705450. Lid cubby box. L. H. S. Add note in remarks column:- " "Fitted up to Body Noonly".	1.
		Part No. 611565 to Part No. TW0604. inclusive. Bracket together and add in remarks column:- "Fitted up to Commission Noonly".	
88.	Body & Fittings	Add the following new details:- 905201. Panel Veneered Assembly Facia. L. H. S. 905202. Panel Veneered Assembly Facia. R. H. S. 573447. Panel Veneered Assembly Facia. L. H. S. (U. S. A. and Canada). Add note in remarks column to read:- "Fitted from Body Noand future".	1. 1. 1.

Page No.	Section	Nature of Modification	
88.	Body & Fittings	710446. Veneered lid cubby box. L. H. S. 710447. Veneered lid cubby box. R. H. S. 619419. Hinge Assembly cubby box lid. TW0403. Woodscrew, countersunk head. Add note in remarks column:- "Fitted from Body Noand future".	1. 1. 1. 8.
90.	Body & Fittings	Add the following new detail:- 906706. Windscreen glass laminated high impact interlayer. Add in remarks column:- "For U.S.A. only".	1.
93.	Body & Fittings	122751. Adaptor, cylinder head. Add in remarks column:- "Fitted up to Body Noand future".	1.
93.	Body & Fittings	Add the following new details to follow part number 806359. 515803. Motor Unit, complete with runner.	1.
94.	Body & Fittings	101343. Adaptor, water pump body. Add in remarks column:- "Fitted up to Body No. HB27985 only".	1.
94.	Body & Fittings	305588. Pipe water return assembly heater. Add in remarks column:- "Fitted up to Body No. HB27985 only".	1.
		Add the following new details:- 101302. Tubing nut. TL0011. Tubing sleeve. Add in remarks column:- "Fitted up to Body No. HB27985 only".	1.
96.	Body & Fittings	Add the following new detail:- 571380. Backlight glass (Heated) Add in remarks column:- "Special Orders Only".	1.
96.	Body & Fittings	611439. Finisher weatherstrip quarterlight (Aluminium) 614406. Finisher weatherstrip quarterlight (Plastic) Delete body notes from remarks column and add:-Alternative fitment.	2. 2.
97.	Body & Fittings	703877. Bracket stay mounting. Add in remarks column:- "When stocks are exhausted use 618192".	1.
97.	Body & Fittings	Add the following new details:- 618192. Bracket Assembly Stay Mounting. Add in remarks column:- "Fitted from Body No. HB26700 and future". May be used for all replacements.	1.
		608237. Pin, pivot. Add in remarks column:- "For use with 703877 Bracket Assembly only".	1.
97.	Body & Fittings	Add the following new detail:- 618193. Pin, Pivot. Add in remarks column:- "For use with 618192 Bracket Assembly Only".	1.

1. 1. 1. 6. 1. 1. 1. 1. 24.
2.
1. 1. 1.
1.
1.
1.
1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1.

Page No.	Section	Nature of Modification	
106.	Body & Fittings	Add the following new details:- 711682. (Matador (L. H. 711692. (Red. (R. H.	1. 1.
		711681. Quarter. (Black. (L. H. 711691. (R. H.	1. 1.
		711686. Pocket. (Midnight (L. H. 711696. (Blue. (R. H.	1. 1.
		711685. Assembly (Cactus. (L. H. 711695. Assembly) (R. H. Add in remarks column: ~	1. 1.
107.	Body & Fittings	565293. Capping quarter R. H. 565292. Capping quarter L. H. Add in remarks column:- "Fitted up to Commission Noonly".	1. 1.
		Add the following new details:- 811593. Capping quarter R.H. 811592. Capping quarter L.H. Add in remarks column:- "Fitted from Commission Noand future".	1. 1.
111.	Body & Fittings	HU0808P. Bolt. HU0812P. Bolt. Seat slides to floor convertible only. Amend part number to read:- HU0808D. Bolt. HU0812D. Bolt.	4. 4. 4.
116.	Miscellaneous Body & Fittings	Add the following new details:- 511102. Screw set. (Safety harness) 510065. Washer, plain. (to) 503438. Washer, lock. (waist cappings.)	4. 4.
		510254. Screw, set. (Safety harness) 503438. Washer, lock. (to) 510065. Washer, plain. (rear floor.)	2. 2. 2.
		612531. Eye bolt. () 615970. Washer, plate and nut. (U.S.A.) 550960. Rivet. (U.S.A.) WL0210. Washer, lock. () 511654. Washer, plain. () Add in remarks column:- "Fitted up to Commission Noonly".	4. 4. 8. 4. 4.
116.	Miscellaneous Body & Fittings	Add the following new details:- 621308. Eye Bolt. WQ0310. Washer, lock. 616009. Pivot, bolt. 621372. Spacer Pivot Bolt. 621374. Washer waved. Add in remarks column:- "Fitted from Commission Noand future".	4. 4. 2. 2. 2.
117.	Accessories	Add the following new details:- 569116. Cigarette Lighter.	1.
117.	Accessories	122744. Thermostat Unit. (Winter Setting) Amend note in remarks column to read:- "Fitted up to Commission No. HB23300 only". For future use see Page 9.	1.

ī	Page No.	Section	Nature of Modification	â
	117.	Accessories	Add the following new detail:- 515448. Filter link, fuel pipe.	1.
	118.	Accessories	512581. Oil pressure gauge kit. lbs/sq/in. Amend part number to read:- 514833.	1.
			512582. Oil pressure gauge kit. Metric. Amend part number to read:- 514834.	1.
			138477. Pipe Oil Assembly. Amend part number to read:- 134944.	1.
			138476. Adaptor. Amend part number to read:- 143943.	1.
	118.	Accessories	Add the following new details:- 143167. Harness eye bolt, mounting bracket assembly. 615970. Washer Assembly. 612531. Eye Bolt. WL0210. Washer, lock. 550960. Rivet, pop. 511654. Washer, plain. Add in remarks column:- "Fitted from Commission No	2. 2. 4. 4. 4.
	118.	Accessories	143167. Eye Bolt, mounting bracket assembly. 615970. Washer Assembly. 612531. Eye Bolt. WL0210. Lock Washer. 550960. Pop rivet. 511654. Washer, plain. Amend note in remarks column to read:- "Fitted up to Commission Noonly". (For Franconly) See Page 116 for future.	2. 2. 4. 4. 4. 4.
	119.	Accessories	Add the following new detail:- 510250. Repair Kit. (Slave Cylinder)	1.
	122.	Overdrive	513197. Front Casing Assembly. Add in remarks column:- "For use with unit 25/3316".	1.
	122.	Overdrive	138926. Operating valve. Add in remarks column:- "For use with unit 25/3330".	1.
	122.	Overdrive	513192. Body Assembly, Non-Return valve. Add in remarks column:- "Fitted up to Gearbox No. 25/5009 only".	1.
	122.	Overdrive	Add the following new details:- 514836. Front Casing Assembly. Add in remarks column:- "For use with unit 25/3330".	1.
	122.	Overdrive	513218. Valve, opening. Add in remarks column:- "For use with unit 25/3316".	1.
			Note: Front casing 514836. Operating Valve 138926 If fitted together may be used for all replacements.	

MODEL. TRIUMPH VITESSE. CAT. NO. 511408. (2nd Edition).

Accumulative Amendment No. 8

Page No.	Section	Nature of Modification	
122.	Overdrive	Add the following new details:- 513207. Spring. 514888. Body. 514889. Support, pin. BL0014. Steel, ball. Add in remarks column:- "Fitted from Gearbox No. 25/5010".	1. 1. 1.